

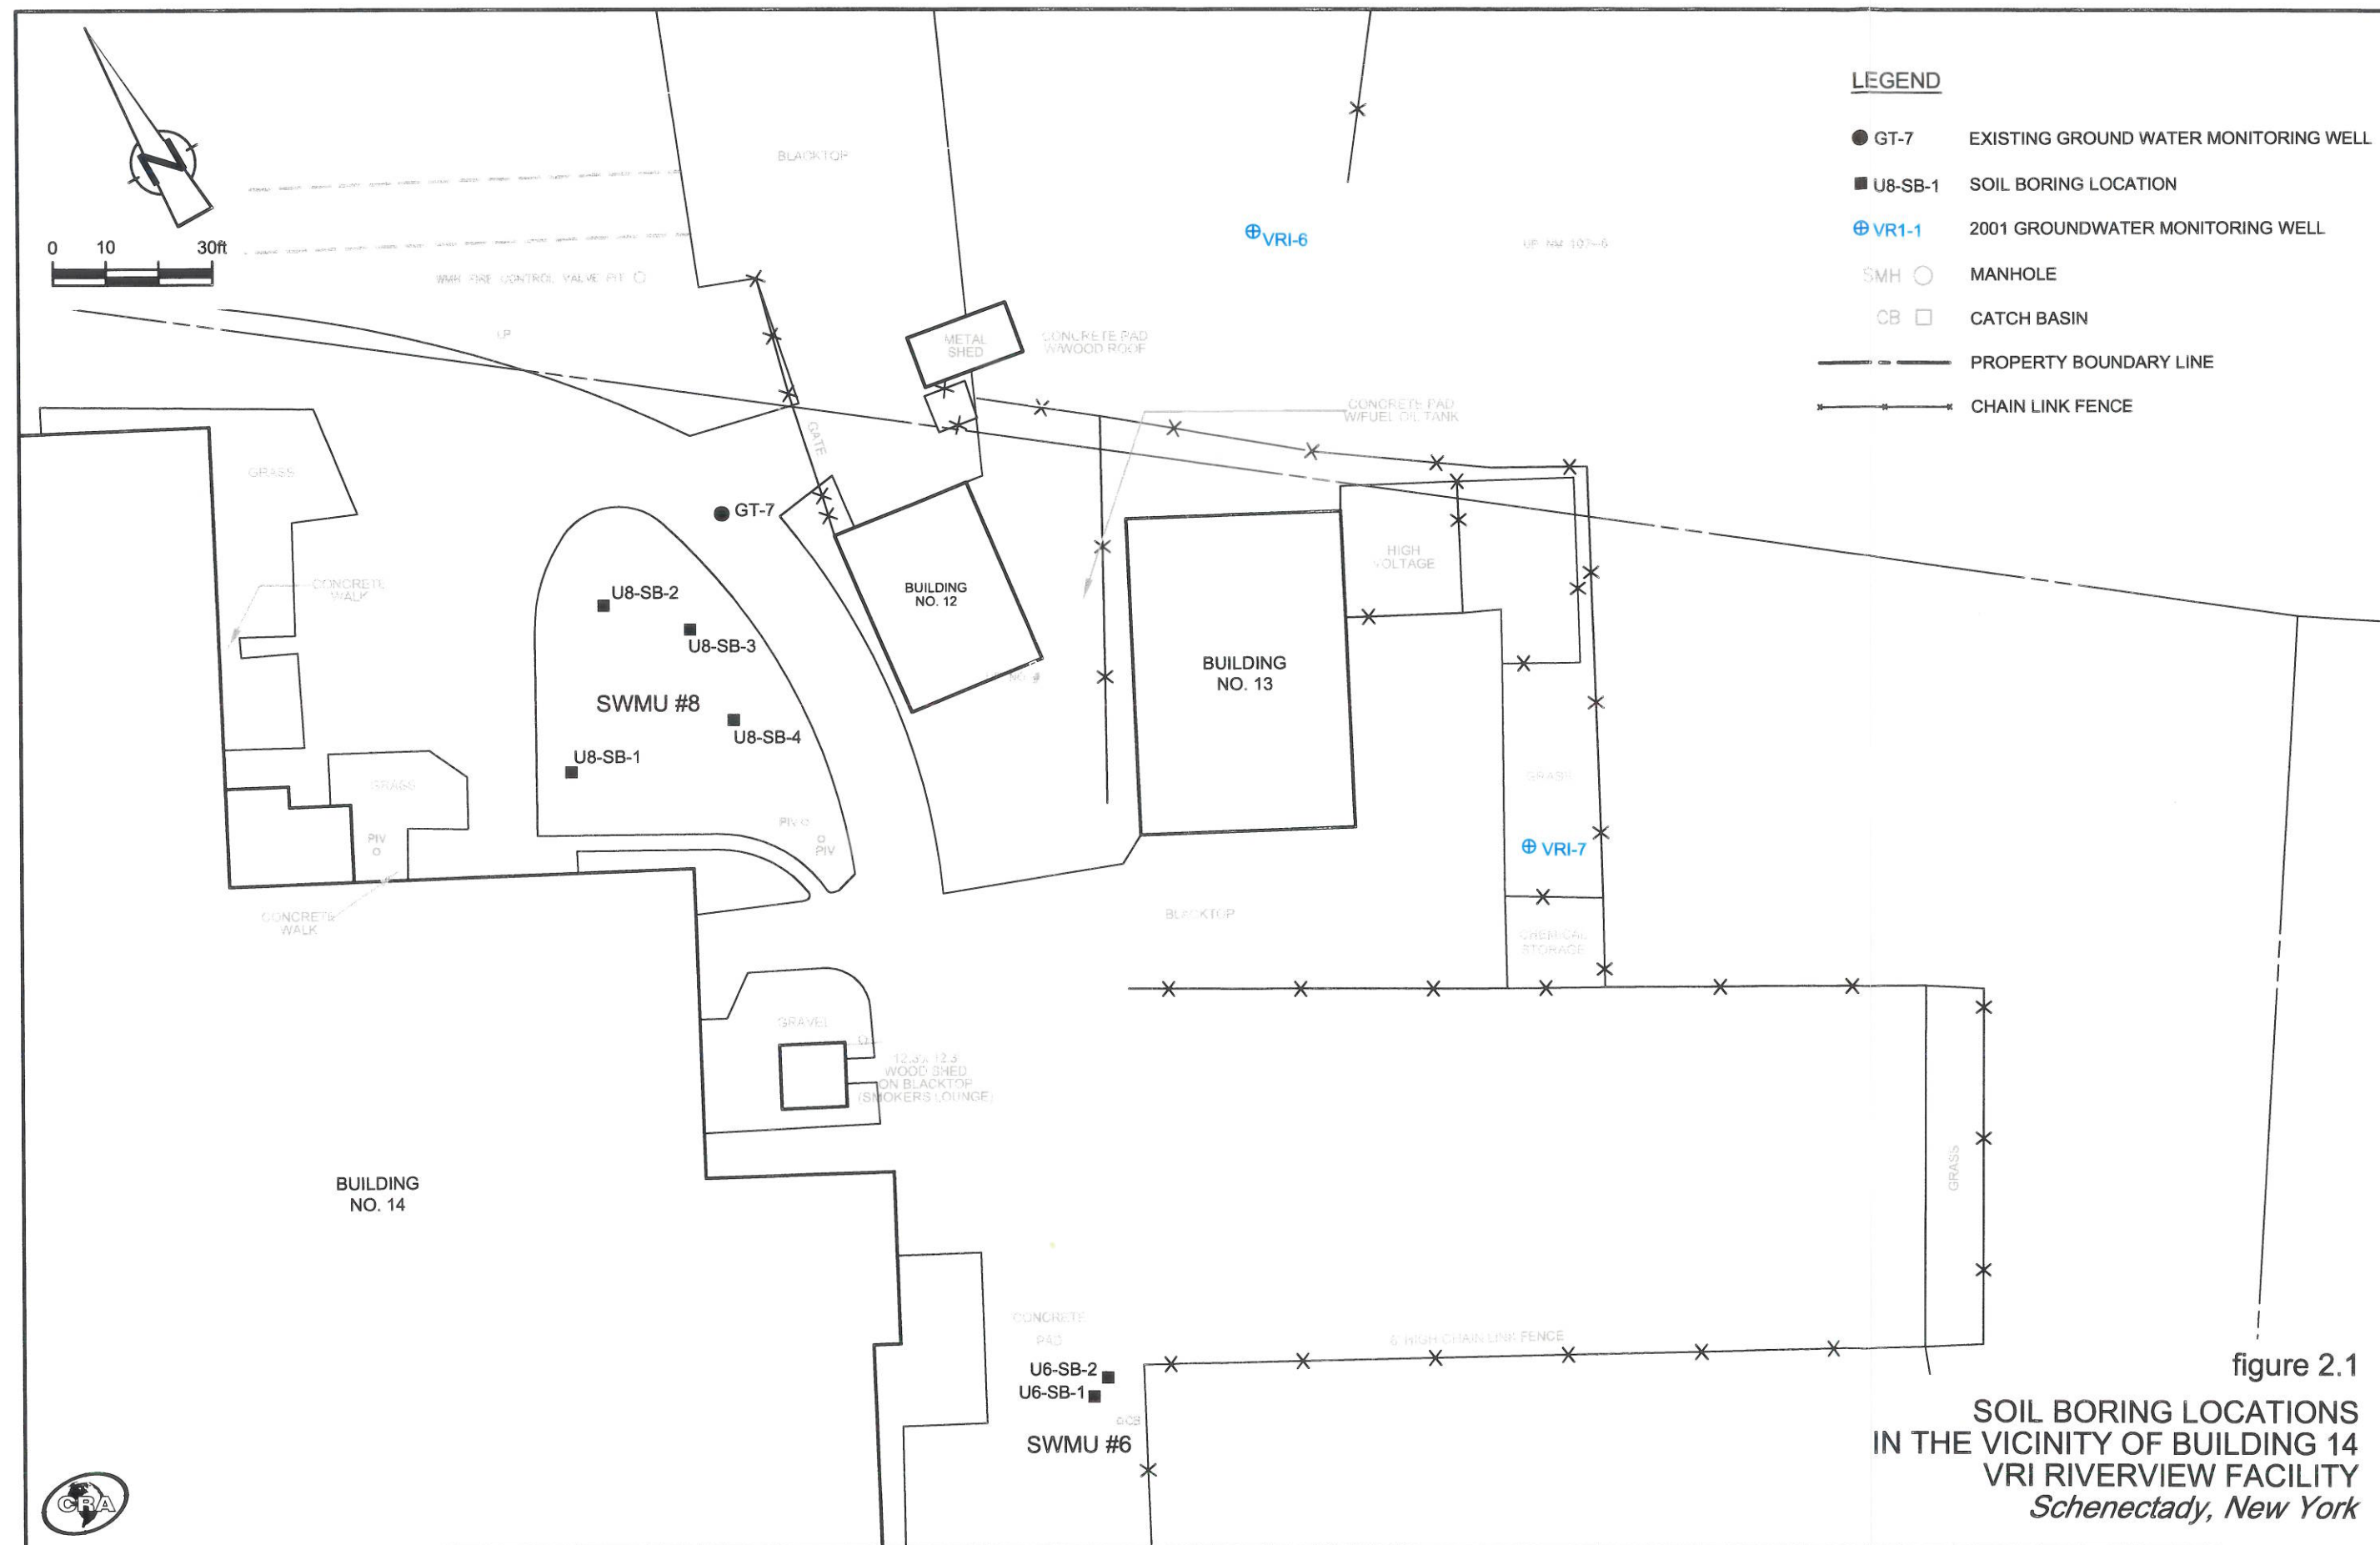
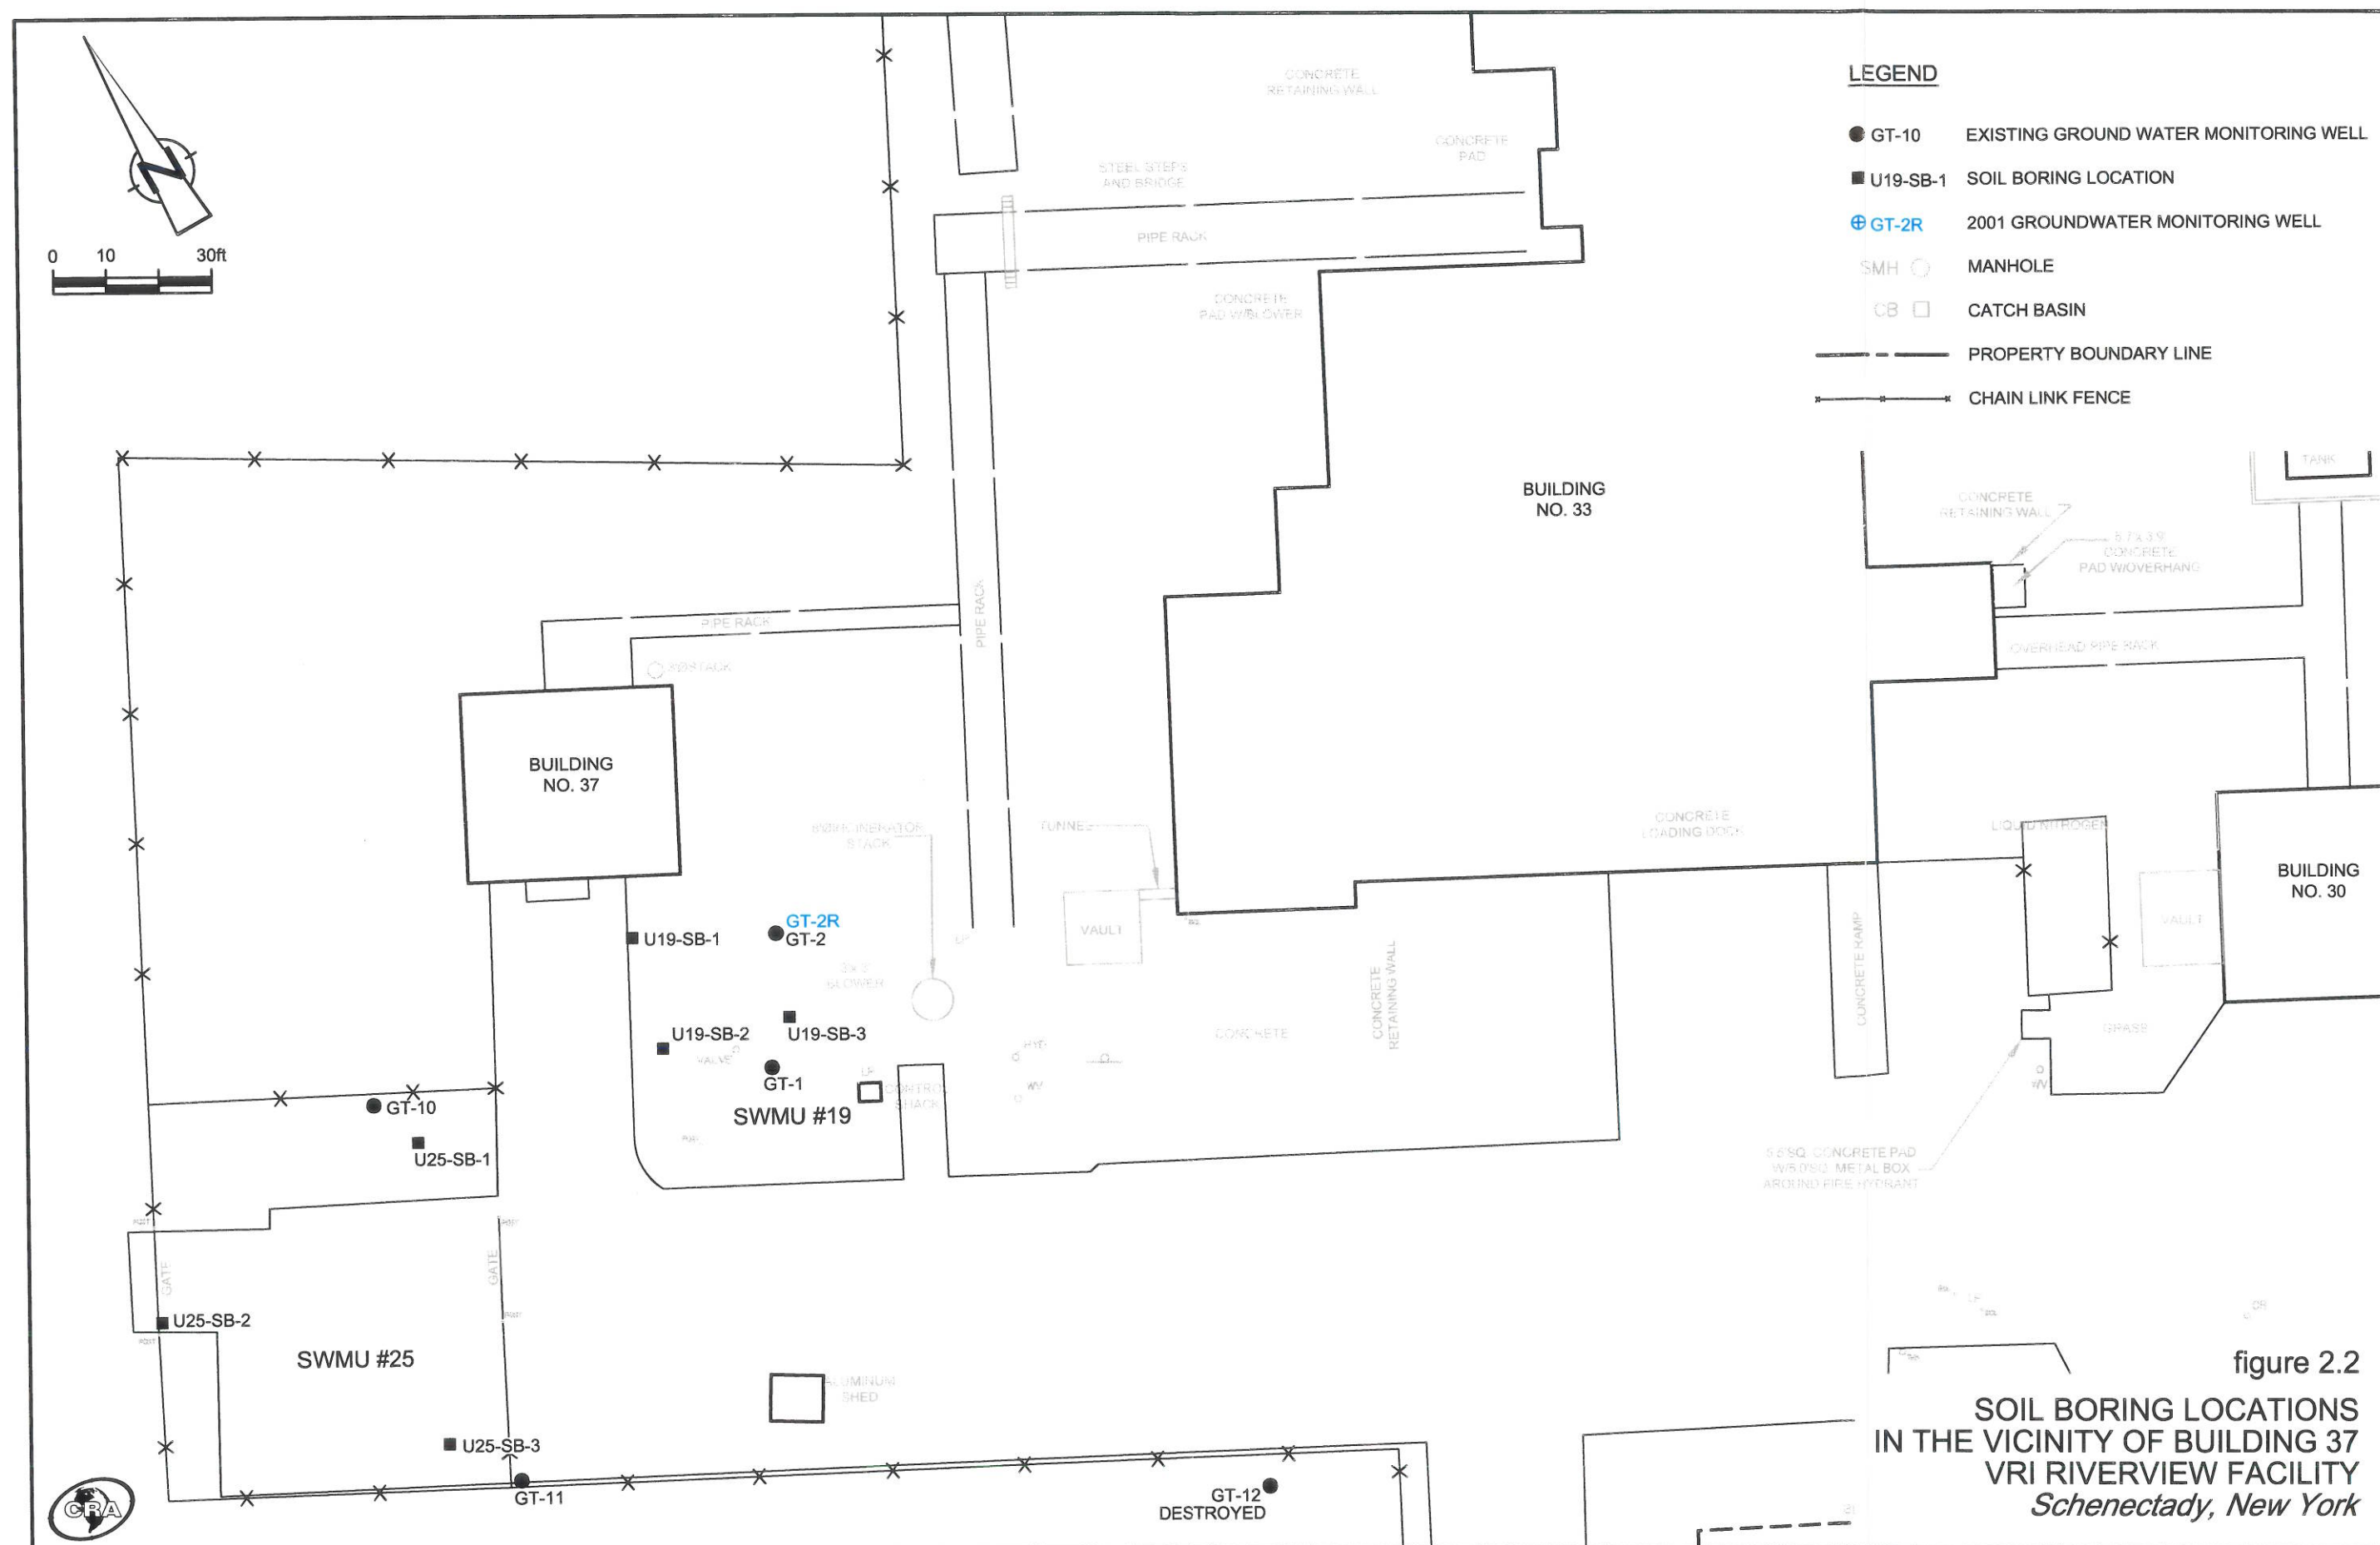
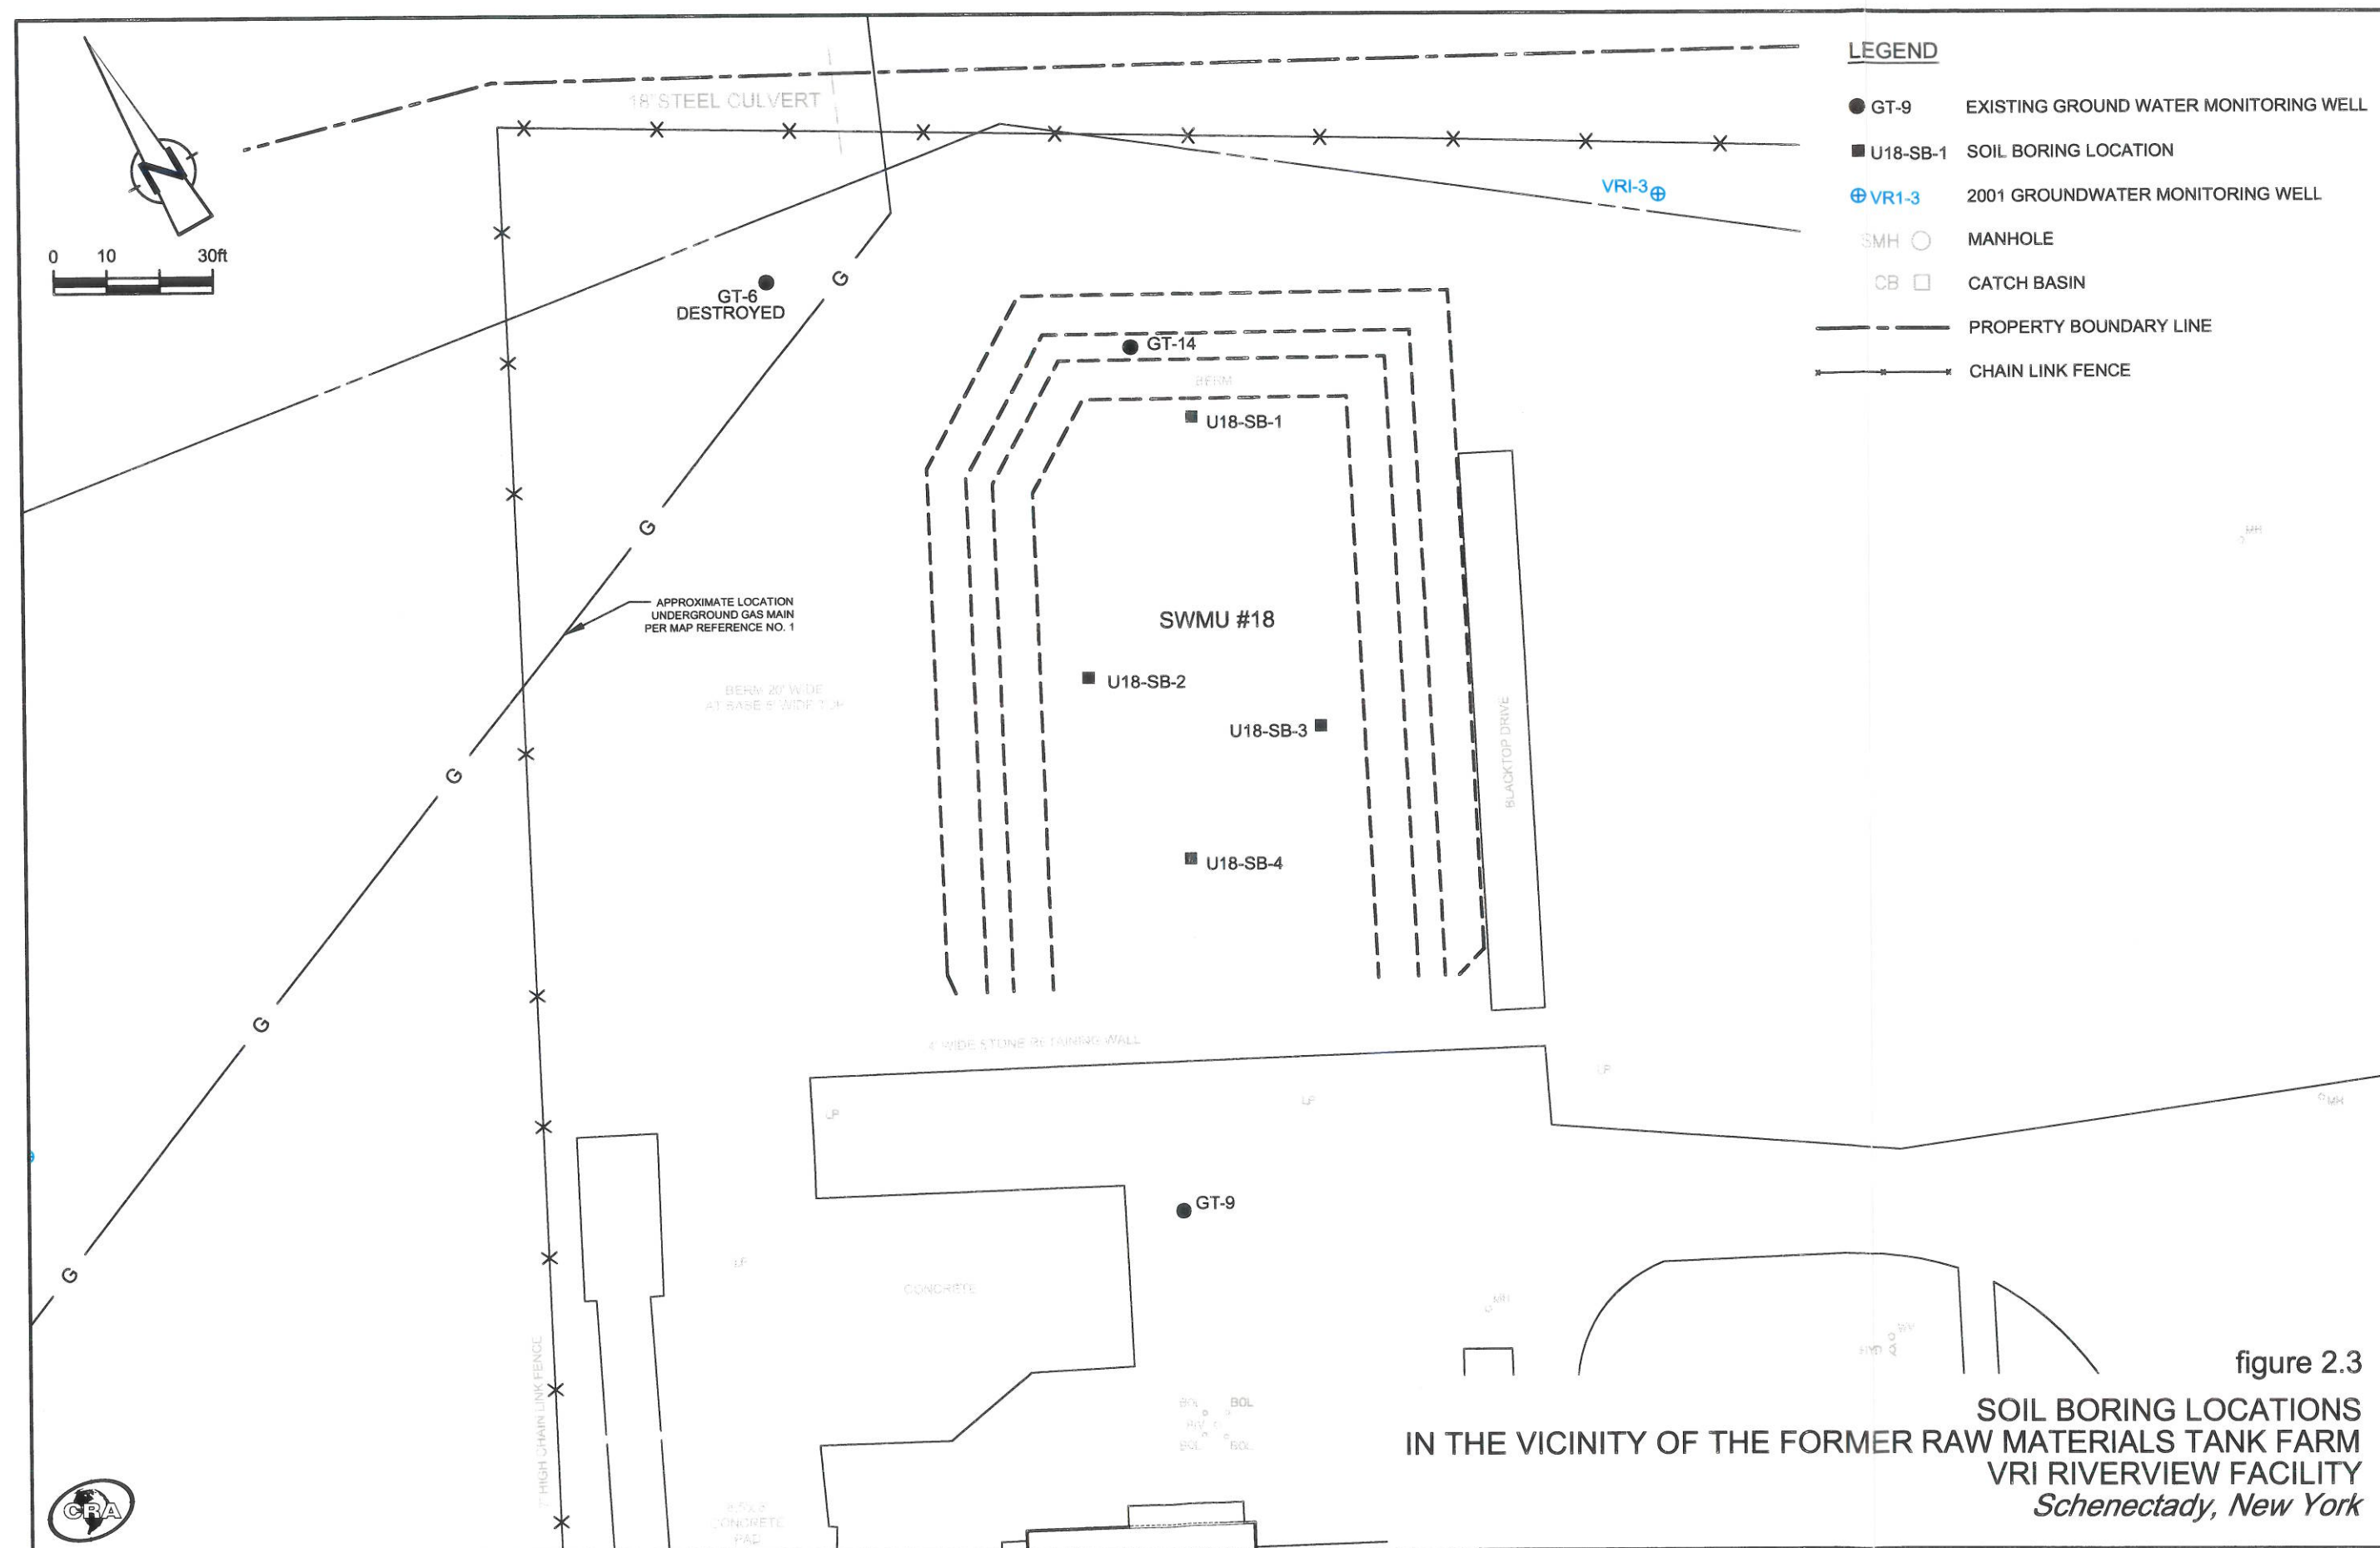


figure 2.1
**SOIL BORING LOCATIONS
 IN THE VICINITY OF BUILDING 14
 VRI RIVERVIEW FACILITY
 Schenectady, New York**







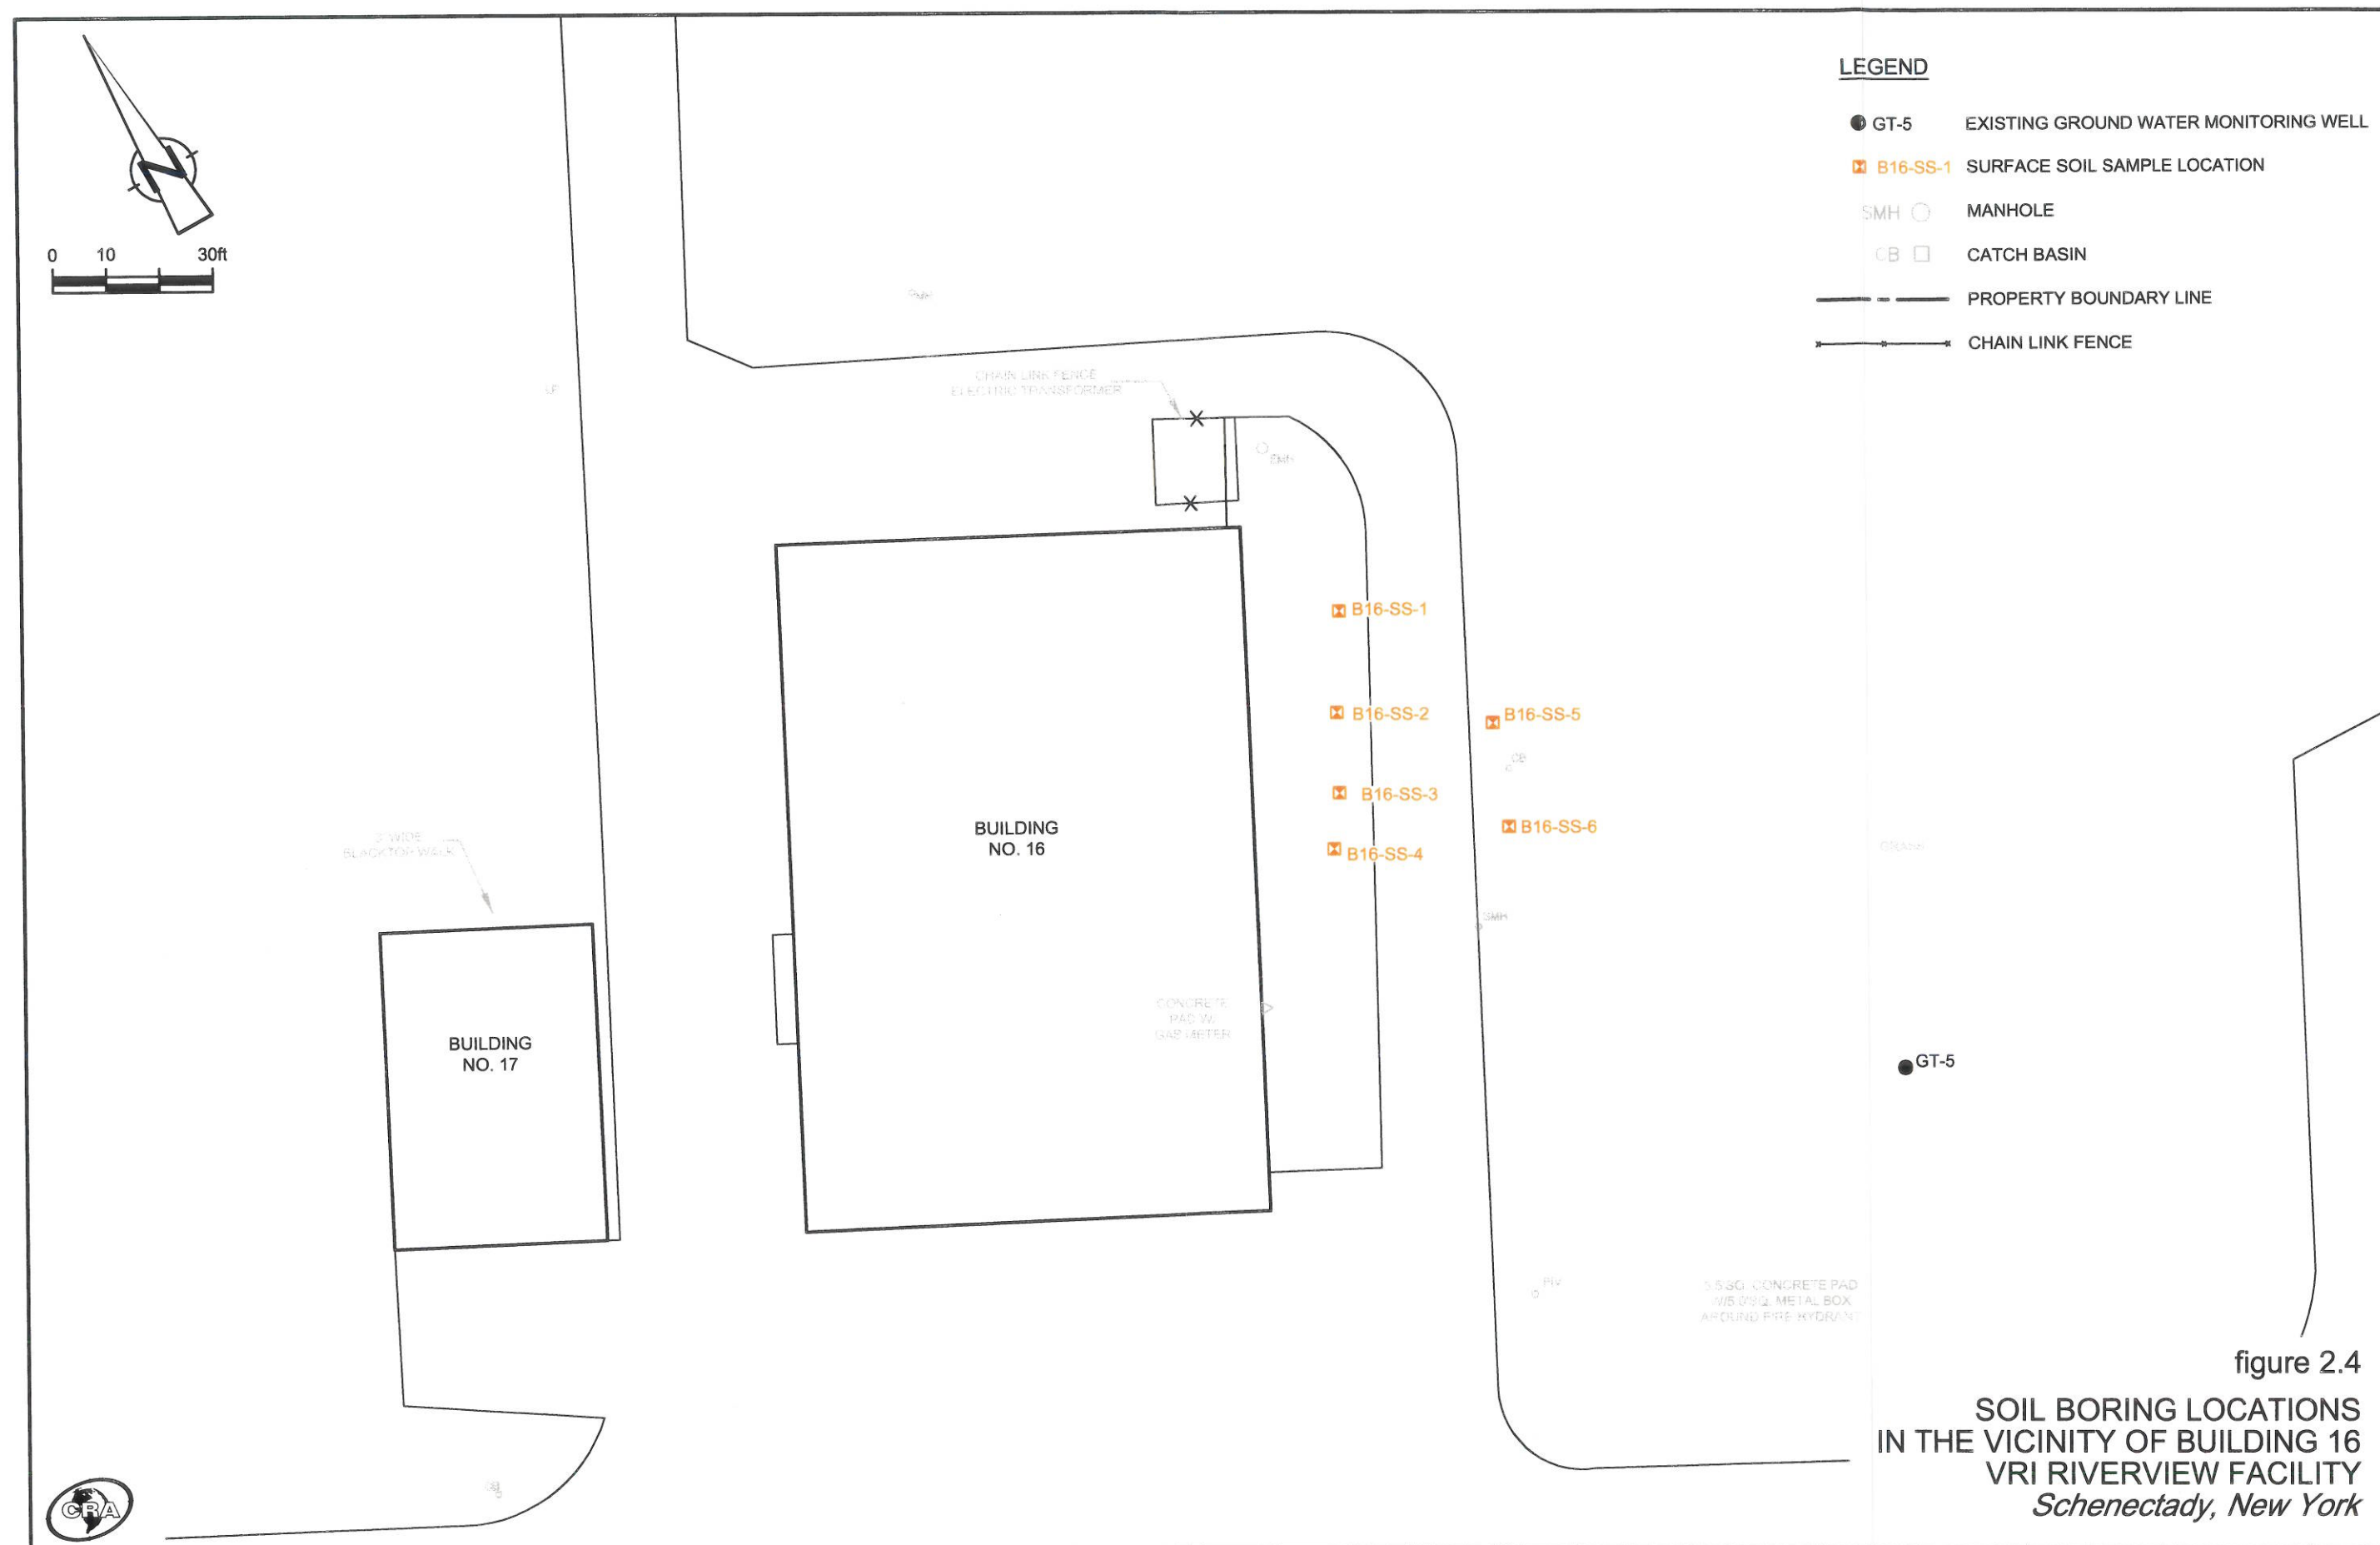


figure 2.4
 SOIL BORING LOCATIONS
 IN THE VICINITY OF BUILDING 16
 VRI RIVERVIEW FACILITY
Schenectady, New York



