
INTERIM REMEDIAL MEASURE WORK PLAN

for

**2409 JEROME AVENUE
Bronx, New York
BCP Site No. C203087**

Prepared For:

**2409 Jerome, Inc.
29 East Fordham Road
Bronx, NY 10468**

Prepared By:

**Langan Engineering, Environmental, Surveying
Landscape Architecture and Geology, D.P.C.
21 Penn Plaza
360 West 31st Street, 8th Floor
New York, New York 10001**

**October 1, 2021
Langan Project No. 170390601**

LANGAN

TABLE OF CONTENTS

1.0	INTRODUCTION.....	1
1.1	General.....	1
1.2	Site Description	2
1.3	Redevelopment Plan.....	3
1.4	Site History.....	3
1.5	Summary of Remedial Investigation Report Findings.....	3
2.0	SUMMARY OF INTERIM REMEDIAL MEASURES.....	5
2.1	Community Air Monitoring Plan	6
2.2	Concrete Slab Demolition	6
2.3	Decommissioning of Underground Storage Tank.....	6
2.4	Excavation of Historic Fill and Soil.....	7
2.5	Post-Excavation Documentation Endpoint Soil Sampling	7
2.6	Waste Characterization.....	8
2.7	Excavation Backfill	8
2.8	Composite Cover System Restoration	10
3.0	MANAGEMENT OF INTERIM REMEDIAL MEASURES	11
3.1	Remedial Activity Oversight.....	11
3.2	Site Preparation	11
3.3	Soil Screening Methods.....	12
3.4	Solid Waste Management	12
3.5	Stockpile Methods.....	12
3.6	Material Load Out, Transportation, and Off-Site Disposal	13
3.7	Material Reuse On-Site.....	13
3.8	Particulate Matter, Odor, Vapor and Nuisance Control Plan	14
3.9	Spill/Release Contingency Procedures.....	18
3.10	Demobilization and Decontamination.....	19
3.11	Health and Safety Plan.....	19
3.12	Quality Assurance Project Plan	20
3.13	Notification	20
4.0	REPORTING.....	21

4.1	Daily Reports	21
4.2	Monthly Progress Reports	21
4.3	Construction Completion Report	21
5.0	CERTIFICATION.....	23

FIGURES

- Figure 1: Site Location Map
- Figure 2: Site Plan
- Figure 3: Excavation and Documentation Sample Location Plan

APPENDICES

- Appendix A: Interim Remedial Measure Schedule
- Appendix B: Health and Safety Plan
- Appendix C: Quality Assurance Project Plan
- Appendix D: Community Air Monitoring Plan

1.0 INTRODUCTION

1.1 General

2409 Jerome, Inc. (the Participant) entered into a Brownfield Cleanup Agreement (BCA) with the New York State Department of Environmental Conservation (NYSDEC) on April 3, 2017 to investigate and remediate an approximately 25,000-square-foot property located at 2409 Jerome Avenue (Block 3199, Lots 106 and 113) in the Fordham Heights neighborhood of the Bronx, New York (the "Site").

This Interim Remedial Measure (IRM) Work Plan is based on the results of the Remedial Investigation (RI) and summarizes the proposed remedial actions to be taken in connection with removal of an out-of-service 550-gallon waste oil underground storage tank (UST) identified as a petroleum source area at the Site. The waste oil tank is associated with petroleum bulk storage (PBS) registration # 2-188492. The scope of this IRM Work Plan includes the following:

- Development and implementation of a Community Air Monitoring Plan (CAMP) for the protection of on-site remediation workers and the community during remedial activities.
- Removal of the concrete surface cover above the waste oil UST in the auto repair shop by a licensed tank contractor and management of the waste concrete as construction and demolition (C&D) debris in accordance with Part 360 and 361 regulations.
- Decommissioning and removal and/or abandonment of the 550-gallon waste oil UST by a licensed tank contractor in accordance with DER-10 and 6 New York Codes, Rules, and Regulations (NYCRR) Parts 612-614;
- Excavation and off-site disposal of any historic fill or soil excavated in connection with the tank removal, and removal of grossly-impacted soil, if present and as practical. Grossly-impacted soil that cannot be safely removed will be left in-place and managed under the NYSDEC-approved Interim Site Management Plan (iSMP) until the remedial action is implemented;
- Screening of excavated historic fill and soil for indication of a chemical or petroleum release by visual and olfactory means and with a photoionization detector (PID);
- Placement of a demarcation barrier at the base of the excavation;
- Collection of documentation endpoint soil samples from the base and sidewalls of the excavation following tank removal; the collection of documentation endpoint soil samples would be impractical if the tank is abandoned-in-place;
- Waste characterization sampling of the excavated historic fill or soil prior to off-site disposal;

- Backfilling the excavation with crushed aggregate from a virgin source and/or clean fill meeting the lower of the NYCRR Part 375-6.8(b) Restricted Use Commercial (CU) and Protection of Groundwater (PGW) Soil Cleanup Objectives (SCO); and
- Restoring the concrete surface cover system inside the auto repair shop.

This IRM Work Plan has been prepared in accordance with requirements of the New York State Brownfield Cleanup Program (BCP) and NYSDEC's May 2010 Division of Environmental Remediation (DER)-10 - Technical Guidance for Site Investigation and Remediation. The IRM will be completed in advance of completing a final remedy in accordance with the definition of an IRM (May 2010 DER-10):

***"Interim remedial measure" or "IRM"** means activities to address both emergency and non-emergency site conditions, which can be undertaken without extensive investigation and evaluation, to prevent, mitigate or remedy environmental damage or the consequences of environmental damage attributable to a site, including, but not limited to, the following activities: construction of diversion ditches; collection systems; drum removal; leachate collection systems; construction of fences or other barriers; installation of water filters; provision of alternative water systems; the removal of source areas; or plume control.*

1.2 Site Description

The site (Block 3199, Lots 106 and 113) is located at 2409 Jerome Avenue in the Bronx, New York and encompasses an area of about 25,000 square feet. The property is improved with an asphalt-paved parking lot (Lot 113) and two 1-story structures used for automotive repair (Lot 106). The automotive repair garage is currently active and may be partially occupied during IRM implementation. The site is in an area primarily characterized by mixed commercial and residential use and is bordered by a 2-story commercial building (2415 Jerome Ave) followed by West Fordham Road to the north, Jerome Avenue to the east, three 5-story multifamily residential buildings (2390-2410 Davidson Avenue) followed by Davidson Avenue to the west, and a 2-story academic facility (Ustin Hall) followed by West 184th Street to the south. Topography at the site is generally level and is about elevation (el.) 121 feet NAVD88¹; the surrounding area mostly slopes to the west towards the Harlem River. A site location map and site plan are provided as Figures 1 and 2, respectively.

¹ Datum referenced is the North American Vertical Datum of 1988 (NAVD88) which is approximately 1.1 feet above mean sea level datum at Sandy Hook, New Jersey as defined by the United States Geologic Survey (USGS NGVD 1929) and obtained from a survey completed by Langan in December 2015.

1.3 Redevelopment Plan

The site development plan is presently in the design stage, and will reflect the current zoning designation of R7-1 residential district with a C2-2 commercial overlay.

1.4 Site History

The site was historically used as a fuel dispensing station from 1927 to 1989 and for automotive repair from 1927 to present day. Several PBS tanks are associated with the site: (1) one out-of-service 550-gallon waste oil UST; (2) one in-service 50-gallon transmission fluid aboveground storage tank (AST); (3) 13 closed 550-gallon gasoline USTs; and (4) one closed 4,000-gallon gasoline UST. The closed USTs were decommissioned and removed from the site between 1988 and 1991. The location of the UST in the auto repair shop is shown on Figures 2 and 3.

1.5 Summary of Remedial Investigation Report Findings

Langan completed a Remedial Investigation (RI) in April-May 2018 and two Supplemental Remedial Investigations (SRI) in May 2019 to evaluate identified areas of concern (AOC) in soil, groundwater, and soil vapor with the purpose of developing remedial alternatives for the site. The RI (including both SRIs) consisted of two geophysical surveys, completion of 25 soil borings, installation of 18 permanent groundwater monitoring wells including one well installed to bedrock, installation of 10 soil vapor sampling points, and collection and laboratory analysis of soil, groundwater, soil vapor, and indoor air samples. The findings of the investigation included the following:

- Stratigraphy: The stratigraphy immediately underlying the site cover (i.e., asphalt or concrete) consists of a 1.5- to 12.5-foot thick layer of historic fill composed of varying amounts of sand, silt, gravel, asphalt, concrete, brick, and glass. The historic fill is underlain by native soil consisting of brown fine sand with varying amounts of silt, clay, gravel, and weathered bedrock fragments. Bedrock was encountered between 13.5 and 18 feet below grade surface (bgs).
- Hydrogeology: Synoptic groundwater readings were collected in May 2018 and May 2019. Groundwater elevations ranged between el. 101.72 and el. 107.78 and depth to groundwater ranges from about 4.2 feet bgs and 11.9 feet bgs. Groundwater generally flows to the south and/or southwest.
- Historic Fill: Laboratory analytical results indicated that the historic fill contains volatile organic compounds (VOC), semivolatile organic compounds (SVOC), pesticides and metals at concentrations above the Unrestricted Use (UU), Restricted Use Residential (RURR), and/or Restricted Use Commercial SCOs. SVOCs and metals attributed to historic fill were also identified in groundwater at concentrations above the NYSDEC 1.1.1 Ambient Water Quality Standards and Guidance Values (SGV). SVOCs and

metals detected at concentrations above the NYSDEC SGVs in groundwater are likely related to suspended solids derived from historic fill and/or representative of regional groundwater quality. Dissolved lead detected in groundwater is likely due to suspended solids/particles derived from historic fill that passed through the 0.45 micron filter and/or an unidentified off-site source.

- Petroleum Impacts: Petroleum (gasoline) impacts in soil and groundwater were identified across a majority of the site and extending along the western side of Jerome Avenue. Impacts were attributed to historical releases associated with site use and PBS. Petroleum-related VOCs were also detected in soil vapor across the site. A localized area of petroleum hydraulic oil and waste oil light non-aqueous phase liquid (LNAPL) was identified on-site near the auto repair shop and is likely related to a release from the out-of-service waste oil UST identified in the geophysical surveys.
- Chlorinated Volatile Organic Compound (CVOC) Impacts: CVOCs including cis-1,2-dichloroethene, tetrachloroethylene (PCE), trichloroethylene (TCE), and vinyl chloride were identified in soil, groundwater, and/or soil vapor in on-site media at concentrations above applicable regulatory criteria, guidance values and/or action levels. Contamination was generally confined to the auto repair shop and areas immediately adjacent to the shop. The source of CVOCs in subsurface media is likely related to releases associated with historical and/or current use of the site. No CVOCs were detected in off-site media above applicable regulatory criteria, guidance values and/or action levels with the exception of PCE in one off-site monitoring well, which appeared to originate from an unidentified off-site source and does not affect the site.
- Indoor Air Contamination: Two CVOCs, PCE and TCE, were detected in the indoor air of the auto repair shop and are related to the use of CVOC-containing products (i.e., brake cleaners) in daily operations.
- Off-Site Assessments: The off-site soil vapor and/or indoor air investigations completed at the Davidson Avenue properties, Ustin Hall, and along Jerome Avenue indicated that the on-site petroleum and CVOC contamination has not migrated off-site and adversely affected soil vapor and/or indoor air quality at the adjoining residential and commercial properties. No off-site soil vapor intrusion risk was identified.

2.0 SUMMARY OF INTERIM REMEDIAL MEASURES

The objective of the IRM is to remove a source of petroleum contamination to site media (soil, groundwater, and soil vapor) through decommissioning of the out-of-service waste oil UST and associated piping and appurtenances. The following sections detail the interim remedial measures.

The proposed IRM consists of the following tasks:

- Development and implementation of a CAMP for the protection of on-site remediation workers and the community during remedial activities.
- Removal of the concrete surface cover above the waste oil UST in the auto repair shop by a licensed tank contractor and management of the waste concrete as C&D debris in accordance with Part 360 and 361 regulations.
- Decommissioning and removal and/or abandonment of the 550-gallon waste oil UST (PBS # 2-188492) by a licensed tank contractor in accordance with DER-10 and 6 NYCRR Parts 612-614;
- Excavation and off-site disposal of any historic fill or soil excavated in connection with the tank removal, and removal of grossly-impacted soil, if present and as practical. Grossly-impacted soil that cannot be safely removed will be left in place and managed under the NYSDEC-approved iSMP until the remedial action is implemented;
- Screening of excavated historic fill and soil for indication of a chemical or petroleum release by visual and olfactory means and with a PID;
- Placement of a demarcation barrier at the base and sidewalls of the excavation to assist with future remedial or site management activities;
- Collection of documentation endpoint soil samples from the base and sidewalls of the excavation following tank removal; the collection of documentation endpoint soil samples would be impractical if the tank is abandoned-in-place;
- Waste characterization sampling of the excavated historic fill or soil prior to off-site disposal;
- Backfilling the excavation with crushed aggregate from a virgin source and/or clean fill meeting the lower of the 6 NYCRR Part 375-6.8(b) Restricted Use Commercial and Protection of Groundwater SCOs; and
- Restoring the concrete surface cover system inside the auto repair shop.

The IRM described herein will be performed in accordance with applicable federal, state, and city regulations. An estimated IRM schedule is provided in Appendix A. A Health and Safety Plan (HASP) is provided as Appendix B.

2.1 Community Air Monitoring Plan

Public health will be protected by implementing and enforcing dust, odor, and organic vapor control and monitoring procedures included in the CAMP. The CAMP will include continuous monitoring of dust and organic vapor using aerosol monitors and PIDs capable of recording data during soil excavation, soil export, and clean fill import activities only. A Langan representative will monitor site perimeters for visible dust and odors. A detailed description of CAMP requirements is outlined in Section 3.8.

2.2 Concrete Slab Demolition

As a pre-requisite for the interim remedial activities, the concrete slab above the UST in the auto repair shop will be demolished and removed. In addition, slab removal will enable field screening of sub-slab soil to assess the presence and extent of any grossly-impacted historic fill or soil. Portions of the slab may remain intact and grossly-impacted fill and soil may not be excavated to protect utilities, structural columns, and/or foundation walls.

2.3 Decommissioning of Underground Storage Tank

Removal or abandonment of one 550-gallon UST and associated piping and/or appurtenances is included in this IRM. The NYSDEC will be notified at least 14 days in advance of the UST removal, which will be performed in accordance with NYSDEC DER-10 and 6 NYCRR Parts 612-614.

Tank Removal

If removal is feasible, the UST will be emptied of all contents (including but not limited to liquids, sludges, tank bottoms, etc.), rendered inert, and cleaned before it is transported off-site for recycling as scrap metal or disposal at a waste management facility.

Tank contents will be characterized (if needed for disposal) and removed using a vacuum truck and/or containerized in United Nations/Department of Transportation (UN/DOT)-approved 55-gallon drums prior to off-site disposal to a permitted disposal facility in accordance with applicable rules and regulations.

If petroleum-impacted soil is encountered during UST removal, it will be excavated (to the extent practical), stockpiled, characterized, and disposed of off-site at a permitted disposal facility in accordance with applicable rules and regulations.

Tank Abandonment

The UST will be abandoned with a flowable fill mixture (e.g. concrete slurry mix, geofill low density cellular concrete, or approved equivalent) if removing the tank from the subsurface will

result in structural concerns to the building, adversely impact active utilities, require extensive support of excavation design or underpinning, and/or significantly impact tenant operations. Prior to tank abandonment, the UST will be emptied of all recoverable contents (including but not limited to, liquids, sludges, tank bottoms, etc.) and cleaned to the extent practical. Following pumping and cleaning, associated piping will be disconnected from the UST, and the UST and associated piping will be filled with a flowable fill mixture if removal is not feasible.

Post-Construction Reporting

After its removal or abandonment, the registration for PBS # 2-188492 will be updated to reflect the changed status of the UST. Affidavits of tank removal or abandonment will be obtained by a New York City Fire Department (FDNY) licensed UST Installer/Remover. If additional unknown USTs are encountered, a plan for their decommissioning and removal or abandonment will be reviewed with the NYSDEC and follow the relevant procedures contained in this IRMWP.

2.4 Excavation of Historic Fill and Soil

The removal and/or abandonment of the 550-gallon waste oil UST may require excavation of historic fill and/or soil. Excavated soil will be screened for indication of a chemical or petroleum release by visual and olfactory means and with a PID. Excavation will be considered impractical if it results in structural concerns, could adversely impact active utilities, extends outside of the property line, requires extensive support of excavation design or underpinning, or results in groundwater infiltration requiring dewatering measures.

Excavation activities will be performed using a small excavator and/or hand tools. Excavated historic fill or soil will be loaded into a roll-off container or a truck that is appropriately lined, securely covered, manifested, and placarded in accordance with appropriate federal, state, and local New York City Department of Transportation (NYCDOT) requirements, and all other applicable transportation requirements. No excavated historic fill or soil will be reused as excavation backfill. A demarcation barrier, consisting of orange snow fencing, will be placed at the base of the excavation for visual reference.

2.5 Post-Excavation Documentation Endpoint Soil Sampling

If the UST is excavated and removed, post-excavation endpoint samples will be collected from the excavation sidewalls and bottom in accordance with NYSDEC DER-10 to evaluate soil/fill remaining in place, as practical. In the location of the known UST, five grab soil samples will be collected from the excavation, one sample per excavation sidewall and one sample from the excavation base. If additional excavation is required to remove grossly-impacted soil, documentation samples will be collected at a frequency of one per 900 square-feet of base and one per 30 feet of sidewall, where practical. At a minimum, five samples (one base and four sidewall samples), plus required quality assurance/quality control (QA/QC) samples (including duplicates and matrix spike/matrix spike duplicates [MS/MSD]), will be collected as part of this

IRM. The Quality Assurance Project Plan (QAPP) is included as Appendix C. If the tank is abandoned in place, no documentation endpoints will be collected for laboratory analysis.

Langan field personnel will document the work, screen the soil samples for environmental impacts, and collect environmental samples for laboratory analyses. Work will comply with the safety guidelines outlined in the HASP (Appendix B). Samples will be collected from areas with the greatest evidence of apparent petroleum contamination as evidenced by odors, staining, and/or PID readings. Proposed documentation sample locations are shown on Figure 3.

The samples will be collected in laboratory-supplied containers and will be sealed, labeled, and placed in a cooler containing ice (to maintain a temperature of approximately 4 degrees Celsius) for delivery to an NYSDOH Environmental Laboratory Accredited Program (ELAP)-certified analytical laboratory. Soil samples will be analyzed for CP-51 list VOCs and SVOCs (Tables 2 and 3) and compared to the soil cleanup levels for gasoline and fuel oil-contaminated soil (CP-51 Tables 2 and 3) and Part 375 CU SCOs.

2.6 Waste Characterization

Waste characterization samples for excess excavated material requiring off-site disposal will be collected during implementation of the IRM per disposal facility requirements. Sampling will be coordinated by Langan and/or the contractor and follow the QAPP provided in Appendix C.

Waste characterization samples will be submitted to an NYSDOH ELAP-approved laboratory for analysis. Waste characterization samples will be analyzed for parameters typically required by disposal facilities, including, VOCs, SVOCs, PCBs, pesticides, herbicides, Resource Conservation and Recovery Act (RCRA) metals, toxicity characteristic leaching procedure (TCLP) VOCs, TCLP SVOCs, TCLP metals, ignitability, corrosivity, and reactivity. Additional sampling and analyses may be required to meet selected disposal facility requirements. Waste characterization results will be provided in the Construction Completion Report (CCR).

2.7 Excavation Backfill

The UST excavation area will be backfilled with soil and/or crushed aggregate from a virgin source meeting the lower of the 6 NYCRR Part 375 PGW and CU SCOs; these materials will be placed above the demarcation barrier, if placed. No excavated historic fill or soil will be reused as excavation backfill.

Sources of the clean fill and/or aggregate to be imported to the site will be evaluated in accordance with NYSDEC DER-10, including an examination of source location, current and historical use(s), and any applicable documentation. Materials proposed for import to the site will be approved by the NYSDEC prior to import. A Request to Import/Reuse Fill or Soil form will be prepared and submitted to the NYSDEC project manager allowing a minimum of five business

days for review. Material from industrial sites, spill sites, environmental remediation sites or other potentially contaminated sites will not be imported to the site. The imported fill will not include solid waste, including brick, concrete, glass, ash, wood, or other debris.

Imported clean fill and/or aggregate will be subject to source screening and sampled in accordance with DER-10 Table 5.4(e) (10) and analyzed for Target Compound List (TCL)/Target Analyte List (TAL)/Part 375 VOCs, SVOCs, PCBs, pesticides, herbicides, metals (including hexavalent and trivalent chromium), and emerging contaminants including per- and polyfluoroalkyl substances (PFAS) and 1,4-dioxane by a NYSDOH ELAP-certified laboratory. Emerging contaminant sampling will be performed in accordance with the NYSDEC January 2021 Guidelines for Sampling and Analysis of PFAS. QA/QC samples (including duplicates and MS/MSD samples) will be collected in accordance with the procedures outlined in the QAPP (Appendix B). After it is determined that the fill material meets imported backfill SCOs, the fill material will be loaded onto trucks with secure covers for delivery to the site. All imported material will be segregated prior to departing the source facility until arrival at the site.

In addition to the above requirements, the following material types will adhere to the following:

- Recycled concrete aggregate (RCA)
 - Will be imported from NYSDEC-registered or NYSDEC-permitted facilities.
 - Will be recognizable and uncontaminated recycled concrete or brick and conform to the requirements of Section 304 of the New York State Department of Transportation Standard Specifications Construction and Materials Volume 1 (2021).
 - Will exhibit no more than 10% by weight passing through a No. 80 sieve. Analytical testing will be required if sieve results show more than 10% by weight passing through a No. 80 sieve or required by NYSDEC under its terms for operation of the facility.
 - Will not be placed below the groundwater table.
- Virgin gravel, rock, or stone
 - Will be imported from a mine, quarry, or facilities permitted or registered by the NYSDEC or the applicable state of origin. The facility must provide a state-issued certification or permit if it does not operate under a permit issued by the NYSDEC.
 - Will not exhibit more than 10% by weight passing through a No. 80 sieve.
- Clean Fill
 - Will be imported from NYSDEC-registered or NYSDEC-permitted facilities.

Additional exemptions from testing requirements may be approved by NYSDEC Project Manager.

A detailed account of imported fill materials and data usability summary reports (DUSR) will be included in the CCR. Quality control procedures for the sampling are included in the QAPP (Appendix B). Sample results will be provided in NYSDEC electronic data deliverable (EDD) format for EQulS™.

2.8 Composite Cover System Restoration

A composite cover system, consisting of an approximately 2-inch-thick concrete slab inside the auto repair shop and an approximately 6-inch-thick asphalt pavement that covers the remainder of the site, serves as an interim protective barrier that minimizes the risk of exposure to subsurface contamination.

A portion of the interim composite cover system (i.e. concrete slab above the UST in the auto repair shop) will be demolished and removed as part of the IRM. This concrete slab will be repaired in accordance with the NYSDEC-approved iSMP following removal and/or abandonment of the 550-gallon waste soil UST.

Following completion of the IRM, the composite cover system will be inspected in accordance with the NYSDEC-approved iSMP.

3.0 MANAGEMENT OF INTERIM REMEDIAL MEASURES

3.1 Remedial Activity Oversight

The implementation of the IRM will be overseen by environmental professionals under the supervision of the Remedial Engineer (RE). The RE is responsible for documenting that the contractor performs the work as specified in the IRM Work Plan and provides the proper documentation required by NYSDEC. Documents from the contractor will be submitted to the NYSDEC in the CCR; which is described in Section 4.0.

Key contacts for this project are as follows:

2409 Jerome, Inc.:	Mr. David Dimond Telephone: (914)740-6436
Remedial Engineer	Jason Hayes, PE, LEED AP Telephone: (212) 479-5427
Langan Project Manager:	Mr. Gregory C. Wyka, PG Telephone: (212) 479-5476
Qualified Environmental Professional (QEP):	Mr. Michael Burke, PG, CHMM Telephone: (212) 479-5413
Data Validator:	Mr. Joe Conboy Telephone: (609) 282-8099
Laboratory Representatives:	Alpha Analytical Laboratories, Inc. Mr. Ben Rao Telephone: (201) 812-2633

The activities that occur during the IRM will be properly documented in daily field reports, monthly BCP progress reports and in the CCR as described in Section 4.0.

3.2 Site Preparation

Site preparation activities for implementation of the proposed IRM will be completed by the contractor, and will include, but not be limited to, the establishment of work zones, setup of

support facilities, construction of decontamination facilities, and implementation of site security measures (i.e. erection of security fencing around work zones and staging areas).

Langan will be responsible for preparation and implementation of sampling and engineering oversight required by this IRMWP. The contractor will ensure that necessary permits are obtained before the commencement of IRM tasks. Dig Safely New York (811) will be contacted by the contractor a minimum of three business days in advance of intrusive work activities to inform the agency of the nature of the work and the intent to perform excavation activities.

3.3 Soil Screening Methods

Visual, olfactory and instrumental soil screening and assessment will be performed by an environmental professional under the supervision of the RE during excavations at and near the location of waste oil UST. Instrumental screening will be performed with a PID equipped with a 10.6 electron volt (eV) bulb that will be calibrated daily.

3.4 Solid Waste Management

Solid wastes expected to be generated during the IRM include concrete debris and excavated historic fill and soil. If tank removal is practical, the tank carcass will also be handled as solid waste generated during IRMWP implementation. Excavated soil/historic fill will be stockpiled on 8-mil minimum sheeting or containerized (within 55-gallon drums and/or roll-off containers) pending off-site disposal at a facility with a permit to accept the waste. Concrete debris will be managed as C&D debris in accordance with Part 360 and 361 regulations. If removed, the empty and cleaned UST carcass will be disposed at an appropriate solid waste recycling facility or scrap metal recycling facility.

3.5 Stockpile Methods

Direct loading of soil into roll-off containers or trucks is not expected to be feasible during implementation of the IRM. Soil stockpile areas will be created, limited to the extent practicable, and maintained until the soil can be loaded out or if waste characterization sampling and laboratory analysis is needed to facilitate off-site disposal. Separate stockpile areas will be constructed to prevent commingling materials of different waste types. Stockpile areas will meet the following minimum requirements:

- Excavated historic fill and soil will be placed on top of a low-permeability liner with a minimum thickness of 8-mil and of sufficient strength and thickness to prevent puncture during use; separate stockpiles will be created for each material type. The use of multiple layers of thinner liners is permissible.
- Equipment and procedures will be used to place and remove historic fill and soil that will preserve the integrity of the liner.

- Stockpiles will be covered at the designated times (see below) with plastic sheeting or tarps (minimum 8 mil), which will be securely anchored to the ground. Stockpiles will be routinely inspected. Broken sheeting covers will be promptly replaced.
- Active stockpiles will be covered at the end of each workday.
- If stockpiles are maintained outside of the building, each stockpile area will be encircled with silt fences and/or hay bales, as needed, to contain and filter particulates from any rainwater that has drained off the soil, and to mitigate the potential for surface water run-off.
- Hay bales will also be used near catch basins, surface waters and other discharge points, if needed.
- The stockpile areas will be inspected daily and any deficiencies will be promptly addressed.

3.6 Material Load Out, Transportation, and Off-Site Disposal

Excavated material will be handled, transported and disposed by a licensed hauler in accordance with applicable Part 360, Part 361, and Part 364 regulations and other applicable local, state, federal regulations. The contractor will provide the appropriate facility permits, certifications, and written commitments from disposal facilities to accept the material as submittals to the RE for review to verify that the facility is licensed to accept the material. Waste manifests and scale tickets will be used to track the material transported off-site for disposal. If loads contain wet material, truck liners will be used. Waste disposal documentation including, but not limited to, facility permits, waste profiles/applications, pre-approval letters, facility-signed manifests and scale tickets, will be included in the CCR.

3.7 Material Reuse On-Site

Reuse of excavated historic fill or soil is not planned as part of the IRM. If reuse is considered, excavated soil/fill material will only be reused if certain conditions are met, and reuse will be coordinated in advance with the NYSDEC BCP Project Manager. Excavated material will be acceptable for reuse if it is not grossly-contaminated soil (including soil with non-aqueous phase liquid (NAPL)) and it is sampled and meets the lower of the CU SCOs and PGW SCOs. The PGW SCOs apply only to compounds or analytes that were detected in groundwater at the site at concentrations exceeding the NYSDEC SGVs. Waste materials used for an end use specified in 6 NYCRR Part 360.12 will not be considered a solid waste. Excavated material that cannot be reused will be appropriately characterized and transported for off-site disposal at a facility with a permit to accept the waste.

3.8 Particulate Matter, Odor, Vapor and Nuisance Control Plan

Community air monitoring will be conducted in compliance with the NYSDOH Generic CAMP outlined below. Special consideration will be given to implementing planned activities when potentially exposed population occupancy is at a minimum, and when necessary, the use of engineering controls such as vapor/dust barriers or special ventilation devices will be considered.

If the building is not occupied, the CAMP will include real-time monitoring for VOCs and particulates at the downwind perimeter of each designated work area when certain activities are in progress. If the building is occupied, the CAMP will include real-time monitoring for VOCs and particulates at locations that are adjacent to occupied areas and adjacent to soil disturbance activities. Continuous monitoring is required for all ground intrusive activities, soil handling, and during demolition of contaminated or potentially contaminated structures. Ground intrusive activities include, but are not limited to, the excavation, handling, backfilling, and loading of soil and fill material, trenching, sheeting, and lagging.

CAMP monitoring for VOC levels will be conducted with PIDs, and monitoring for dust/particulates will be conducted with particulate sensors equipped with filters to detect particulates less than 10 microns in diameter (PM10). Monitoring for particulates and odors will be conducted during all ground intrusive activities by the RE's field inspector. The work zone is defined as the general area in which machinery is operating in support of remediation activities. A portable PID will be used to monitor the work zone and for periodic monitoring of VOCs during activities such as soil and groundwater sampling. The site perimeter will be visually monitored for fugitive dust emissions.

Prior to the start of work, VOC and particulate concentrations will be collected continuously inside of the building for 15 minutes to establish background conditions using typical CAMP equipment. The monitoring work will be performed using equipment appropriate to measure the types of contaminants known or suspected to be present for organic vapors and equipment capable of measuring particulate matter less than 10 micrometers in size (PM10) for particulates. The equipment will be calibrated at least daily for the contaminant(s) of concern or for an appropriate surrogate. The equipment will be capable of calculating 15-minute running average concentrations, which will be compared to the levels specified below.

At the conclusion of each work day, the building will be vacated (if occupied) and the excavation will be covered with polyethylene sheeting.

CAMP Considerations

If the building is occupied during the IRM, the following considerations will be considered or implemented:

- CAMP stations will be placed in the areas with the greatest potential for exposure for building occupants and vapor migration pathways (openings, conduits, vents, etc.).
- Background particulate and organic vapor readings will be collected each day in occupied spaces before the start of the IRM work.
- Engineering controls, such as vapor/dust barriers, exhaust fans, or other vapor controls will be considered for use.
- Measures will be taken to ensure that individuals not involved with the IRM are not present in the area where work is occurring.

Volatile Organic Compounds

If the building is occupied, VOCs will be monitored continuously adjacent to occupied area(s) and adjacent to the excavation during intrusive soil disturbance activities. Prior to the start of work, VOC concentrations will be collected continuously inside of the building for 15 minutes to establish background conditions. The monitoring work will be performed using equipment appropriate to measure the types of contaminants known or suspected to be present. The equipment will be calibrated at least daily for the contaminant(s) of concern or for an appropriate surrogate. The equipment will be capable of calculating 15-minute running average concentrations, which will be compared to the levels specified below.

- If the concentration of total organic vapors at any CAMP station exceeds 5 parts per million (ppm) above background for the 15-minute average (at any CAMP station), work activities will be temporarily halted and corrective actions to abate emissions will be taken until total organic vapor levels are below 5 ppm over background. Corrective actions to abate emissions include, but are not limited to, ventilating the work area with fans, use of suppressing agents (i.e. odor suppressant foams, water spray, etc), covering the excavation with polyethylene sheeting or tarps, and/or temporarily vacating the work area until organic vapor concentrations return to background levels.

If the building is not occupied, VOCs will be monitored at the upwind and downwind site perimeter and between the ground intrusive work area on a continuous basis during intrusive soil disturbance activities. Upwind concentrations will be used to establish background conditions. The monitoring work will be performed using equipment appropriate to measure the types of contaminants known or suspected to be present. The equipment will be calibrated at least daily for the contaminant(s) of concern or for an appropriate surrogate. The equipment will be capable of calculating 15-minute running average concentrations, which will be compared to the levels specified below.

- If the ambient air concentration of total organic vapors at the downwind perimeter of the work area or exclusion zone exceeds 5 parts per million (ppm) above background for the

15-minute average, work activities will be temporarily halted and monitoring continued. If the total organic vapor level readily decreases (per instantaneous readings) below 5 ppm over background, work activities will resume with continued monitoring.

- If total organic vapor levels at the downwind perimeter persist at levels in excess of 5 ppm over background but less than 25 ppm, work activities will be halted, the source of vapors identified, corrective actions taken to abate emissions, and monitoring continued. After these steps, work activities will resume provided that the total organic vapor level 200 feet downwind of the exclusion zone or half the distance to the nearest potential receptor or residential/commercial structure, whichever is less, but in no case less than 20 feet, is below 5 ppm over background for the 15-minute average.
- If the organic vapor level is above 25 ppm at the site perimeter, activities will be shut down.

Particulate Matter

If the building is occupied, particulate concentrations will be monitored continuously adjacent to occupied area(s) and adjacent to the excavation during intrusive soil disturbance activities. Prior to the start of work, particulate concentrations will be collected continuously inside of the building for 15 minutes to establish background conditions. The particulate monitoring will be performed using real-time monitoring equipment capable of measuring particulate matter less than 10 micrometers in size (PM₁₀) and capable of integrating over a period of 15 minutes (or less) for comparison to the airborne particulate action level. The equipment will be equipped with an audible alarm to indicate exceedance of the action level. In addition, fugitive dust migration will be visually assessed during all work activities.

- If the PM₁₀ particulate levels are 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) greater than background for the 15-minute period (at any CAMP station) or if airborne dust is observed leaving the work area, then dust suppression techniques will be employed and work will be stopped and a re-evaluation of activities initiated. Work will resume provided that dust suppression measures and other controls are successful in reducing the downwind PM₁₀ particulate concentration to within 100 $\mu\text{g}/\text{m}^3$ of background concentrations and in preventing visible dust migration.

All readings will be recorded, downloaded at the end of the day and be available for the NYSDEC and NYSDOH Project Managers to review.

If the building is not occupied, particulate concentrations will be monitored continuously at the upwind and downwind site perimeters and between the ground intrusive works at temporary particulate monitoring stations. The particulate monitoring will be performed using real-time monitoring equipment capable of measuring particulate matter less than 10 micrometers in size (PM₁₀) and capable of integrating over a period of 15 minutes (or less) for comparison to the

airborne particulate action level. The equipment will be equipped with an audible alarm to indicate exceedance of the action level. In addition, fugitive dust migration will be visually assessed during all work activities.

- If the downwind PM10 particulate level is 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) greater than background (upwind perimeter) for the 15-minute period or if airborne dust is observed leaving the work area, then dust suppression techniques will be employed. Work will continue with dust suppression techniques provided that downwind PM10 particulate levels do not exceed $150 \mu\text{g}/\text{m}^3$ above the upwind concentration and provided that no visible dust is migrating from the work area.
- If, after implementation of dust suppression techniques, downwind PM10 particulate levels are greater than $150 \mu\text{g}/\text{m}^3$ above the upwind level, work will be stopped and a re-evaluation of activities initiated. Work will resume provided that dust suppression measures and other controls are successful in reducing the downwind PM10 particulate concentration to within $150 \mu\text{g}/\text{m}^3$ of the upwind concentration and in preventing visible dust migration.

Exceedances observed in the CAMP will be reported to the NYSDEC and NYSDOH Project Managers and included in the daily report.

Odor, Dust, and Nuisance Control Plan

Dust, odor and nuisance control will be accomplished by the contractor as described in this section. The CCR will include the following certification by the RE: "I certify that all invasive work during the remediation and all invasive development work were conducted in accordance with dust and odor suppression methodology defined in the IRM Work Plan."

Odor Control Plan

This odor control plan is capable of controlling emissions of nuisance odors off-site. Specific odor control methods to be used as needed will include application of foam suppressants or tarps over the odorous or VOC source areas. If nuisance odors are identified, work will be halted and the source of odors will be identified and corrected. Work will not resume until nuisance odors are abated. The NYSDEC and NYSDOH will be notified of all odor events and of all other complaints about the project. Implementation of odor controls, including the halt of work, will be the responsibility of the RE, who is responsible for certifying the CCR. Application of odor suppressants is the responsibility of the contractor.

Necessary means will be employed to prevent on- and off-site nuisances. At a minimum, procedures will include: (a) limiting the area of open excavations; (b) shrouding open excavations with tarps and other covers; and (c) using foams to cover exposed odorous soils. If odors develop and cannot be otherwise controlled, additional means to eliminate odor nuisances will include:(a)

use of chemical odorants in spray or misting systems and (b) use of staff to monitor odors in surrounding neighborhoods.

Although not anticipated, where odor nuisances develop during remedial work and cannot be corrected, or where the release of nuisance odors cannot otherwise be avoided because of on-site conditions or close proximity to sensitive receptors, odor control will be achieved by sheltering excavation and handling areas under tented containment structures equipped with appropriate air venting/filtering systems.

Dust Control Plan

Dust suppression will include, at a minimum, the controls listed below:

- Dust suppression will be implemented by the contractor through the use of a dedicated water distribution system, on-site water trucks, or an alternate source with suitable supply and pressure for use in dust control.
- Polyethylene sheeting will be placed at the base and walls of any occupied indoor areas (if any) where material is being imported or exported and taken down at the end of each day. These areas will be vacuumed using a high-efficiency particulate air (HEPA) filter to the satisfaction of the RE.

3.9 Spill/Release Contingency Procedures

The contractor(s) involved with the IRM will be informed that the site is enrolled in the BCP and that they must take all necessary precautions to prevent spills, and be ready, in the event spills occur, to implement contingency procedures to remediate the spills. If a spill or release is observed during the course of work the following actions will take place:

- The contractor and RE will account for and evaluate the safety of site personnel and estimate the approximate quantity of material released and/or size of the spill;
- The RE's field representative will notify the RE immediately via cell phone or email. The RE will report a spill to the NYSDEC Spill Hotline (1-800-457-7362) if a reportable quantity of a hazardous substance or petroleum is released to the environment and contact the NYSDEC;
- Sources of ignition will be identified and removed from the spilled material if flammable;
- Evaluation of the hazard(s), identification of the source of the discharge, and isolation, containment and/or stopping the spill or leak using appropriate means. Spill control activities will take precedence over normal site-related activities. Entry to the release area will be limited to personnel with proper training, personal protective equipment (PPE), and equipment necessary to perform the work. Additional oil absorbent booms may be

deployed for containment purposes and/or absorbent pads may be used to collect spilled liquid. Mechanical removal methods such as skimming and vacuuming may be needed. An emergency response contractor may need to be called in for assistance depending on the size and extent of the release or spill;

- Personnel will be kept upwind of the spill area. Potential vapor and dust hazards will be evaluated, and implementation of appropriate suppression operations will take place;
- Spent cleanup materials will be properly containerized and disposed of in accordance with applicable regulations; and
- The NYSDEC will be kept informed of response actions in a timely manner.

3.10 Demobilization and Decontamination

Demobilization will include:

- As necessary, restoration of temporary access areas and areas that were disturbed to accommodate support areas (e.g., staging areas, decontamination areas, and material storage areas);
- Removal and disposal of waste materials in accordance with applicable laws and regulations;
- Equipment decontamination; and
- General refuse disposal.

Recoverable and non-absorptive equipment and materials will be decontaminated and demobilized at the completion of field activities. Accumulated equipment rinsate and decontamination materials will be collected, commingled with other waste streams, and containerized in a 55-gallon UN/DOT approved drum for disposal, as appropriate. Decontamination derived waste will be characterized (if needed) and transported to a facility that is permitted to accept the waste. Biodegradable cleaning solutions will be used to clean the interior and exterior surfaces of the equipment as needed; no cleaning solutions containing chlorinated solvents or VOCs will be used.

3.11 Health and Safety Plan

The RE prepared a site-specific HASP for the IRM, which is included as Appendix B. The HASP provides a mechanism for establishing on-site safe working conditions, safety organization, procedures, and personal protective equipment (PPE) requirements. The HASP meets the requirements of 29 CFR 1910 and 29 CFR 1926 (which includes 29 CFR 1910.120 and 29 CFR 1926.65). The HASP includes, but is not limited to, the following components listed below:

- Organization and Identification of key personnel;

- Training requirements;
- Medical surveillance requirements;
- List of site hazards;
- Excavation safety;
- Work zone descriptions and monitoring procedures;
- Personal safety equipment and protective clothing requirements;
- Decontamination requirements;
- Standard operating procedures;
- Contingency Plan; and
- Material Safety Data Sheets.

3.12 Quality Assurance Project Plan

The QAPP includes proposed field sampling procedures, analytical methods, and QA/QC procedures. The QAPP is included as Appendix C.

3.13 Notification

The NYSDEC will be notified at least 14 calendar days prior to commencement of IRM-related work. A pre-construction meeting will be coordinated between the RE, the contractor(s) involved with the IRM, and the NYSDEC Project Manager. This meeting must be coordinated prior to the implementation of this IRM Work Plan.

4.0 REPORTING

4.1 Daily Reports

Daily reports will be prepared for the project file and for review by the NYSDEC BCP and NYSDOH Project Managers. Daily reports will be emailed to the NYSDEC BCP and NYSDOH Project Managers by the end of the following day. Daily reports will include:

- An update of progress made during the reporting day;
- Locations of work and quantities of material imported and exported from the site;
- References to map for site activities;
- A summary of any and all complaints with relevant details (names, phone numbers);
- A summary of CAMP findings, including exceedances (NYSDEC and NYSDOH will be directly contacted in the instance of a CAMP exceedance);
- An explanation of notable site conditions, including erosion and sediment controls;
- Actions anticipated for the next reporting day; and
- Status and condition of erosion and sediment controls.

Daily reports are not intended to be the mode of communication for notification to the NYSDEC of emergencies (accident, spill), requests for changes to the IRM Work Plan or other sensitive or time-critical information; however, such conditions will also be included in the daily reports. Emergency conditions and changes to the IRM Work Plan and CAMP action level exceedances will be addressed directly to the NYSDEC and NYSDOH Project Managers via personal communication. If site conditions warrant, the RE may request to change from daily to weekly reports that include the above information.

4.2 Monthly Progress Reports

Monthly progress reports generated as part of the BCP will include a summary of the IRM activities during the appropriate reporting periods. Monthly progress reports are not intended to notify the NYSDEC of emergencies (accident, spill), request changes to the IRM Work Plan, or communicate other sensitive or time-critical information. Regardless, such conditions will also be included in the monthly progress reports. Emergency conditions and changes to the IRM will be communicated directly to the NYSDEC Project Manager.

4.3 Construction Completion Report

A CCR will be submitted to the NYSDEC Project Managers within 120 days of completing the IRM. The CCR will document the implementation of the IRM. The CCR will be incorporated into

and referenced in the FER for the site when issued. The CCR will provide the following information:


1. A statement from the RE certifying that:
 - a. The remedial work conformed to the IRM Work Plan
 - b. Solid and liquid waste materials were managed and transported to licensed facilities in accordance with the IRM Work Plan and applicable laws and regulations
 - c. Particulate matter, odor, and vapor control measures were implemented during the IRM as needed and conformed with the IRM Work Plan;
 - d. Source approval and sampling of imported fill materials was completed in a manner consistent with the methodology of the IRM Work Plan;
2. A detailed description of the work completed under the IRM
3. A photographic log of work completed under the IRM
4. A detailed description of and reasons for any changes or deviations from the approved IRM Work Plan
5. A detailed account of exported solid and liquid waste materials, including but not limited to, type, quantities, waste characterization data, receiving facilities, waste profiles/applications, facility pre-approvals, facility-signed manifests, and scale tickets
6. A detailed account of imported fill materials, including but not limited to, type, source, analytical data, quantities, manifests, and scale tickets
7. Laboratory analytical data packages (ASP-B deliverables) and DUSRs for post-excavation documentation endpoint samples and samples of imported fill materials
8. A description of any residual impacted soil or grossly-contaminated soil left on the site
9. Copies of submitted daily reports

5.0 CERTIFICATION

I, Jason J. Hayes, P.E. certify that I am currently a NYS registered professional engineer as defined in 6 NYCRR Part 375 and that this Interim Remedial Measure Work Plan was prepared in accordance with all applicable statutes and regulations and in substantial conformance with the DER Technical Guidance for Site Investigation and Remediation.



FIGURES

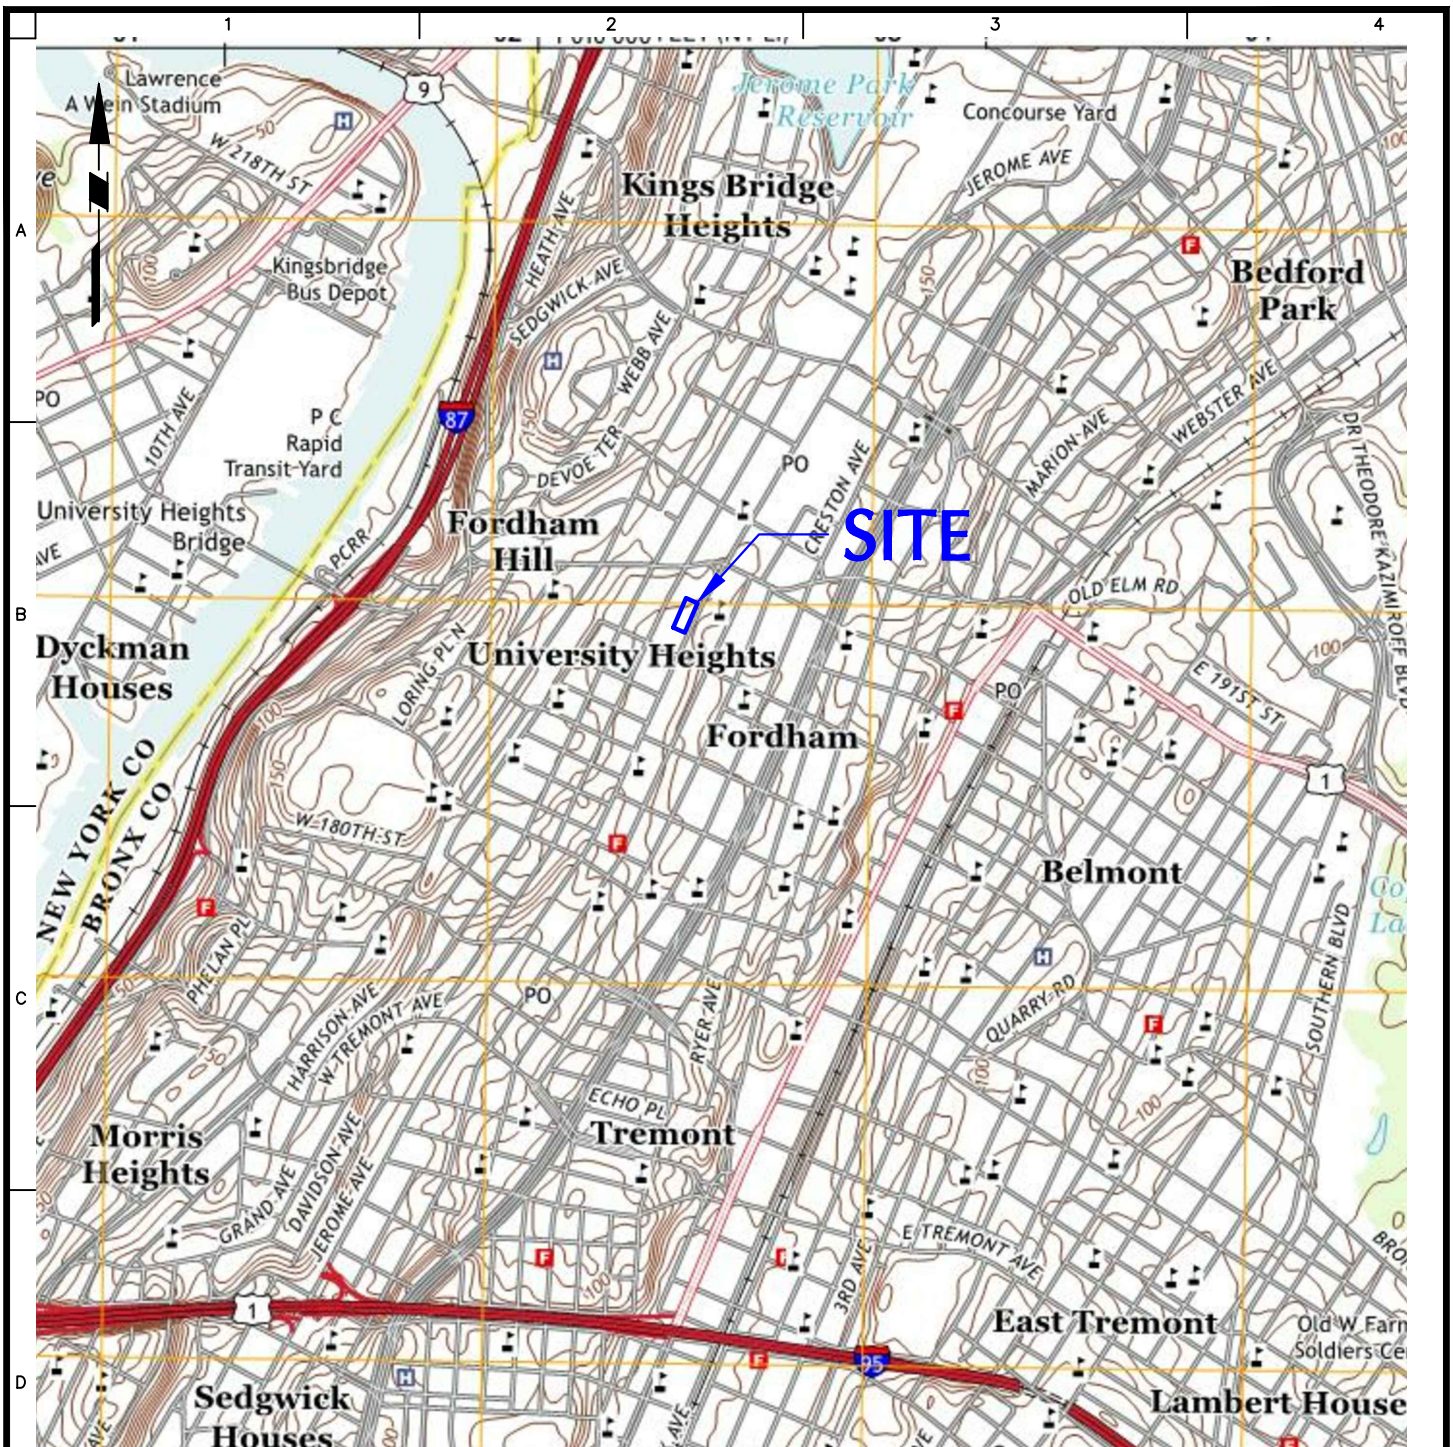

LEGEND:

— APPROXIMATE SITE BOUNDARY

NOTES:

1. BASE MAP SOURCE: USGS CENTRAL PARK QUADRANGLE MAP (2013).

WARNING: IT IS A VIOLATION OF THE NYS EDUCATION LAW ARTICLE 145 FOR ANY PERSON, UNLESS HE IS ACTING UNDER THE DIRECTION OF A LICENSED PROFESSIONAL ENGINEER, TO ALTER THIS ITEM IN ANY WAY.

LANGAN
Langan Engineering, Environmental, Surveying,
Landscape Architecture and Geology, D.P.C.
21 Penn Plaza, 360 West 31st Street, 8th Floor
New York, NY 10001

T: 212.479.5400 F: 212.479.5444 www.langan.com

Project

2409 JEROME AVENUE
BLOCK No. 3199, LOT Nos. 103 & 116

BRONX

NEW YORK

Figure Title

**SITE LOCATION
MAP**

Project No.
170390601


Date
1/21/2021


Drawn By
LH

Checked By
WK


Figure No.

1

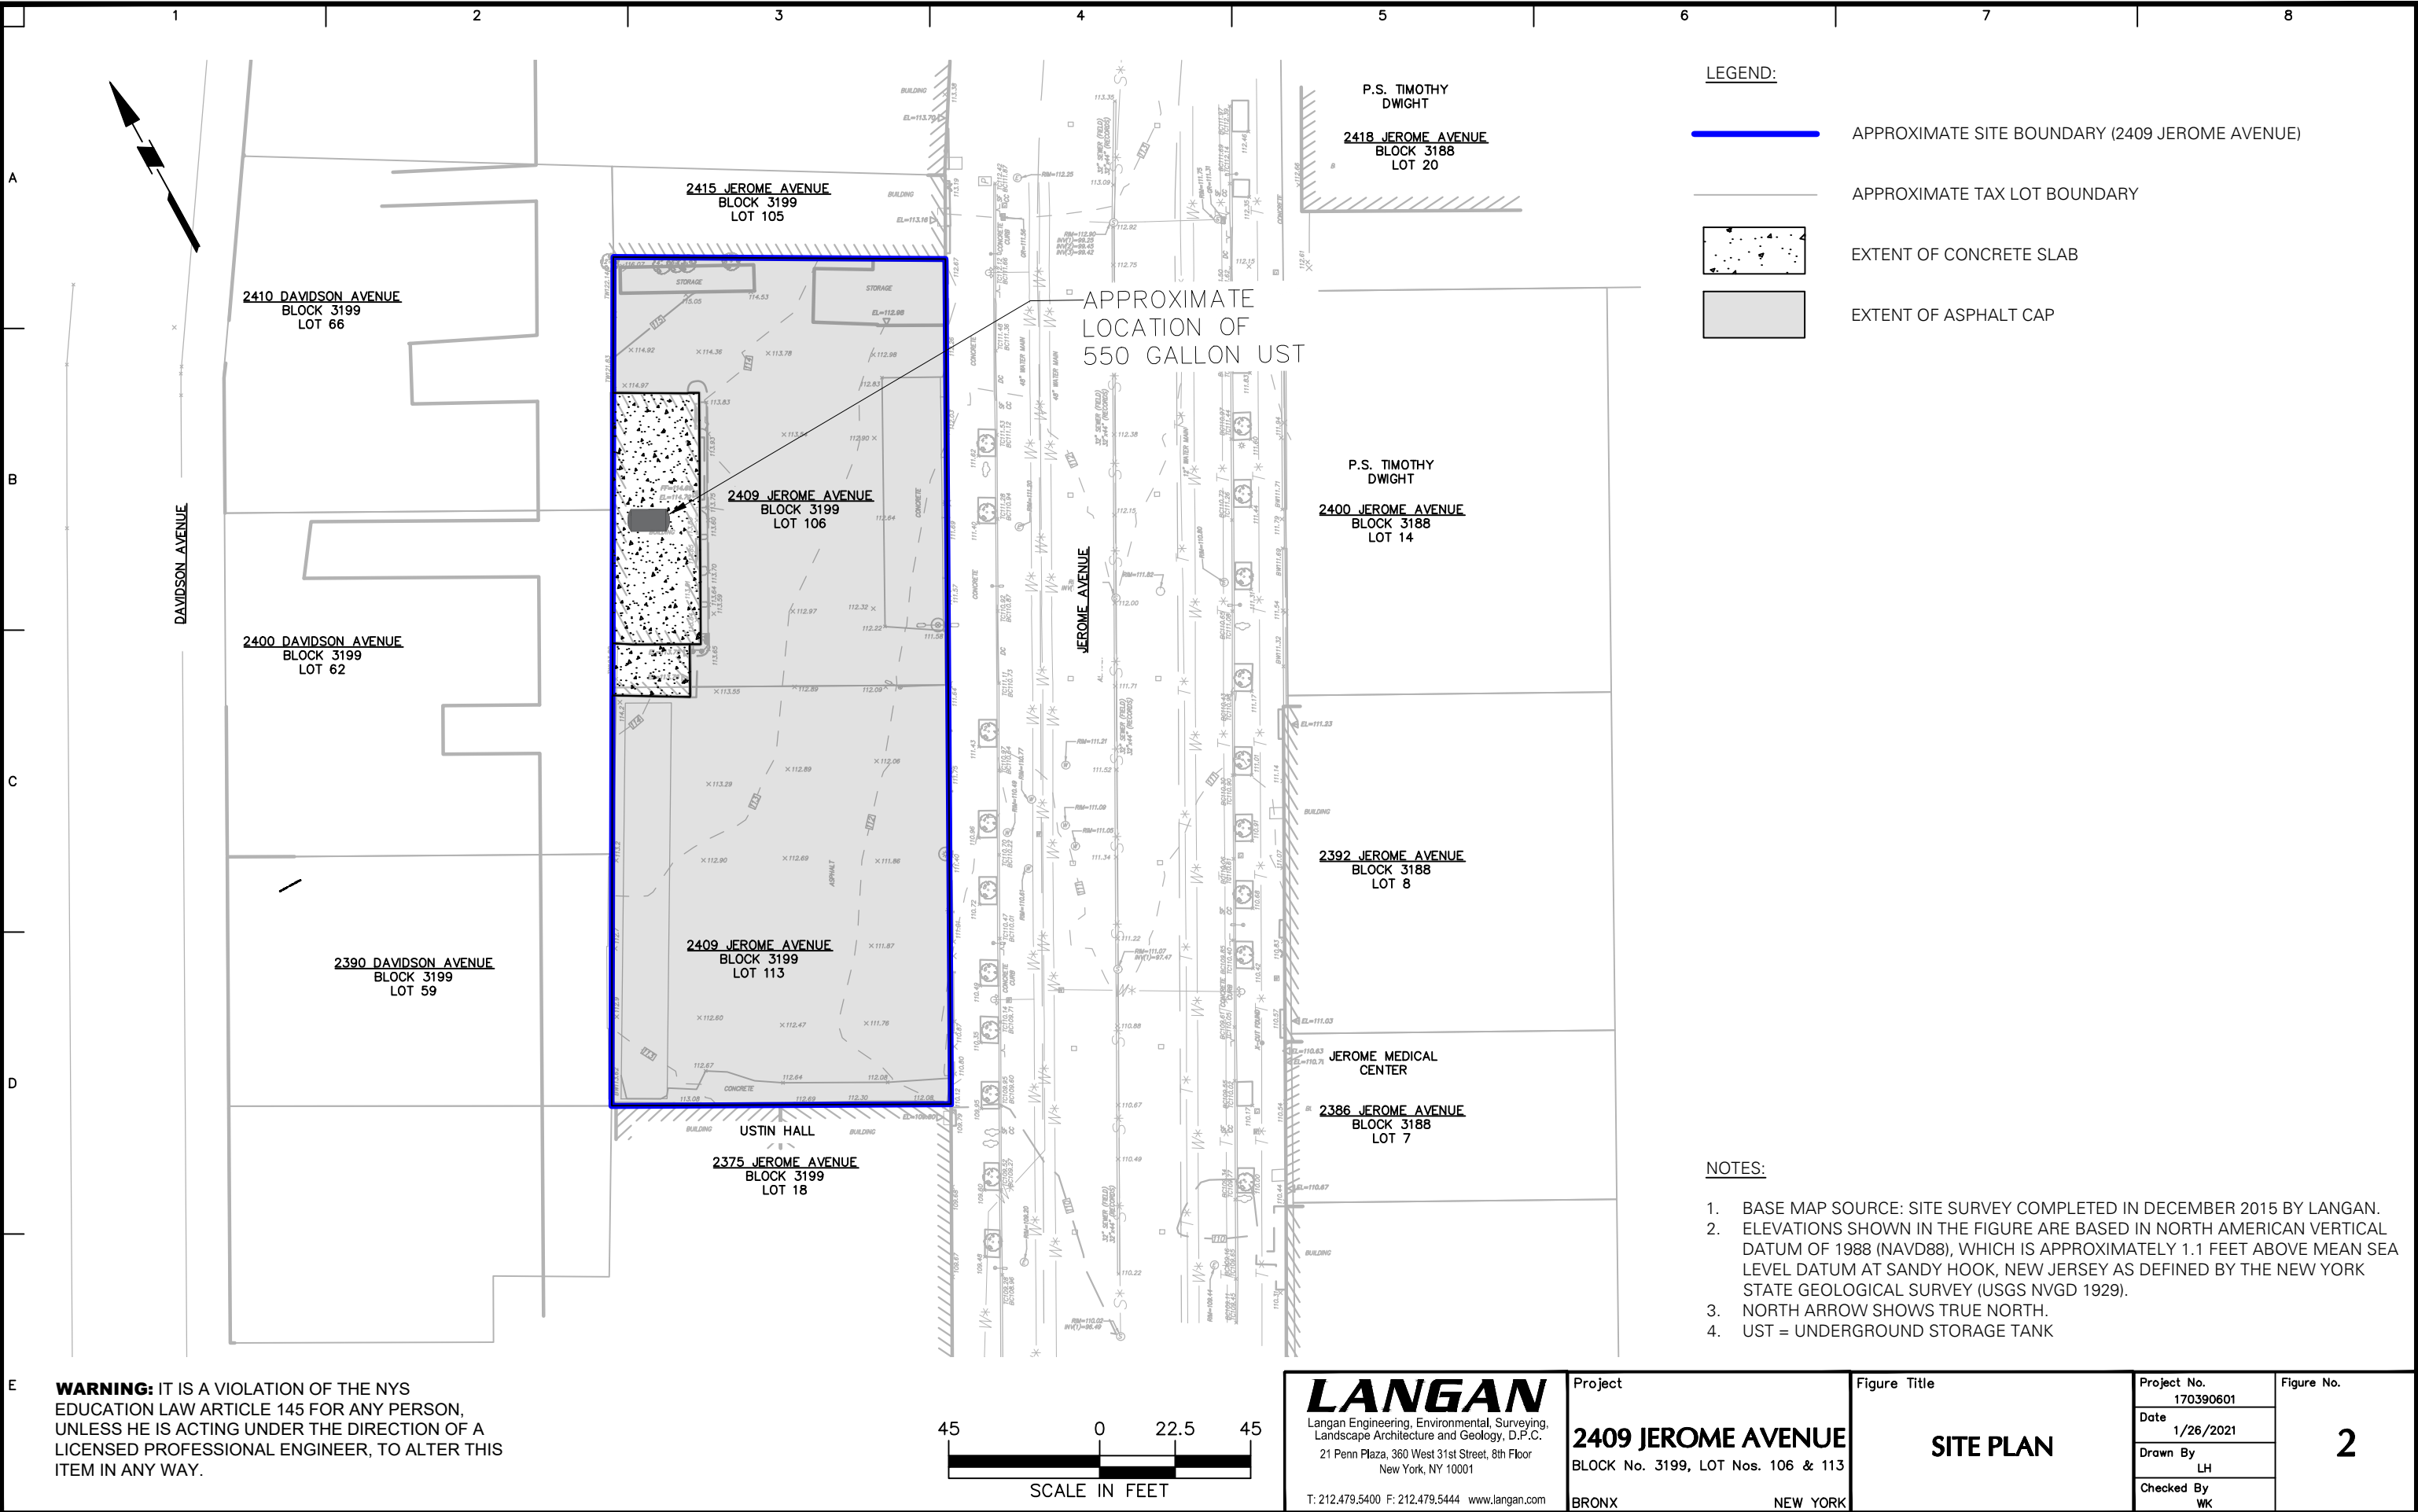

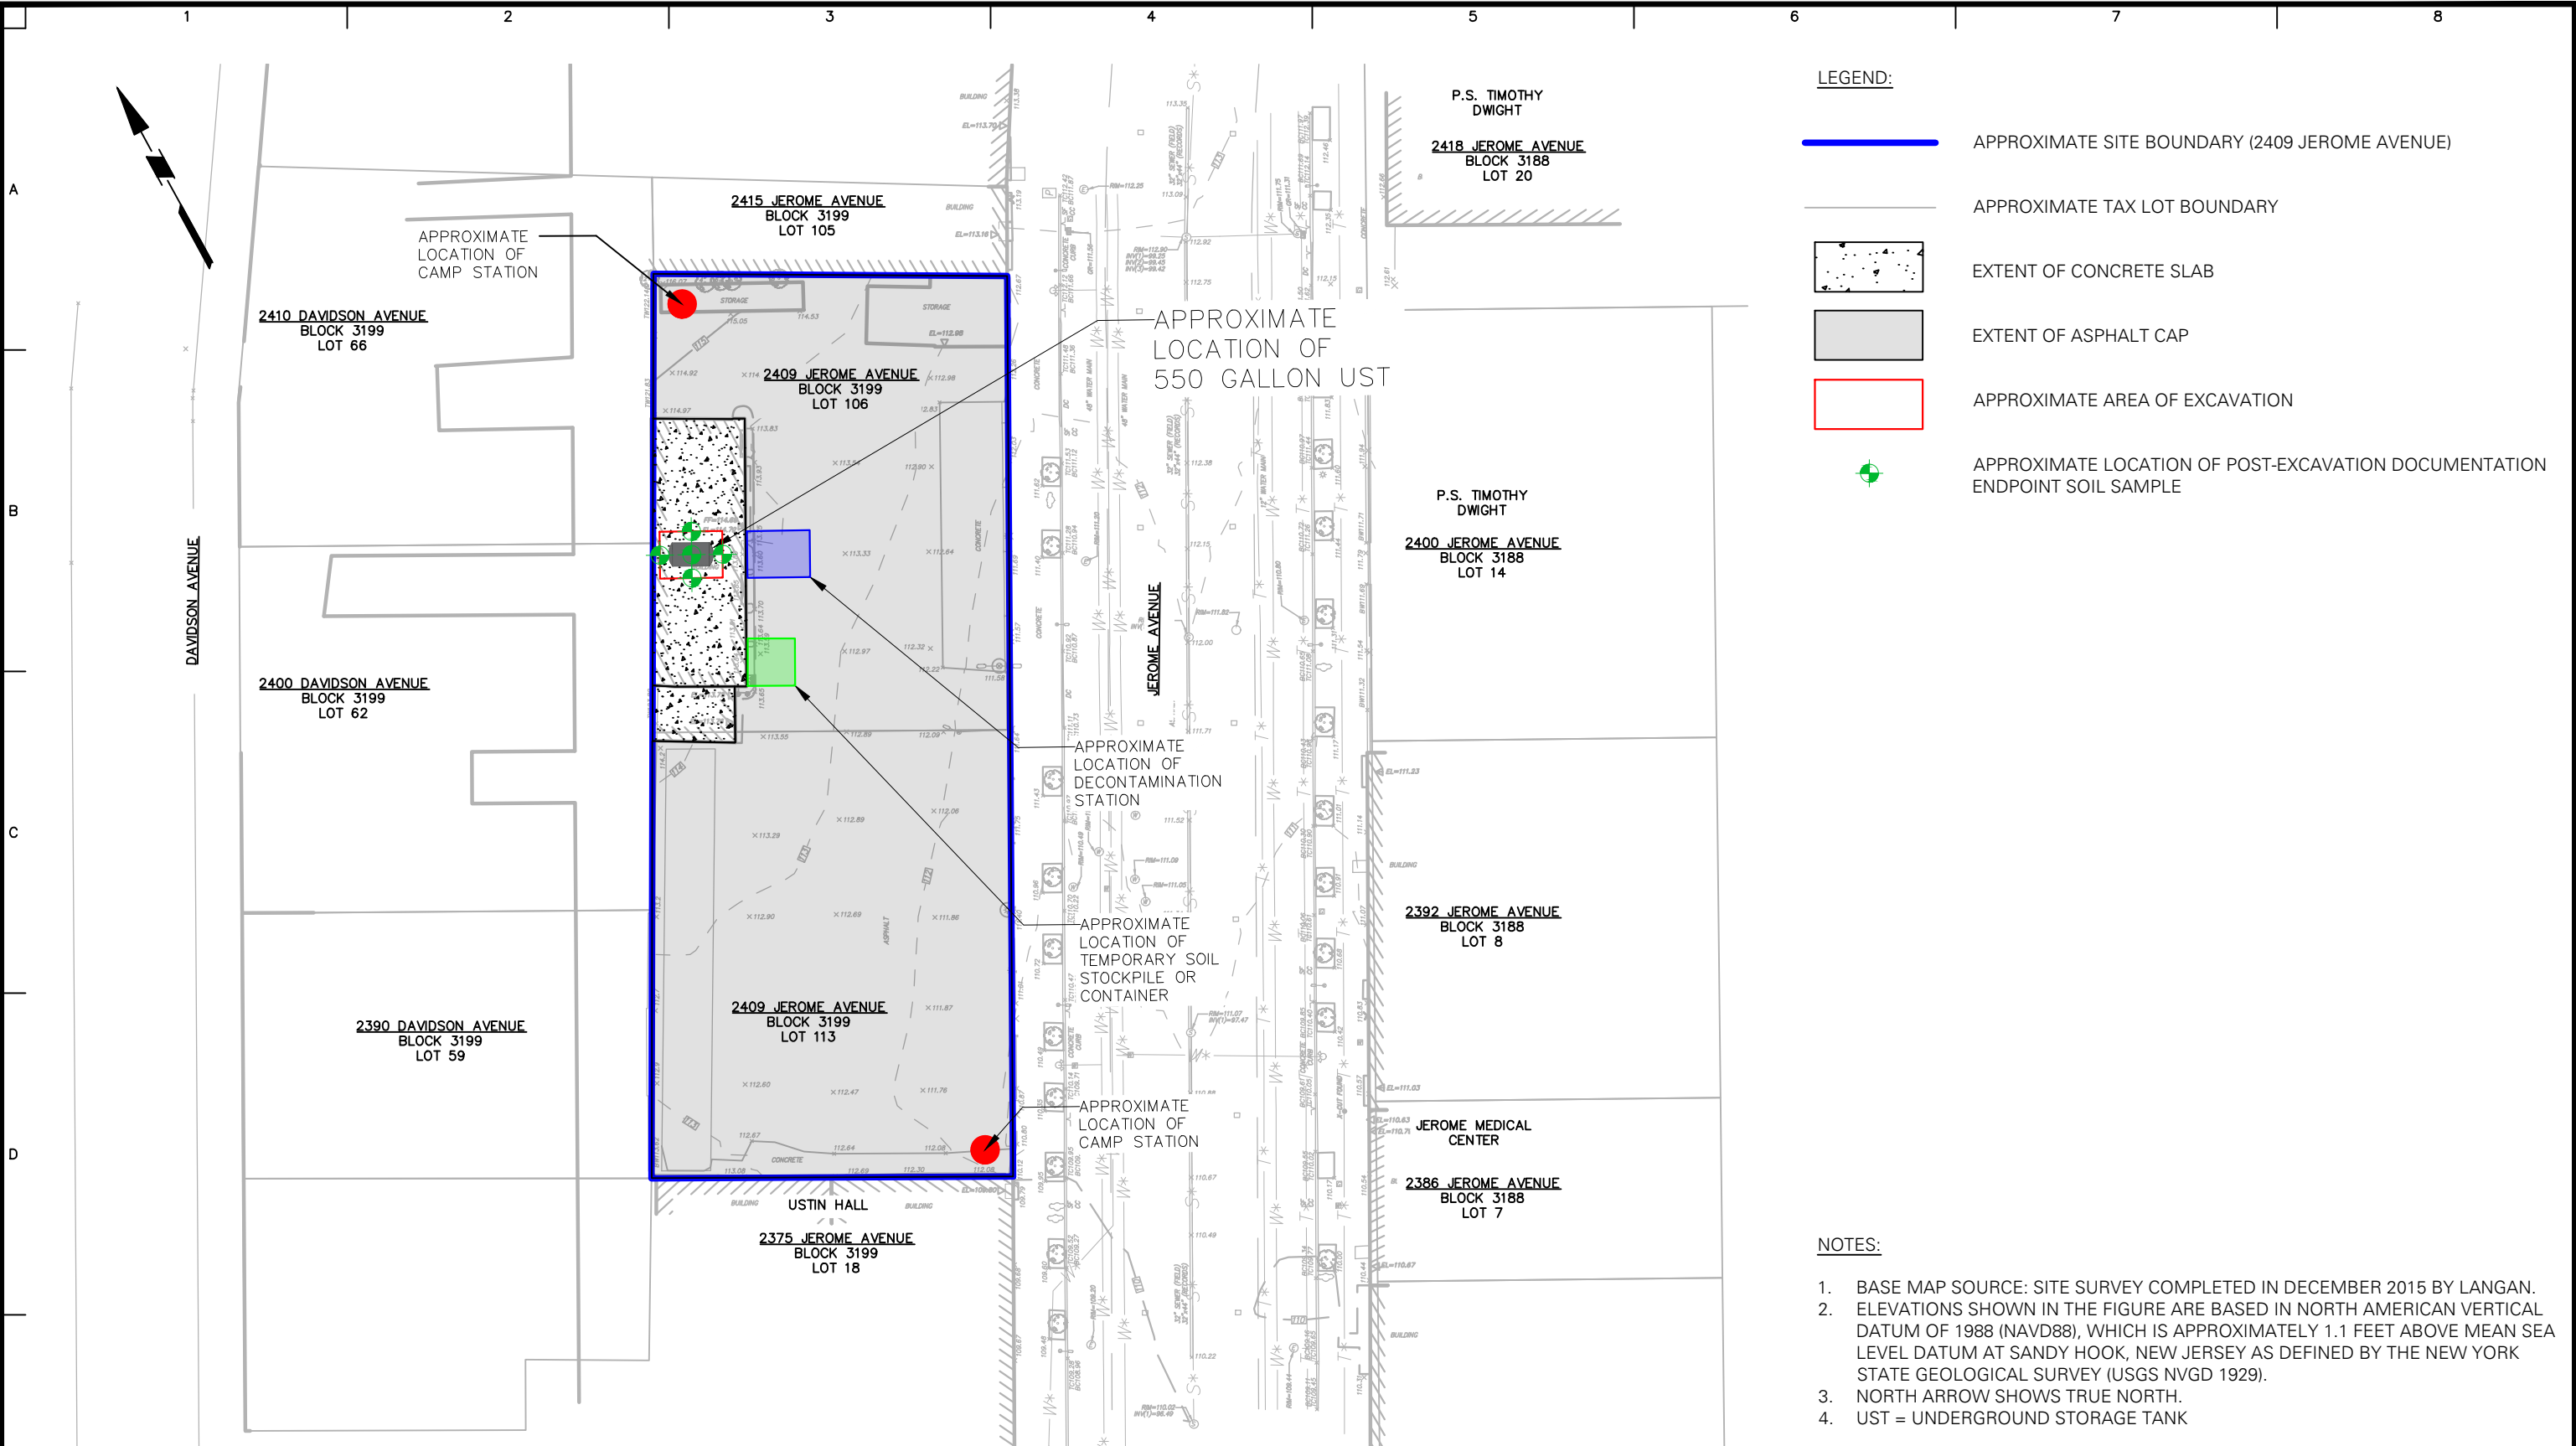

WARNING: IT IS A VIOLATION OF THE NYS EDUCATION LAW ARTICLE 145 FOR ANY PERSON, UNLESS HE IS ACTING UNDER THE DIRECTION OF A LICENSED PROFESSIONAL ENGINEER, TO ALTER THIS ITEM IN ANY WAY.



LANGAN
Langan Engineering, Environmental, Surveying,
Landscape Architecture and Geology, D.P.C.
21 Penn Plaza, 360 West 31st Street, 8th Floor
New York, NY 10001
T: 212.479.5400 F: 212.479.5444 www.langan.com

Project
2409 JEROME AVENUE
BLOCK No. 3199, LOT Nos. 106 & 113
BRONX NEW YORK

Figure Title EXCAVATION AND DOCUMENTATION SAMPLE LOCATION PLAN		Project No. 170390601	Figure No. 3
		Date 3/29/2021	
		Drawn By EMS	
		Checked By WK	

APPENDIX A

INTERIM REMEDIAL MEASURE SCHEDULE

Appendix A
Interim Remedial Measures Work Plan
Interim Remedial Measure Schedule

2409 Jerome Avenue
Bronx, New York
NYSDEC BCP Site No. C203087
Langan Project No. 170390601

Item	Action	Estimated Duration (weeks)
1	NYSDEC and NYSDOH Review of IRMWP	8
2	IRMWP 30-Day Review and Public Comment Period	4
3	Contractor Bidding, Award, and Permitting	4
4	IRMWP Implementation	8
5	CCR - Preparation and Submittal	12
6	NYSDEC Review and Approval of CCR	8

Notes:

1. NYSDEC = New York State Department of Environmental Conservation
2. NYSDOH = New York State Department of Health
3. BCP = Brownfield Cleanup Program
4. IRMWP = Interim Remedial Measures Work Plan
5. CCR = Construction Completion Report

APPENDIX B

HEALTH AND SAFETY PLAN

HEALTH AND SAFETY PLAN

for

**2409 JEROME AVENUE
BRONX, NEW YORK
NYSDEC BCP Site No. C203087
Borough of the Bronx Tax Map Block 3199,
Lots 106 and 113**

Prepared For:

**2409 Jerome, Inc.
29 East Fordham Road
Bronx, New York 10468**

Prepared By:

**Langan Engineering, Environmental, Surveying,
Landscape Architecture and Geology, D.P.C.
21 Penn Plaza
360 West 31st Street, 8th Floor
New York, New York 10001**

LANGAN

**March 2021
Langan Project Number: 170390601**

TABLE OF CONTENTS

	<u>Page No.</u>
1.0 INTRODUCTION	1
1.1 GENERAL.....	1
1.2 SITE LOCATION AND BACKGROUND	1
1.3 SUMMARY OF WORK TASKS	2
1.3.1 Geophysical Investigation	2
1.3.2 Hand Clearing of Borehole Locations.....	2
1.3.3 Waste Characterization - Soil Investigation and Sampling	2
1.3.4 Decommissioning and Removal of Above Ground and Underground Storage Tanks	3
1.3.5 Excavation Observation and Screening.....	3
1.3.6 Soil Screening & Reporting	3
1.3.7 Soil Sampling.....	4
1.3.8 Characterization of Excavated Material.....	4
1.3.9 Stockpiling	4
1.3.10 Equipment Decontamination.....	4
1.3.11 Construction Activity Inspections and Observations	4
1.3.12 Management of Investigative-Derived Waste	5
1.3.13 Drum Sampling.....	5
1.3.14 Surveying.....	5
2.0 IDENTIFICATION OF KEY PERSONNEL/HEALTH AND SAFETY PERSONNEL	5
2.1 LANGAN PROJECT MANAGER	5
2.2 LANGAN CORPORATE HEALTH AND SAFETY MANAGER.....	6
2.3 LANGAN SITE HEALTH & SAFETY OFFICER	6
2.4 LANGAN FIELD TEAM LEADER RESPONSIBILITIES	7
2.5 CONTRACTOR RESPONSIBILITIES	7
3.0 TASK/OPERATION SAFETY AND HEALTH RISK ANALYSES	8
3.1 SPECIFIC TASK SAFETY ANALYSIS.....	8
3.1.1 Geophysical Survey	8
3.1.2 Hand Clearing of Borehole Locations.....	8
3.1.3 Waste Classification	8
3.1.4 Removal of UST	8
3.1.5 Excavation and Soil Screening	9
3.1.6 Stockpile Sampling	9
3.1.7 Indoor Drilling and Excavation	9
3.1.8 Soil Investigation and Sampling	10
3.1.9 Construction Activity Inspection	10
3.1.10 Drum Sampling.....	11
3.2 RADIATION HAZARDS.....	11
3.3 PHYSICAL HAZARDS.....	11
3.3.1 Explosion	11
3.3.2 Heat Stress.....	11
3.3.3 Cold-Related Illness.....	13
3.3.4 Noise	14
3.3.5 Hand and Power Tools	14
3.3.6 Slips, Trips and Fall Hazards	14

3.3.7	Utilities (Electrocution and Fire Hazards)	14
3.3.7.1	Utility Clearance	14
3.3.7.2	Lockout-Tagout	14
3.3.8	Physical Hazard Considerations for Material Handling	15
3.3.9	Hearing Conservation	16
3.3.9	Open Water	16
3.4	BIOLOGICAL HAZARDS	17
3.4.1	Animals	17
3.4.2	Insects	17
3.4.3	Plants	17
3.4.4	Coronavirus	18
3.4.4.1	General Preventative Measures	18
3.4.4.2	Construction Trailers	18
3.4.4.3	Communication	18
3.4.4.4	Sick/Ill Workers	18
3.5	ADDITIONAL SAFETY ANALYSIS	19
3.5.1	Presence of Non-Aqueous Phase Liquids (NAPL)	19
3.6	JOB SAFETY ANALYSIS	19
4.0	PERSONNEL TRAINING	20
4.1	BASIC TRAINING	20
4.2	INITIAL SITE-SPECIFIC TRAINING	20
4.3	TAILGATE SAFETY BRIEFINGS	20
5.0	MEDICAL SURVEILLANCE	21
6.0	PERSONAL PROTECTIVE EQUIPMENT	21
6.1	LEVELS OF PROTECTION	21
6.2	RESPIRATOR FIT-TEST	22
6.3	RESPIRATOR CARTRIDGE CHANGE-OUT SCHEDULE	22
7.0	AIR QUALITY MONITORING AND ACTION LEVELS	23
7.1	MONITORING DURING SITE OPERATIONS	23
7.1.1	Volatile Organic Compounds	23
7.1.2	Metals	24
7.2	MONITORING EQUIPMENT CALIBRATION AND MAINTENANCE	24
7.3	DETERMINATION OF BACKGROUND LEVELS	24
8.0	COMMUNITY AIR MONITORING PROGRAM	25
8.1	DUST SUPPRESSION TECHNIQUES	26
9.0	WORK ZONES AND DECONTAMINATION	26
9.1	SITE CONTROL	26
9.2	CONTAMINATION ZONE	27
9.2.1	Personnel Decontamination Station	27
9.2.2	Minimization of Contact with Contaminants	27
9.2.3	Personnel Decontamination Sequence	27
9.2.4	Emergency Decontamination	27
9.2.5	Hand-Held Equipment Decontamination	28
9.2.6	Heavy Equipment Decontamination	28
9.3	SUPPORT ZONE	28
9.4	COMMUNICATIONS	29

9.5	THE BUDDY SYSTEM.....	29
10.0	NEAREST MEDICAL ASSISTANCE	29
11.0	STANDING ORDERS/SAFE WORK PRACTICES	30
12.0	SITE SECURITY	30
13.0	UNDERGROUND UTILITIES	30
14.0	SITE SAFETY INSPECTION.....	30
15.0	HAND AND POWER TOOLS	30
16.0	EMERGENCY RESPONSE	31
16.1	GENERAL.....	31
16.2	RESPONSIBILITIES.....	31
16.2.1	Health and Safety Officer (HSO)	31
16.2.2	Emergency Coordinator	31
16.2.3	Site Personnel	32
16.3	COMMUNICATIONS	32
16.4	LOCAL EMERGENCY SUPPORT UNITS	32
16.5	PRE-EMERGENCY PLANNING	32
16.6	EMERGENCY MEDICAL TREATMENT	33
16.8	EMERGENCY SITE EVACUATION ROUTES AND PROCEDURES	33
16.8.1	Designated Assembly Locations	34
16.8.2	Accounting for Personnel.....	34
16.9	FIRE PREVENTION AND PROTECTION.....	34
16.9.1	Fire Prevention	35
16.10	SIGNIFICANT VAPOR RELEASE.....	35
16.11	OVERT CHEMICAL EXPOSURE	35
16.12	DECONTAMINATION DURING MEDICAL EMERGENCIES.....	36
16.13	ADVERSE WEATHER CONDITIONS	36
16.14	SPILL CONTROL AND RESPONSE	36
16.15	EMERGENCY EQUIPMENT	38
16.16	RESTORATION AND SALVAGE	38
16.17	DOCUMENTATION.....	38
17.0	SPECIAL CONDITIONS.....	38
17.1	SCOPE.....	38
17.2	RESPONSIBILITIES.....	38
17.3	PROCEDURES.....	39
17.3.1	Ladders.....	39
17.3.1.1	Ladder Use	39
17.3.1.2	Portable Ladders.....	39
17.3.1.3	Step Stools.....	40
17.3.1.4	Extension Ladders	40
17.3.1.5	Inspection	40
17.3.2	First Aid/Cardiopulmonary Resuscitation (CPR)	40
17.3.2.1	Emergency Procedures	40
17.3.2.2	First Aid Supplies.....	41
17.3.3	Hydrogen Sulfide.....	41
17.3.3.1	Characteristics	41
17.3.3.2	Health Effects.....	42
17.3.3.3	Protective Clothing and Equipment	42

17.3.3.4	Emergency and First Aid Procedures	43
19.3.4	Fire Protection/Extinguishers	44
17.3.5	Overhead lines	44
17.3.5.1	Vehicle and Equipment Clearance	44
17.3.6	Trade Secret	45
17.3.7	Bloodborne Pathogens	45
17.3.7.1	Training	46
17.3.7.2	Recordkeeping	48
18.0	RECORDKEEPING	48
18.1	FIELD CHANGE AUTHORIZATION REQUEST	49
18.2	MEDICAL AND TRAINING RECORDS	49
18.3	ONSITE LOG	49
18.4	DAILY SAFETY MEETINGS ("TAILGATE TALKS")	49
18.5	EXPOSURE RECORDS	49
18.6	HAZARD COMMUNICATION PROGRAM/MSDS-SDS	49
18.7	DOCUMENTATION	49
18.7.1	Accident and Injury Report Forms	50
18.7.1.1	Accident/Incident Report	50
18.7.1.2	First Aid Treatment Record	50
18.7.1.3	OSHA Form 300	50
19.0	CONFINED SPACE ENTRY	50
20.0	HASP ACKNOWLEDGEMENT FORM	50

LIST OF TABLES

Table 1	Task Hazard Analysis
Table 2	Contaminant Hazards of Concern
Table 3	Summary of Monitoring Equipment
Table 4	Instrumentation Action Levels
Table 5	Emergency Notification List*
Table 6	Suggested Frequency of Physiological Monitoring For Fit and Acclimated Workers
Table 7	Heat Index

LIST OF FIGURES

Figure 1	Site Location Map
Figure 2	Route to Hospital (map with directions)*

LIST OF APPENDICES

Attachment A	Standing Orders*
Attachment B	Decontamination Procedures
Attachment C	Employee Exposure/Injury Incident Report
Attachment D	Calibration Log
Attachment E	Material Data Safety Sheets / Safety Data Sheets*
Attachment F	Jobsite Safety Inspection Checklist
Attachment G	Job Safety Analysis Forms
Attachment H	Tailgate Safety Meeting Log

* Items to be posted prominently on site, or made readily available to personnel.

1.0 INTRODUCTION

1.1 General

This HEALTH AND SAFETY PLAN (HASP) was developed to address disturbance of known and reasonably anticipated subsurface contaminants and comply with Occupational Safety and Health Administration (OSHA) Standard 29 CFR 1910.120(b)(4), *Hazardous Waste Operations and Emergency Response* during anticipated site work for the property located at 2409 Jerome Avenue in the Fordham Heights neighborhood of the Bronx, New York (the "Site"). The Site is identified as Bronx Borough Block 3199, Lots 106 and 113. All contractors performing work on this site shall implement their own HASP that, at a minimum, adheres to this HASP. The contractor is responsible for their own health and safety and that of their subcontractors. Langan personnel will implement this HASP while onsite.

The management of the day-to-day site activities and implementation of this HASP in the field is the responsibility of the site Langan Field Team Leader (FTL). Assistance in the implementation of this HASP can also be obtained from the Langan Health and Safety Officer (HSO) and the Langan Health and Safety Manager (HSM). Contractors operating on the site shall designate their own FTL, HSO and HSM. The content of this HASP may change or undergo revision based upon additional information made available to health and safety personnel, monitoring results, or changes in the work plan.

1.2 Site Location and Background

The Site is located at 2409 Jerome Avenue in the Fordham Heights neighborhood of the Bronx and is identified as New York City Tax Block 3199, Lots 106 and 113. A site location map is provided as Figure 1. The Site is rectangular and encompasses an area of about 25,200 square feet (0.58 acres). The Site is occupied by an asphalt-paved parking lot (Lot 113) and two one-story structures used for automotive repair (Lot 106). The site is bound by a two-story commercial building (2415 Jerome Ave) followed by West Fordham Road to the north, Jerome Avenue to the east, a two-story academic facility (2375 Jerome Avenue) followed by West 184th Street to the south, and five-story multi-family residential buildings (2390-2410 Davidson Avenue) followed by Davidson Avenue to the west.

The site was historically used as a fuel dispensing station from 1927 to 1989 and for automotive repair from 1927 to present day. Several petroleum bulk storage (PBS) tanks are associated with the site: (1) one out-of-service 550-gallon waste oil UST; (2) one in-service 50-gallon transmission fluid aboveground storage tank (AST); (3) 13 closed 550-gallon gasoline USTs; and (4) one closed 4,000-gallon gasoline UST. The closed USTs were decommissioned and removed from the site.

between 1988 and 1991.

1.3 Summary of Work Tasks

1.3.1 Geophysical Investigation

Prior to the commencement of intrusive field activities (i.e., soil borings); a geophysical consultant may conduct a geophysical survey using ground penetrating radar (GPR) and electromagnetic detection equipment. Langan personnel will coordinate the geophysical survey. The objective of the survey will be to identify any underground storage tank (UST) structures, drains, underground utilities, and other subsurface anomalies that may be encountered during the investigation. During this time Langan personnel will inspect the site and confirm sample locations.

1.3.2 Hand Clearing of Borehole Locations

If there is no geophysical survey for utility clearance or the results of the geophysical survey are inconclusive at specific locations subject to intrusive work, the contractor may hand clear each location to confirm utilities or other known or suspected subsurface structures. Hand clearing of a soil boring location should extend to a depth of 5-feet and be about 1.5 times the anticipated diameter of the borehole when drilled. Langan personnel will confirm that hand clearing activities are completed to these specifications.

1.3.3 Waste Characterization - Soil Investigation and Sampling

Langan may retain a drilling contractor to advance soil borings to a depth below grade surface (bgs) specified in the work plan using an indoor drilling device. Borings locations will be based on the results of site inspection and document review. The drilling contractor will contact the appropriate utility mark-out authority and make available to their drilling staff the verification number and effective dates. The borings may be filled with clean soil cuttings after samples are collected.

Langan will screen soil for visual, olfactory, and instrumental indicators suggestive of a potential petroleum release. Instrument screening for the presence of volatile organic compounds (VOCs) may be performed with a duly calibrated Photoionization Detector (PID). Langan will collect soil samples from the two-foot interval exhibiting the greatest degree of visual, olfactory, instrumental impact, and as otherwise specified in the work plan. Soil samples will be submitted to a New York State Department of Health (NYSDOH) Environmental Laboratory Approval Program (ELAP)-certified laboratory and analyzed in accordance with work plan specifications.

1.3.4 Decommissioning and Removal of Above Ground and Underground Storage Tanks

Langan will retain an Underground Storage Tank (UST) decommissioning and removal contractor to furnish all labor and materials, equipment and incidentals required for the proper decontamination, removal and closure of any USt in accordance with federal, state and local regulations. The removal contractor will contact the appropriate utility mark-out authority and make available to their staff the verification number and effective dates. Langan personnel will monitor air with a calibrated PID and lower explosion limit (LEL) device downwind from the AST/UST excavation and record the PID and LEL readings.

1.3.5 Excavation Observation and Screening

As part of the excavation activities, Langan personnel will observe soil excavation per the work plan. If encountered, debris from the demolition of a concrete slab may be segregated for separate disposal. Langan will report the location of the concrete debris stockpile and note if the contractor has complied with the concrete debris stockpile instructions when specified in the work plan.

Langan will screen excavated spoil material for visual, olfactory, and instrumental indicators suggestive of a potential chemical or petroleum release. Instrument screening for the presence of VOCs may be performed with a duly field-calibrated PID. Contractors will excavate for utilities, foundation components and potential grading using heavy equipment and hand tools in such a manner as to avoid negatively impacting buried utilities or foundation components. Contractors will notify Langan personnel if they identify indications suggestive of a potential chemical or petroleum release.

Langan will coordinate trucking in cooperation with the soil disposal contractors. Langan will only sign non-hazardous manifests if instructed by the Project Manager (PM) and provide the specific language. Langan is not to sign hazardous waste manifests unless specifically instructed by the PM to do so. Langan will record the information associated with each manifest as specified in the work plan. Contaminated material shall be handled and properly disposed in accordance with federal, state and city regulations, criteria and guidelines. If excavation occurs over several days, Langan will confirm that the contractor has placed a barrier around the excavation and stockpile to prevent 3rd party injury.

1.3.6 Soil Screening & Reporting

As part of excavation activities, the Langan personnel will report when they have observed visual and olfactory indications of possible soil impact. Langan personnel will also report concentrations of VOCs above background when using a duly calibrated hand held PID, or equivalent.

1.3.7 Soil Sampling

As part of the excavation activities, soil samples (waste characterization, excavation endpoint, delineation, or quality assurance/quality control [QA/QC]) may be collected during construction, as required. Langan personnel will coordinate with the contractor in sampling soil (in accordance with the work plan, where applicable).

Soil samples excavation endpoint or delineation sampling (along with QA/QC samples) may be collected and subsequently submitted to a NYSDOH ELAP-certified laboratory and analyzed in accordance with work plan specifications.

1.3.8 Characterization of Excavated Material

When required by the work plan, Langan personnel will characterize excavated soil or clean backfill in accordance with Langan standards.

1.3.9 Stockpiling

Potentially impacted soil may be stockpiled pending laboratory analysis and determining proper off-site disposal. Visibly contaminated soil, if encountered, shall be segregated and stockpiled on at least 10 millimeters of plastic sheeting; reusable soil and fill shall be segregated and stockpiled separately from unusable fill, concrete and other debris; the stockpiles shall be kept covered with 6 millimeters thick plastic sheeting; the plastic sheeting covering the stockpiles shall be anchored firmly in place by weights, stakes, or both; the Contractor shall maintain the plastic sheeting.

1.3.10 Equipment Decontamination

Before the start of the day's sampling and after sampling each run, sampling equipment will be decontaminated by the decontamination process outlined Attachment B - Decontamination Procedures. Decontamination wastes and purge water will be temporarily stored on site pending analytical results.

1.3.11 Construction Activity Inspections and Observations

Langan will observe construction activities including the general oversight, observation of landscaping activities, and other select observation project management and supervision as specified in the work plan or in accordance with the construction documents, or special inspection requirements administered by the New York City Department of Buildings. Materials used for construction will be inspected by Langan for conformance to the design documents.

1.3.12 Management of Investigative-Derived Waste

The investigative-derived waste (IDW) generated during this investigation will be contained in DOT-approved 55-gallon drums. The drums will be temporarily stored on the site or as directed by the client representative. All drums will be filled between to two-thirds full to allow easy maneuvering during drum pickup and disposal. Drum labels are to be provided by Langan (Environmental Closet). All drums will be labeled as "IDW Pending Analysis" until sample data are reported from the laboratory. Drum labels will include date filled and locations where waste was generated along with the standard information required by the labels in accordance with the Langan SOP09, Drum Labeling..

Closed top drums are to be used to store liquids. Debris, including plastic sheeting, polyethylene tubing, personal protection equipment (PPE), decontamination debris, etc. will be segregated from and disposed in large heavy duty garbage bags and disposed of at the site. Excess unused glassware should be returned to the lab along with the last day of collection samples.

1.3.13 Drum Sampling

Langan personnel may collect drum samples, as required, prior to off-site drum disposal. Samples will be placed into laboratory-supplied batch-certified clean glassware and submitted to an approved laboratory and analyzed in accordance with work plan specifications, if required.

1.3.14 Surveying

Surveying activities defined in the work plan may be completed by Langan. Surveying will be conducted by licensed surveyors.

2.0 IDENTIFICATION OF KEY PERSONNEL/HEALTH AND SAFETY PERSONNEL

The following briefly describes the health and safety (H&S) designations and general responsibilities that may be employed for this site. The titles have been established to accommodate the project needs and requirements and ensure the safe conduct of site activities. The H&S personnel requirements for a given work location are based upon the proposed site activities.

2.1 Langan Project Manager

The Langan Environmental Project Manager (PM) is Greg Wyka, his responsibilities include:

- Ensuring that this HASP is developed, current, and approved prior to on-site activities.

- Ensuring that all the tasks in the project are performed in a manner consistent with Langan's comprehensive *Health and Safety Program for Hazardous Waste Operations* and this HASP.

2.2 Langan Corporate Health and Safety Manager

The Langan Corporate Health and Safety Manager (HSM) is Tony Moffa. His responsibilities include:

- Updating the *Construction Health and Safety Program for Hazardous Waste Operations*.
- Assisting the site Health and Safety Officer (HSO) with development of the HASP, updating HASP as dictated by changing conditions, jobsite inspection results, etc. and approving changes to this HASP.
- Assisting the HSO in the implementation of this HASP and conducting Jobsite Safety Inspections and assisting with communication of results and correction of shortcomings found.
- Maintaining records on personnel (medical evaluation results, training and certifications, accident investigation results, etc.).

2.3 Langan Site Health & Safety Officer

The Langan HSO is William Bohrer. His responsibilities include:

- Participating in the development and implementation of this HASP.
- When on-site, assisting the Langan Field Team Leader in conducting Tailgate Safety Meetings and Jobsite Safety Inspections and correcting any shortcomings in a timely manner.
- Ensuring that proper PPE is available, worn by employees, and properly stored and maintained.
- Controlling entry into and exit from the site contaminated areas or zones.
- Monitoring employees for signs of stress, such as heat stress, fatigue, and cold exposure.
- Monitoring site hazards and conditions.
- Knowing (and ensuring that all site personnel also know) emergency procedures, evacuation routes, and the telephone numbers of the ambulance, local hospital, poison control center, fire department, and police department.
- Resolving conflicts that may arise concerning safety requirements and working conditions.
- Reporting all incidents, injuries and near misses to the Langan Incident/Injury Hotline immediately and the client representative.

2.4 Langan Field Team Leader Responsibilities

The Langan Field Team Leader (FTL) will be determined prior to the start of the start of field activities. The Field Team Leader's responsibilities include:

- The management of the day-to-day site activities and implementation of this HASP in the field.
- Participating in and/or conducting Tailgate Safety Meetings and Jobsite Safety Inspections and correcting any shortcomings in a timely manner.
- When a Community Air Monitoring Operating Program (CAMP) is part of the scope, the FTL will set up and maintaining community air monitoring activities and instructing the responsible contractor to implement organic vapor or dust mitigation when necessary.
- Overseeing the implementation of activities specified in the work plan.

2.5 Contractor Responsibilities

The contractor shall develop and implement their own HASP for their employees, lower-tier subcontractors, and consultants. The contractor is responsible for their own health and safety and that of their subcontractors. Contractors operating on the site shall designate their own FTL, HSO and HSM. The contractor's HASP will be at least as stringent as this Langan HASP. The contractor must be familiar with and abide by the requirements outlined in their own HASP. A contractor may elect to adopt Langan's HASP as its own provided that it has given written notification to Langan, but where Langan's HASP excludes provisions pertinent to the contractor's work (i.e., confined space entry); the contractor must provide written addendums to this HASP. Additionally, the contractor must:

- Ensure their employees are trained in the use of all appropriate PPE for the tasks involved;
- Notify Langan of any hazardous material brought onto the job site or site related area, the hazards associated with the material, and must provide a material safety data sheet (MSDS) or safety data sheet (SDS) for the material;
- Have knowledge of, understand, and abide by all current federal, state, and local health and safety regulations pertinent to the work;
- Ensure their employees handling hazardous materials, if identified at the site, have received current training in the appropriate levels of 29 CFR 1910.120, *Hazardous Waste Operations and Emergency Response* (HAZWOPER) if hazardous waste is identified at the Site;
- Ensure their employees handling hazardous materials, if identified at the Site, have been fit-tested within the year on the type respirator they will wear; and
- Ensure all air monitoring is in place pertaining to the health and safety of their employees as required by OSHA 1910.120; and

- All contractors must adhere to all federal, state, and local regulatory requirements.

3.0 TASK/OPERATION SAFETY AND HEALTH RISK ANALYSES

A Task-Hazard Analysis (Table 1) was completed for general construction hazards that may be encountered at the Site. The potential contaminants that might be encountered during the field activities and the exposure limits are listed in Table 2 complete inventory of MSDS/SDS for chemical products used on site is included as Attachment E.

3.1 Specific Task Safety Analysis

3.1.1 Geophysical Survey

Langan personnel are not permitted to operate or otherwise handle the geophysical equipment including any downhole geophysical equipment subsequently used to survey boreholes. When boring locations are surveyed with surface geophysical equipment, the locations of the borings as well as possible utilities and other artifacts that may interfere with the subsurface investigation are to be marked with indelible paint, flags, or color tape (when marking indoor locations that the client has specifically requested not be marked with indelible paint). This information must also be added to the site map. When applying paint, proper PPE including at a minimum hand protections should be used.

3.1.2 Hand Clearing of Borehole Locations

Hand clearing will be completed by the contractor. Langan personnel are not permitted to operate or otherwise handle the contractor equipment. Langan will update the site map to include the locations of the cleared borehole locations as well as possible utilities and other artifacts that may interfere with the subsurface investigation.

3.1.3 Waste Classification

Hand surveying or sampling the soil requires the donning of chemical resistant gloves in addition to the standard PPE. Langan employees are not to operate drilling equipment nor open sampling devices (acetate liners, sonic sample bags, etc.). These tasks are to be completed by the driller contractor.

3.1.4 Removal of UST

If UST excavation and removal activity is initiated, Langan personnel will conduct air monitoring for LEL conditions within the UST excavation itself. This task is to be performed using calibrated air monitoring equipment designed to sound an audio alarm when atmospheric concentrations

of VOC are within 10% of the LEL. In normal atmospheric oxygen concentrations, the LEL monitoring may be done with a Wheatstone bridge/catalytic bead type sensor (i.e. MultiRAE). However in oxygen depleted atmospheres (confined space), only an LEL designed to work in low oxygen environments may be used. Best practices require that the LEL monitoring unit be equipped with a long sniffer tube to allow the LEL unit to remain outside the UST excavation. Langan personnel are not to enter the UST excavation nor enter an excavated UST.

In addition to monitoring LEL, Langan personnel will monitor atmospheric VOC concentrations directly downwind of the UST excavation in accordance with standard CAMP procedures using calibrated air monitoring equipment.

3.1.5 Excavation and Soil Screening

Langan personnel will observe excavation and SOE activities including the general oversight, observation of landscaping activities, and other select observation project management and supervision as specified in the work plan or in accordance with the construction documents, or special inspection requirements administered by the New York City Department of Buildings. Materials used for construction may be inspected by Langan personnel for conformance to the design documents. Prior to entering excavation, Langan personnel will insure that excavation shoring conforms to proper shoring/benching/sloping techniques, at a minimum that soil and equipment is kept at least 2 feet from the edge of the excavation, that there is no water in the excavation, and that a competent person has inspected excavation prior to allow persons to enter. When entering excavation via a ladder, Langan personnel will only use ladders that are properly situated in accordance with the ladder section of the CHASP.

Sampling the soil requires the donning of chemical resistant gloves in addition to the standard PPE. Langan personnel are not to operate nor direct the use of excavation equipment. These tasks are to be completed by the excavation contractor.

3.1.6 Stockpile Sampling

Langan personnel are not to scale or otherwise climb stockpiles. If the soil sampling plan requires sampling from the stockpile above ground level, samples are to be obtained using suitable excavation equipment operated by the contractor (i.e. front end loader).

3.1.7 Indoor Drilling and Excavation

The work scope may require indoor drilling or drilling in locations where there may not be adequate ventilation sufficient to safely operate any rig or excavation equipment powered by an internal combustion engine. Where possible, all such work should be done by equipment

powered by electricity. If such equipment is used and must be directly wired to the buildings electrical system or to an independent system, this work must be completed by a licensed electrician in accordance with all electrical codes applicable to the work.

Indoor work which is to be completed with equipment powered by an internal combustion engine must incorporate air monitoring of carbon monoxide (CO) using calibrated air monitoring equipment (MultiRAE or equivalent). In addition, the work plan should incorporate mitigation for venting engine exhaust fumes directly to the outdoors and for circulating fresh air into the work area.

The OSHA Time Weighted Average (TWA) Permissible Exposure Limit (PEL) for CO from 50 to 35 parts per million (ppm). Langan will monitor CO with a suitable monitoring device. If CO levels exceed 5 ppm, Langan will instruct contractors to begin mitigation measures. These measures are at a minimum:

- Increase air circulation using industrial size fans to bring additional fresh air into the building or vent exhaust to the outside;
- Modify the passive exhaust method being used to increase venting circulation by using wider diameter tubing or sealing tubing connections; or
- Modify the work schedule where the rig is turned off to allow time for CO levels to fall back to background

All work must cease if CO levels reach 35 ppm. The Langan engineer is to report to the PM and H&S officer when an action level is reached.

3.1.8 Soil Investigation and Sampling

Sampling the soil requires the donning of chemical resistant gloves in addition to the standard PPE. Langan personnel are not to operate drilling or excavation equipment nor open sampling devices (acetate liners, sonic sample bags, etc.). These tasks are to be completed by the driller or excavation contractor.

3.1.9 Construction Activity Inspection

The contractor will operate equipment used during site construction. Langan personnel will observe construction activities in accordance with specification in the work plan and record the data the work plan requires. Construction activities are to be done exclusively by the contractor following their own health and safety specifications outlined in their HASPs. Langan personnel are not to operate or assist in the operation of equipment used in construction activities unless defined as part of an inspection or observation in the work plan.

3.1.10 Drum Sampling

Drilling fluid, rinse water, grossly-contaminated soil samples and cuttings will be containerized in 55-gallon drums for disposed off-site. Each drum must be labeled in accordance with the Langan Drum Labeling Standard Operating Procedure (SOP-#9). Sampling drums requires the donning of work gloves when opening the drums and chemical resistant gloves when sampling in addition to standard PPE.

Langan personnel and contractors are not to move or opened any orphaned (unlabeled) drum found on the site without approval of the project manager.

3.2 Radiation Hazards

No radiation hazards are known or expected at the site.

3.3 Physical Hazards

Physical hazards, which may be encountered during site operations for this project, are detailed in Table 1.

3.3.1 Explosion

No explosion hazards are expected for the scope of work at this site.

3.3.2 Heat Stress

The use of Level C protective equipment, or greater, may create heat stress. Monitoring of personnel wearing personal protective clothing should commence when the ambient temperature is 72°F or above. Table 6 presents the suggested frequency for such monitoring. Monitoring frequency should increase as ambient temperature increases or as slow recovery rates are observed. Refer to the Table 7 to assist in assessing when the risk for heat related illness is likely. To use this table, the ambient temperature and relative humidity must be obtained (a regional weather report should suffice). Heat stress monitoring should be performed by the HSO or the FTL, who shall be able to recognize symptoms related to heat stress.

To monitor the workers, be familiar with the following heat-related disorders and their symptoms:

- **Heat Cramps:** Painful spasm of arm, leg or abdominal muscles, during or after work
- **Heat Exhaustion:** Headache, nausea, dizziness; cool, clammy, moist skin; heavy sweating; weak, fast pulse; shallow respiration, normal temperature

- **Heat Stroke:** Headache, nausea, weakness, hot dry skin, fever, rapid strong pulse, rapid deep respirations, loss of consciousness, convulsions, coma. *This is a life threatening condition.*

Do not permit a worker to wear a semi-permeable or impermeable garment when they are showing signs or symptoms of heat-related illness.

To monitor the worker, measure:

- **Heart rate:** Count the radial pulse during a 30-second period as early as possible in the rest period. If the heart rate exceeds 100 beats per minute at the beginning of the rest period, shorten the next work cycle by one-third and keep the rest period the same. If the heart rate still exceeds 100 beats per minute at the next rest period, shorten the following work cycle by one-third. A worker cannot return to work after a rest period until their heart rate is below 100 beats per minute.
- **Oral temperature:** Use a clinical thermometer (3 minutes under the tongue) or similar device to measure the oral temperature at the end of the work period (before drinking). If oral temperature exceeds 99.6°F (37.6°C), shorten the next work cycle by one-third without changing the rest period. A worker cannot return to work after a rest period until their oral temperature is below 99.6°F. If oral temperature still exceeds 99.6°F (37.6°C) at the beginning of the next rest period, shorten the following cycle by one-third. Do not permit a worker to wear a semi-permeable or impermeable garment when oral temperature exceeds 100.6°F (38.1°C).

Prevention of Heat Stress - Proper training and preventative measures will aid in averting loss of worker productivity and serious illness. Heat stress prevention is particularly important because once a person suffers from heat stroke or heat exhaustion, that person may be predisposed to additional heat related illness. To avoid heat stress the following steps should be taken:

- Adjust work schedules.
- Mandate work slowdowns as needed.
- Perform work during cooler hours of the day if possible or at night if adequate lighting can be provided.
- Provide shelter (air-conditioned, if possible) or shaded areas to protect personnel during rest periods.
- Maintain worker's body fluids at normal levels. This is necessary to ensure that the cardiovascular system functions adequately. Daily fluid intake must approximately equal the amount of water lost in sweat, i.e., eight fluid ounces (0.23 liters) of water must be ingested for approximately every eight ounces (0.23 kg) of weight lost. The normal thirst mechanism is not sensitive enough to ensure that enough water will be drunk to replace

lost sweat. When heavy sweating occurs, encourage the worker to drink more. The following strategies may be useful:

- Maintain water temperature 50° to 60°F (10° to 16.6°C).
- Provide small disposal cups that hold about four ounces (0.1 liter).
- Have workers drink 16 ounces (0.5 liters) of fluid (preferably water or dilute drinks) before beginning work.
- Urge workers to drink a cup or two every 15 to 20 minutes, or at each monitoring break. A total of 1 to 1.6 gallons (4 to 6 liters) of fluid per day are recommended, but more may be necessary to maintain body weight.
- Train workers to recognize the symptoms of heat related illness.

3.3.3 Cold-Related Illness

If work on this project begins in the winter months, thermal injury due to cold exposure can become a problem for field personnel. Systemic cold exposure is referred to as hypothermia. Local cold exposure is generally called frostbite.

- **Hypothermia** - Hypothermia is defined as a decrease in the patient core temperature below 96°F. The body temperature is normally maintained by a combination of central (brain and spinal cord) and peripheral (skin and muscle) activity. Interference with any of these mechanisms can result in hypothermia, even in the absence of what normally is considered a "cold" ambient temperature. Symptoms of hypothermia include: shivering, apathy, listlessness, sleepiness, and unconsciousness.
- **Frostbite** - Frostbite is both a general and medical term given to areas of local cold injury. Unlike systemic hypothermia, frostbite rarely occurs unless the ambient temperatures are less than freezing and usually less than 20°F. Symptoms of frostbite are: a sudden blanching or whitening of the skin; the skin has a waxy or white appearance and is firm to the touch; tissues are cold, pale, and solid.

Prevention of Cold-Related Illness - To prevent cold-related illness:

- Educate workers to recognize the symptoms of frostbite and hypothermia
- Identify and limit known risk factors:
- Assure the availability of enclosed, heated environment on or adjacent to the site.
- Assure the availability of dry changes of clothing.
- Assure the availability of warm drinks.
- Start (oral) temperature recording at the job site:
- At the FSO or Field Team Leader's discretion when suspicion is based on changes in a worker's performance or mental status.
- At a worker's request.

- As a screening measure, two times per shift, under unusually hazardous conditions (e.g., wind-chill less than 20°F, or wind-chill less than 30°F with precipitation).
- As a screening measure whenever anyone worker on the site develops hypothermia.

Any person developing moderate hypothermia (a core temperature of 92°F) cannot return to work for 48 hours.

3.3.4 Noise

Work activities during the proposed activities may be conducted at locations with high noise levels from the operation of equipment. Hearing protection will be used as necessary.

3.3.5 Hand and Power Tools

The use of hand and power tools can present a variety of hazards, including physical harm from being struck by flying objects, being cut or struck by the tool, fire, and electrocution. All hand and power tools should be inspected for health and safety hazards prior to use. If deemed unserviceable/un-operable, notify supervisor and tag equipment out of service. Ground Fault Circuit Interrupters (GFCI) are required for all power tools requiring direct electrical service.

3.3.6 Slips, Trips and Fall Hazards

Care should be exercised when walking at the site, especially when carrying equipment. The presence of surface debris, uneven surfaces, pits, facility equipment, and soil piles contribute to tripping hazards and fall hazards. To the extent possible, all hazards should be identified and marked on the site, with hazards communicated to all workers in the area.

3.3.7 Utilities (Electrocution and Fire Hazards)

3.3.7.1 Utility Clearance

The possibility of encountering underground utilities poses fire, explosion, and electrocution hazards. All excavation work will be preceded by review of available utility drawings and by notification of the subsurface work to the N.Y. One –Call–Center.

3.3.7.2 Lockout-Tagout

The potential adverse effects of electrical hazards include burns and electrocution, which could result in death. Therefore, there is a procedure that establishes the requirements for the lockout/tagout (LOTO) of energy isolating devices in accordance with the OSHA electrical lockout and tagging requirements as specified in 29 CFR 1926.417. This procedure will be used to ensure

that all machines and equipment are isolated from potentially hazardous energy. If possible, equipment that could cause injury due to unexpected energizing, start-up, or release of stored energy will be locked/tagged, before field personnel perform work activities.

Depending upon the specific work task involved, Langan's SSC or FTL will serve as the authorized lockout/tagout coordinator, implement the lockout/tagout procedure and will be responsible to locate, lock and tag valves, switches, etc.

SPECIAL NOTE: Project personnel will assume that all electrical equipment at surface, subsurface and overhead locations is energized, until equipment has been designated and confirmed as de-energized by a utility company representative. Langan will notify the designated utility representative prior to working adjacent to this equipment and will verify that the equipment is energized or de-energized in the vicinity of the work location.

No project work shall be performed by Langan personnel or subcontractors on or near energized electrical lines or equipment unless hazard assessments are completed in writing, reviewed by Langan's SSSH, and clearly communicated to the field personnel.

The FTL shall conduct a survey to locate and identify all energy isolating devices. They shall be certain which switches, valves or other isolating devices apply to the equipment. The lockout/tagout procedure involves, but is not limited to, electricity, motors, steam, natural gas, compressed air, hydraulic systems, digesters, sewers, etc.

3.3.8 Physical Hazard Considerations for Material Handling

There are moderate to severe risks associated with moving heavy objects at the Site. The following physical hazards should be considered when handling materials at the Site:

- Heavy objects will be lifted and moved by mechanical devices rather than manual effort whenever possible.
- The mechanical devices will be appropriate for the lifting of moving task and will be operated only by trained and authorized personnel.
- Objects that require special handling or rigging will only be moved under the guidance of a person who has been specifically trained to move such objects.
- Lifting devices will be inspected, certified, and labeled to confirm their weight capacities. Defective equipment will be taken out of service immediately and repaired or destroyed.
- The wheels of any trucks being loaded or unloaded will be chocked to prevent movement. Outriggers will be fully extended on a flat, firm surface during operation.

- Personnel will not pass under a raised load, nor will a suspended load be left unattended.
- Personnel will not be carried on lifting equipment, unless it is specifically designed to carry passengers.
- All reciprocating, rotating, or other moving parts will be guarded at all times.
- Accessible fire extinguishers, currently (monthly) inspected, will be available in all mechanical lifting devices.
- Verify all loads/materials are secure before transportation.

Material handling tasks that are unusual or require specific guidance will need a written addendum to this HASP. The addendum must identify the lifting protocols before the tasks are performed. Upon approval, the plan must be reviewed with all affected employees and documented. Any deviation from a written plan will require approval by the Langan HSM.

3.3.9 Hearing Conservation

Under the construction industry standard, the maximum permissible occupational noise exposure is 90 dbA (8-hour TWA), and noise levels in excess of 90 dbA must be reduced through feasible administrative and engineering controls (20 CFR 1926.52). Hearing protection is required when working within 15 feet of vacuum extraction equipment and drill rigs.

3.3.9 Open Water

Employees working over or near water, where the danger of drowning exists, shall be provided with U.S. Coast Guard-approved life jackets or buoyant work vests. Prior to and after each use, the buoyant work vests or life preservers shall be inspected for defects which would alter their strength or buoyancy. Defective units shall not be used.

And should a worker fall into the water, OSHA requires (29 CFR 1926.106(c)) that ring buoys with at least 90 feet of line shall be provided and readily available for emergency rescue operations. The distance between ring buoys shall not exceed 200 feet. Another remedial action required by OSHA (29 CFR 1926.106(d)) is the use of lifesaving skiffs.

OSHA requires that at least one lifesaving skiff shall be immediately available at locations where employees are working over or adjacent to water and must include the following provisions.

- The skiff must be in the water or capable of being quickly launched by one person.
- At least one person must be present and specifically designated to respond to water emergencies and operate the skiff at all times when there are employees above water.
- When the operator is on break another operator must be designated to provide requisite coverage when there are employees above water.

- The designated operator must either have the skiff staffed at all times or have someone remain in the immediate area such that the operator can quickly reach the skiff and perform rescue services.
- The skiff operator maybe assigned other tasks provided the tasks do not interfere with the operator's ability to quickly reach the skiff.
- A communication system, such as a walkie-talkie, must be used to inform the skiff operator of an emergency and to inform the skiff operator where the skiff is needed.
- The skiff must be equipped with both a motor and oars.

With regard to the number of skiffs required and the appropriate maximum response time, the following factors must be evaluated:

- The number of work locations where there is a danger of falling into water;
- The distance to each of those locations;
- Water temperature and currents;
- Other hazards such as, but not limited to, rapids, dams, and water intakes;

Other regulations that present S&H practices and PPE for work on or near water include: 29 CFR 1910, Subpart T (401 – 440)

3.4 Biological Hazards

3.4.1 Animals

There is a possibility of encountering wildlife including reptiles, rodents and other small and medium size mammals. The Langan personnel is to avoid interacting with any wildlife.

3.4.2 Insects

Ticks and other biting or stinging insects may to be encountered during site operations. Langan personnel should take necessary precautions including donning long sleeve shirts and insecticide to prevent bites and stings. After field work, Langan personnel should perform a complete visual inspection of their clothing to insure they are not inadvertently harboring ticks. If they do observe a tick bite, they are to contact the HSM or HSO and report the event.

3.4.3 Plants

Poisonous plants may to be encountered during site operations. Langan personnel should take necessary precautions including donning long sleeve shirts and applying preventative poison Ivy/Sumac lotion to prevent or limit effects of exposure. If after field work, Langan employees do observe a reaction to poisonous plant exposure, they are to contact the HSM or HSO and report the event.

3.4.4 Coronavirus

3.4.4.1 General Preventative Measures

Field personnel must follow general proper hygiene measures while in the field including:

- Avoid touching eyes, nose and mouth.
- Cover cough or sneeze with tissue, and throw in trash.
- Wash hands often with soap and water for 20 seconds after going to bathroom, before eating, after blowing nose, coughing or sneezing.
- Use hand sanitizer with at least 60% alcohol if soap and water are not available.
- Avoid physical contact with other people (e.g., no handshakes).
- Maintain a safe distance of at least 6 feet from other people (social distancing).
- Wear face coverings when around other worker to minimize spread of COVID-19. (May be required in certain states or locations.)

3.4.4.2 Construction Trailers

Employees should avoid use of shared construction trailers or where employees cannot maintain a safe distance (minimum 6 feet) from other workers. If trailer use is needed, areas such as desks, phones, chairs and other common areas, should be cleaned and disinfected before and after use. Protocols should be developed to minimize trailer use to essential personal, restrict use from any workers who are ill or showing symptoms of being ill, and ensure a safe distance of 6 feet can be established between workers.

3.4.4.3 Communication

Include Coronavirus topics and prevention topics in daily tailgate meetings to ensure Coronavirus awareness is communicated daily. Discussions can focus on general topics including: social distancing, prevention measures for field personnel, signs and symptoms and recent news on the Coronavirus. Site-specific topics should include minimizing face-to-face contact, disinfecting/sterilizing field equipment, use of PPE to reduce exposure, site security and other potential exposure issues/concerns.

3.4.4.4 Sick/Ill Workers

No Langan employee is permitted to be onsite when ill and/or showing potential symptoms of the Coronavirus. Symptoms of the Coronavirus may appear 2-14 days after exposure and can range from mild to severe. The most common symptoms include: fever, fatigue, dry cough and shortness of breath. If an employee or subcontractor is observed being ill or exhibiting symptoms of Coronavirus, employees must immediately utilize their Stop Work Authority and contact their

project manager to address the situation. If an employee observes another worker onsite exhibiting symptoms of Coronavirus, immediately utilize Stop Work Authority and notify their project manager and site construction manager or safety officer. Work should resume when the safety and health of Langan and subcontractors is adequately addressed.

3.5 Additional Safety Analysis

3.5.1 Presence of Non-Aqueous Phase Liquids (NAPL)

There is potential for exposure to NAPL at this site. Special care and PPE should be considered when NAPL is observed as NAPL is a typically flammable fluid and releases VOCs known to be toxic and/or carcinogenic. If NAPL is present in a monitoring well, vapors from the well casing may contaminate the work area breathing zone with concentrations of VOCs potentially exceeding health and safety action levels. In addition, all equipment used to monitor or sample NAPL (or ground water from wells containing NAPL) must be intrinsically safe. Equipment that directly contacts NAPL must also be resistant to organic solvents.

At a minimum, a PID should be used to monitor for VOCs when NAPL is observed. If NAPL is expected to be observed in an excavation or enclosed area, air monitoring must be started using calibrated air monitoring equipment designed to sound an audio alarm when atmospheric concentrations of VOC are within 10% of the LEL. In normal atmospheric oxygen concentrations, the LEL monitoring may be done with a Wheatstone bridge/catalytic bead type sensor (i.e. MultiRAE). However in oxygen depleted atmospheres (confined space), only an LEL designed to work in low oxygen environments may be used. Best practices require that the LEL monitoring unit be equipped with a long sniffer tube to allow the LEL unit to remain outside the UST excavation.

When NAPL is present, Langan personnel are required to use disposable nitrile gloves at all times to prevent skin contact with contaminated materials. They should also consider having available a respirator and protective clothing (Tyvek® overalls), especially if NAPL is in abundance and there are high concentrations of VOCs.

All contaminated disposables including PPE and sampling equipment must be properly disposed of in labeled 55-gallon drums

3.6 Job Safety Analysis

A Job Safety Analysis (JSA) is a process to identify existing and potential hazards associated with each job or task so these hazards can be eliminated, controlled or minimized. A JSA will be performed at the beginning of each work day, and additionally whenever an employee begins a

new task or moves to a new location. All JSAs must be developed and reviewed by all parties involved. A blank JSA form and documentation of completed JSAs are in Attachment G.

4.0 PERSONNEL TRAINING

4.1 Basic Training

Completion of an initial 40-hour HAZWOPER training program as detailed in OSHA's 29 CFR 1910.120(e) is required for all employees working on a site engaged in hazardous substance removal or other activities which expose or potentially expose workers to hazardous substances, health hazards, or safety hazards as defined by 29 CFR 1910.120(a). Annual 8-hour refresher training is also required to maintain competencies to ensure a safe work environment. In addition to these training requirements, all employees must complete the OSHA 10 hour Construction Safety and Health training and supervisory personnel must also receive eight additional hours of specialized management training. Training records are maintained by the HSM.

4.2 Initial Site-Specific Training

Training will be provided to specifically address the activities, procedures, monitoring, and equipment for site operations at the beginning of each field mobilization and the beginning of each discrete phase of work. The training will include the site and facility layout, hazards, and emergency services at the site, and will detail all the provisions contained within this HASP. For a HAZWOPER operation, training on the site must be for a minimum of 3 days. Specific issues that will be addressed include the hazards described in Section 3.0.

4.3 Tailgate Safety Briefings

Before starting work each day or as needed, the Langan HSO will conduct a brief tailgate safety meeting to assist site personnel in conducting their activities safely. Tailgate meetings will be documented in Attachment H. Briefings will include the following:

- Work plan for the day;
- Review of safety information relevant to planned tasks and environmental conditions;
- New activities/task being conducted;
- Results of Jobsite Safety Inspection Checklist;
- Changes in work practices;
- Safe work practices; and
- Discussion and remedies for noted or observed deficiencies.

5.0 MEDICAL SURVEILLANCE

All personnel who will be performing field work involving potential exposure to toxic and hazardous substances (defined by 29 CFR 1910.120(a)) will be required to have passed an initial baseline medical examination, with follow-up medical exams thereafter, consistent with 29 CFR 1910.120(f). Medical evaluations will be performed by, or under the direction of, a physician board-certified in occupational medicine.

Additionally, personnel who may be required to perform work while wearing a respirator must receive medical clearance as required under CFR 1910.134(e), *Respiratory Protection*. Medical evaluations will be performed by, or under the direction of, a physician board-certified in occupational medicine. Results of medical evaluations are maintained by the HSM.

6.0 PERSONAL PROTECTIVE EQUIPMENT

6.1 Levels of Protection

Langan will provide PPE to Langan employees to protect them from the specific hazards they are likely to encounter on-site. Direct hired contractors will provide their employees with equivalent PPE to protect them from the specific hazards likely to be encountered on-site. Selection of the appropriate PPE must take into consideration: (1) identification of the hazards or suspected hazards; (2) potential exposure routes; and, (3) the performance of the PPE construction (materials and seams) in providing a barrier to these hazards.

Based on anticipated site conditions and the proposed work activities to be performed at the site, Level D protection will be used. The upgrading/downgrading of the level of protection will be based on continuous air monitoring results as described in Section 6.0 (when applicable). The decision to modify standard PPE will be made by the site HSO or FTL after conferring with the PM. The levels of protection are described below.

Level D Protection (as needed)

- Safety glasses with side shields or chemical splash goggles
- Safety boots/shoes
- Coveralls (Tyvek® or equivalent)
- Hard hat
- Long sleeve work shirt and work pants
- Nitrile gloves
- Hearing protection
- Reflective safety vest

Level D Protection (Modified, as needed)

- Safety glasses with sideshields or chemical splash goggles
- Safety boots/shoes (toe-protected)
- Disposable chemical-resistant boot covers
- Coveralls (polycoated Tyvek or equivalent to be worn when contact with wet contaminated soil, groundwater, or non-aqueous phase liquids is anticipated)
- Hard hat
- Long sleeve work shirt and work pants
- Nitrile gloves
- Hearing protection (as needed)
- Personal floatation device (for work within 5 feet of the water)
- Reflective traffic vest

Level C Protection (as needed)

- Full or Half face, air-purifying respirator, with NIOSH approved HEPA filter
- Inner (latex) and outer (nitrile) chemical-resistant gloves
- Safety glasses with side shields or chemical splash goggles
- Chemical-resistant safety boots/shoes
- Hard hat
- Long sleeve work shirt and work pants
- Coveralls (Tyvek® or equivalent)
- Hearing protection (as needed)
- Reflective safety vest

The action levels used in determining the necessary levels of respiratory protection and upgrading to Level C are summarized in Table 4. The written Respiratory Protection Program is maintained by the HSM and is available if needed. The monitoring procedures and equipment are outlined in Section 6.0 (when applicable).

6.2 Respirator Fit-Test

All Langan employees who may be exposed to hazardous substances at the work site are in possession of a full- or half-face, air-purifying respirator and have been successfully fit-tested within the past year. Fit-test records are maintained by the HSM.

6.3 Respirator Cartridge Change-Out Schedule

Respiratory protection is required to be worn when certain action levels (table 2) are reached. A

respirator cartridge change-out schedule has been developed in order to comply with 29 CFR 1910.134. The respirator cartridge change-out schedule for this project is as follows:

- Cartridges shall be removed and disposed of at the end of each shift, when cartridges become wet or wearer experiences breakthrough, whichever occurs first.
- If the humidity exceeds 85%, then cartridges shall be removed and disposed of after 4 hours of use.

Respirators shall not be stored at the end of the shift with contaminated cartridges left on. Cartridges shall not be worn on the second day, no matter how short the time period was the previous day they were used.

7.0 AIR QUALITY MONITORING AND ACTION LEVELS

7.1 Monitoring During Site Operations

Atmospheric air monitoring results may be collected and used to provide data to determine when exclusion zones need to be established and when certain levels of personal protective equipment are required. For all instruments there are Site-specific action level criteria which are used in making field health and safety determinations. Other data, such as the visible presence of contamination or the steady state nature of air contaminant concentration, are also used in making field health and safety decisions. Therefore, the HSO may establish an exclusion zone or require a person to wear a respirator even though atmospheric air contaminant concentrations are below established HASP action levels.

During site work involving disturbance of petroleum-impacted or fill material, real time air monitoring may be conducted for volatile organic compounds (VOCs). A photoionization detector (PID) and/or flame ionization detector (FID) will be used to monitor concentrations of VOCs at personnel breathing-zone height. Air monitoring will be the responsibility of the HSO or designee. Air monitoring may be conducted during intrusive activities associated with the completion of excavation, debris removal, and soil grading. All manufacturers' instructions for instrumentation and calibration will be available onsite.

Subcontractors' air monitoring plans must be equal or more stringent as the Langan plan.

An air monitoring calibration log is provided in Attachment D of this HASP.

7.1.1 Volatile Organic Compounds

Monitoring with a PID, such as a MiniRAE 2000 (10.6v) or equivalent may occur during intrusive work in the AOCs. Colormetric Indicator Tubes for benzene may be used as backup for the PID,

if measurements remain above background monitor every 2 hours. The HSO will monitor the employee breathing zone at least every 30 minutes, or whenever there is any indication that concentrations may have changed (odors, visible gases, etc.) since the last measurement. If VOC levels are observed above 5 ppm for longer than 5 minutes or if the site PPE is upgraded to Level C, the HSO will begin monitoring the site perimeter at a location downwind of the AOC every 30 minutes in addition to the employee breathing zone. Instrument action levels for monitored gases are provided in Table 4.

7.1.2 Metals

Based upon the site historical fill, there is a potential for the soils to contain PAHs and metals. During invasive procedures which have the potential for creating airborne dust, such as excavation of dry soils, a real time airborne dust monitor such as a Mini-Ram may be used to monitor for air particulates. The HSO will monitor the employee breathing zone at least every 30 minutes, or whenever there is any indication that concentrations may have changed (appearance of visible dust) since the last measurement. If dust levels are observed to be greater than 0.100 mg/m³ or visible dust is observed for longer than 15 minutes or if the site PPE is upgraded to Level C, the HSO will begin monitoring the site perimeter at a location downwind of the AOC every 30 minutes in addition to the employee breathing zone. Instrument action levels for dust monitoring are provided in Table 4.

7.2 Monitoring Equipment Calibration and Maintenance

Instrument calibration shall be documented and included in a dedicated safety and health logbook or on separate calibration pages of the field book. All instruments shall be calibrated before and after each shift. Calibration checks may be used during the day to confirm instrument accuracy. Duplicate readings may be taken to confirm individual instrument response.

All instruments shall be operated in accordance with the manufacturers' specifications. Manufacturers' literature, including an operations manual for each piece of monitoring equipment will be maintained on site by the HSO for reference.

7.3 Determination of Background Levels

Background (BKD) levels for VOCs and dust will be established prior to intrusive activities within the AOC at an upwind location. A notation of BKD levels will be referenced in the daily monitoring log. BKD levels are a function of prevailing conditions. BKD levels will be taken in an appropriate upwind location as determined by the HSO.

Table 4 lists the instrument action levels.

8.0 COMMUNITY AIR MONITORING PROGRAM

Community air monitoring may be conducted in compliance with local standards or the generic CAMP outlined below:

Monitoring for dust and odors will be conducted during all ground intrusive activities by the FTL. Continuous monitoring on the perimeter of the work zones for odor, VOCs, and dust may be required for all ground intrusive activities such as soil excavation and handling activities. The work zone is defined as the general area in which machinery is operating in support of remediation activities. A portable PID will be used to monitor the work zone and for periodic monitoring for VOCs during activities such as soil and groundwater sampling and soil excavation. The site perimeter will be monitored for fugitive dust emissions by visual observations as well as instrumentation measurements (if required). When required, particulate or dust will be monitored continuously with real-time field instrumentation that will meet, at a minimum, the local standards or, default to the performance standards below:

If VOC monitoring is required, the following actions will be taken based on VOC levels measured:

- If total VOC levels exceed 5 ppm above background for the 15-minute average at the perimeter, work activities will be temporarily halted and monitoring continued. If levels readily decrease (per instantaneous readings) below 5 ppm above background, work activities will resume with continued monitoring.
- If total VOC levels at the downwind perimeter of the hot zone persist at levels in excess of 5 ppm above background but less than 25 ppm, work activities will be halted, the source of vapors identified, corrective actions taken to abate emissions, and monitoring continued. After these steps work activities will resume provided that the total organic vapor level 200 feet downwind of the hot zone or half the distance to the nearest potential receptor or residential/commercial structure, whichever is less – but in no case less than 20 feet, is below 5 ppm above background for the 15-minute average.
- If the total VOC level is above 25 ppm at the perimeter of the hot zone, activities will be shut down.

If dust monitoring with field instrumentation is required, the following actions will be taken based on instrumentation measurements:

- If the downwind particulate level is 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) greater than background (upwind perimeter) for the 15-minute period or if airborne dust is observed leaving the work area, then dust suppression must be employed. Work may continue with dust suppression techniques provided that downwind PM10 levels do not exceed $150 \mu\text{g}/\text{m}^3$ above the background level and provided that no visible dust is migrating from

the work area.

- If, after implementation of dust suppression techniques, downwind PM10 levels are greater than 150 $\mu\text{g}/\text{m}^3$ above the background level, work must be stopped and a re-evaluation of activities initiated. Work can resume provided that dust suppression measures and other controls are successful in reducing the downwind PM10 concentration to within 150 $\mu\text{g}/\text{m}^3$ of the upwind level and in preventing visible dust migration.

8.1 Dust Suppression Techniques

Preventative measures for dust generation may include wetting site fill and soil, construction of an engineered construction entrance with gravel pad, a truck wash area, covering soils with tarps, and limiting vehicle speeds to five miles per hour.

Work practices to minimize odors and vapors include limiting the time that the excavations remain open, minimizing stockpiling of contaminated-source soil, and minimizing the handling of contaminated material. Offending odor and organic vapor controls may include the application of foam suppressants or tarps over the odor or VOC source areas. Foam suppressants may include biodegradable foams applied over the source material for short-term control of the odor and VOCs.

If odors develop and cannot be otherwise controlled, additional means to eliminate odor nuisances will include: direct load-out of soils to trucks for off-site disposal; use of chemical odorants in spray or misting systems; and, use of staff to monitor odors in surrounding neighborhoods.

Where odor nuisances have developed during remedial work and cannot be corrected, or where the release of nuisance odors cannot otherwise be avoided due to on-site conditions or close proximity to sensitive receptors, odor control will be achieved by sheltering excavation and handling areas under tented containment structures equipped with appropriate air venting/filtering systems.

9.0 WORK ZONES AND DECONTAMINATION

9.1 Site Control

Work zones are intended to control the potential spread of contamination throughout the site and to assure that only authorized individuals are permitted into potentially hazardous areas.

Any person working in an area where the potential for exposure to site contaminants exists will

only be allowed access after providing the HSO with proper training and medical documentation.

Exclusion Zone (EZ) - All activities which may involve exposure to site contaminants, hazardous materials and/or conditions should be considered an EZ. Decontamination of field equipment will also be conducted in the Contaminant Reduction Zone (CRZ) which will be located on the perimeter of the EZ. The EZ and the CRZ will be clearly delineated by cones, tapes or other means. The HSO may establish more than one EZ where different levels of protection may be employed or different hazards exist. The size of the EZ shall be determined by the HSO allowing adequate space for the activity to be completed, field members and emergency equipment.

9.2 Contamination Zone

9.2.1 Personnel Decontamination Station

Personal hygiene, coupled with diligent decontamination, will significantly reduce the potential for exposure.

9.2.2 Minimization of Contact with Contaminants

During completion of all site activities, personnel should attempt to minimize the chance of contact with contaminated materials. This involves a conscientious effort to keep "clean" during site activities. All personnel should minimize kneeling, splash generation, and other physical contact with contamination as PPE is intended to minimize accidental contact. This may ultimately minimize the degree of decontamination required and the generation of waste materials from site operations.

Field procedures will be developed to control over spray and runoff and to ensure that unprotected personnel working nearby are not affected.

9.2.3 Personnel Decontamination Sequence

Decontamination may be performed by removing all PPE used in EZ and placing it in drums/trash cans at the CRZ. Baby wipes should be available for wiping hands and face. Drums/trash cans will be labeled by the field crews in accordance with all local, state, and federal requirements. Management plans for contaminated PPE, and tools are provided below.

9.2.4 Emergency Decontamination

If circumstances dictate that contaminated clothing cannot be readily removed, then remove gross contamination and wrap injured personnel with clean garments/blankets to avoid contaminating other personnel or transporting equipment. If the injured person can be moved,

he/she will be decontaminated by site personnel as described above before emergency responders handle the victim. If the person cannot be moved because of the extent of the injury (a back or neck injury), provisions shall be made to ensure that emergency response personnel will be able to respond to the victim without being exposed to potentially hazardous atmospheric conditions. If the potential for inhalation hazards exist, such as with open excavation, this area will be covered with polyethylene sheeting to eliminate any potential inhalation hazards. All emergency personnel are to be immediately informed of the injured person's condition, potential contaminants, and provided with all pertinent data.

9.2.5 Hand-Held Equipment Decontamination

Hand-held equipment includes all monitoring instruments as stated earlier, samples, hand tools, and notebooks. The hand-held equipment is dropped at the first decontamination station to be decontaminated by one of the decontamination team members. These items must be decontaminated or discarded as waste prior to removal from the CRZ.

To aid in decontamination, monitoring instruments can be sealed in plastic bags or wrapped in polyethylene. This will also protect the instruments against contaminants. The instruments will be wiped clean using wipes or paper towels if contamination is visually evident. Sampling equipment, hand tools, etc. will be cleaned with non-phosphorous soap to remove any potentially contaminated soil, and rinsed with deionized water. All decontamination fluids will be containerized and stored on-site pending waste characterization sampling and appropriate off-site disposal.

9.2.6 Heavy Equipment Decontamination

All heavy equipment and vehicles arriving at the work site will be free from contamination from offsite sources. Any vehicles arriving to work that are suspected of being impacted will not be permitted on the work site. Potentially contaminated heavy equipment will not be permitted to leave the EZ unless it has been thoroughly decontaminated and visually inspected by the HSO or his designee.

9.3 Support Zone

The support zone or cold zone will include the remaining areas of the job site. Break areas and support facilities (include equipment storage and maintenance areas) will be located in this zone. No equipment or personnel will be permitted to enter the cold zone from the hot zone without passing through the decontamination station in the warm zone (if necessitated). Eating, smoking, and drinking will be allowed only in this area.

9.4 Communications

The following communications equipment will be utilized as appropriate.

- Telephones - A cellular telephone will be located with the HSO for communication with the HSM and emergency support services/facilities.
- Hand Signals - Hand signals shall be used by field teams, along with the buddy system. The entire field team shall know them before operations commence and their use covered during site-specific training. Typical hand signals are the following:

Hand Signal	Meaning
Hand gripping throat	Out of air; cannot breathe
Grip partners wrists or place both hands around waist	Leave immediately without debate
Hands on top of head	Need assistance
Thumbs up	OK; I'm alright; I understand
Thumbs down	No; negative
Simulated "stick" break with fists	Take a break; stop work

9.5 The Buddy System

When working in teams of two or more, workers will use the "buddy system" for all work activities to ensure that rapid assistance can be provided in the event of an emergency. This requires work groups to be organized such that workers can remain close together and maintain visual contact with one another. Workers using the "buddy system" have the following responsibilities:

- Provide his/her partner with assistance.
- Observe his/her partner for signs of chemical or heat exposure.
- Periodically check the integrity of his/her partner's PPE.
- Notify the HSO or other site personnel if emergency service is needed.

10.0 NEAREST MEDICAL ASSISTANCE

The address and telephone number of the nearest hospital:

North Central Bronx Hospital
3424 Kossuth Avenue
Bronx, New York
718-519-3500

Map with directions to the hospital are shown in Figure 2. This information will either be posted prominently at the site or will be available to all personnel all of the time. Further, all field

personnel, including the HSO & FTL, will know the directions to the hospital.

11.0 STANDING ORDERS/SAFE WORK PRACTICES

The standing orders, which consist of a description of safe work practices that must always be followed while on-site by Langan employees and contractors, are shown in Attachment A. The site HSO and FTL each have the responsibility for enforcing these practices. The standing orders will be posted prominently at the site, or are made available to all personnel at all times. Those who do not abide by these safe work practices will be removed from the site.

12.0 SITE SECURITY

No unauthorized personnel shall be permitted access to the work areas.

13.0 UNDERGROUND UTILITIES

As provided in Langan's Underground Utility Clearance Guidelines, the following safe work practices should be followed by Langan personnel and the contractor before and during subsurface work in accordance with federal, state and local regulations:

- Obtain available utility drawings from the property owner/client or operator.
- Provide utility drawings to the project team.
- In the field, mark the proposed area of subsurface disturbance (when possible).
- Ensure that the utility clearance system has been notified.
- Ensure that utilities are marked before beginning subsurface work.
- Discuss subsurface work locations with the owner/client and contractors.
- Obtain approval from the owner/client and operators for proposed subsurface work locations.
- Use safe digging procedures when applicable.
- Stay at least 10 feet from all equipment performing subsurface work.

14.0 SITE SAFETY INSPECTION

The Langan HSO or alternate will check the work area daily, at the beginning and end of each work shift or more frequently to ensure safe work conditions. The HSO or alternate must complete the Jobsite Safety Inspection Checklist, found in Attachment F. Any deficiencies shall be shared with the FTL, HSM and PM and will be discussed at the daily tailgate meeting.

15.0 HAND AND POWER TOOLS

All hand- and electric-power tools and similar equipment shall be maintained in a safe operating

condition. All electric-power tools must be inspected before initial use. Damaged tools shall be removed immediately from service or repaired. Tools shall be used only for the purpose for which they were designed. All users must be properly trained in their safe operation.

16.0 EMERGENCY RESPONSE

16.1 General

This section establishes procedures and provides information for use during a project emergency. Emergencies happen unexpectedly and quickly, and require an immediate response; therefore, contingency planning and advanced training of staff is essential. Specific elements of emergency support procedures that are addressed in the following subsections include communications, local emergency support units, and preparation for medical emergencies, first aid for injuries incurred on site, record keeping, and emergency site evacuation procedures. In case of emergency, in addition to 911, call Incident Intervention® at 1-888-479-7787 to report their injuries. For all other communications, contact the Langan Incident Hotline at **(800) 9-LANGAN** (800-952-6426) extension 4699 as soon as possible.

Should outside assistance be needed for accidents, fire, or release of hazardous substances, the emergency numbers will be available and posted at the site (Table 5) where a readily accessible telephone is made available for emergency use.

16.2 Responsibilities

16.2.1 Health and Safety Officer (HSO)

The HSO is responsible for ensuring that all personnel are evacuated safely and that machinery and processes are shut down or stabilized in the event of a stop work order or evacuation. The HSO is responsible for ensuring the HSM are notified of all incidents, all injuries, near misses, fires, spills, releases or equipment damage. The HSO is required to immediately notify the HSM of any fatalities or catastrophes (three or more workers injured and hospitalized) so that the HSM can notify OSHA within the required time frame.

16.2.2 Emergency Coordinator

The HSO or their designated alternate will serve as the Emergency Coordinator. The Emergency Coordinator is responsible for ensuring that all personnel are evacuated safely and that machinery and processes are shut down or stabilized in the event of a stop work order or evacuation. They are also responsible for ensuring the HSM are notified of all incidents, all injuries, near misses, fires, spills, releases or equipment damage. The Emergency Coordinator is required to immediately notify the HSM of any fatalities or catastrophes (three or more workers injured and

hospitalized.

The Emergency Coordinator shall locate emergency phone numbers and identify hospital routes prior to beginning work on the sites. The Emergency Coordinator shall make necessary arrangements to be prepared for any emergencies that could occur.

The Emergency Coordinator is responsible for implementing the Emergency Response Plan.

16.2.3 Site Personnel

Project site personnel are responsible for knowing the Emergency Response Plan and the procedures contained herein. Personnel are expected to notify the Emergency Coordinator of situations that could constitute a site emergency. Project site personnel, including all subcontractors will be trained in the Emergency Response Plan.

16.3 Communications

Once an emergency situation has been stabilized, or as soon as practically, the injured Langan personnel should contact [Incident Intervention@](mailto:Incident.Intervention@) at 1-888-479-7787 to report their injuries. For all other communications, contact the Langan Incident Hotline at **(800) 9-LANGAN** (800-952-6426) extension 4699 as soon as possible.

16.4 Local Emergency Support Units

In order to be able to deal with any emergency that might occur during investigative activities at the site, the Emergency Notification Numbers (Table 5) will be posted and provided to all personnel conducting work within the EZ.

Figure 2 shows the hospital route map. Outside emergency number 911 and local ambulance should be relied on for response to medical emergencies and transport to emergency rooms. Always contact first responders when there are serious or life threatening emergencies on the site. Project personnel are instructed not to drive injured personnel to the Hospital. In the event of an injury, provide first aid and keep the injured party calm and protected from the elements and treat for shock when necessary.

16.5 Pre-Emergency Planning

Langan will communicate directly with administrative personnel from the emergency room at the hospital in order to determine whether the hospital has the facilities and personnel needed to treat cases of trauma resulting from any of the contaminants expected to be found on the site. Instructions for finding the hospital will be posted conspicuously in the site office and in each site

vehicle.

16.6 Emergency Medical Treatment

The procedures and rules in this CHASP are designed to prevent employee injury. However, should an injury occur, no matter how slight, immediately report it will be reported to the HSO. First-aid equipment will be available on site at the following locations:

- First Aid Kit: Contractor Vehicles
- Emergency Eye Wash: Contractor Vehicles

During the site safety briefing, project personnel will be informed of the location of the first aid station(s) that has been set up. Some injuries, such as severe cuts and lacerations or burns, may require immediate treatment. Any first aid instructions that can be obtained from doctors or paramedics, before an emergency-response squad arrives at the site or before the injured person can be transported to the hospital, will be followed closely. Personnel with current first aid and CPR certification will be identified.

Only in non-emergency situations may an injured person be transported to an urgent care facility. Due to hazards that may be present at the site and the conditions under which operations are conducted, it is possible that an emergency situation may develop. Emergency situations can be characterized as injury or acute chemical exposure to personnel, fire or explosion, environmental release, or hazardous weather conditions.

16.8 Emergency Site Evacuation Routes and Procedures

All project personnel will be instructed on proper emergency response procedures and locations of emergency telephone numbers during the initial site safety meeting. If an emergency occurs as a result of the site investigation activities, including but not limited to fire, explosion or significant release of toxic gas into the atmosphere, the Langan Project Manager will be verbally notified immediately. All heavy equipment will be shut down and all personnel will evacuate the work areas and assemble at the nearest intersection to be accounted for and to receive further instructions.

In the event that an emergency situation arises, the FTL will implement an immediate evacuation of all project personnel due to immediate or impending danger. The FTL will also immediately communicate with the contractor to coordinate any needed evacuation of the property.

The FTL or Site Supervisor will give necessary instructions until the Designated Incident Commander (IC) assumes control. After the emergency has been resolved, the FTL or Site Supervisor will coordinate with the IC and indicate when staff should resume their normal duties.

If dangers are present for those at the designated assembly point, another designated location of assembly will be established.

It will be the responsibility of the FTL or Site Supervisor to report a fire or emergency, assess the seriousness of the situation, and initiate emergency measures until the arrival of the local fire fighters or other first responders, should they be necessary. The FTL, working with emergency responders, may also order the closure of the Site for an indefinite period as long as it is deemed necessary.

Under no circumstances will incoming visitors be allowed to proceed to the area of concern, once an emergency evacuation has been implemented. Visitors or other persons present in the area of the emergency shall be instructed to evacuate the area. The FTL will ensure that access roads are not obstructed and will remain on-site to provide stand-by assistance upon arrival of emergency personnel.

If it is necessary to temporarily control traffic in the event of an emergency, those persons controlling traffic will wear proper reflection warning vests until the arrival of police or fire personnel.

16.8.1 Designated Assembly Locations

All personnel will evacuate the site and assemble at a designated assembly location. The assembly location will be designated by Langan personnel and discussed during each shift's pre-job safety briefing.

16.8.2 Accounting for Personnel

All contractor and subcontractor supervisors are responsible for the accounting of all personnel assembled at the designed assembly area. The Designated Incident Commander shall be notified if personnel are not found.

16.9 Fire Prevention and Protection

In the event of a fire or explosion, procedures will include immediately evacuating the site and notification of the Langan Project Manager of the investigation activities. Portable fire extinguishers will be provided at the work zone. The extinguishers located in the various locations should also be identified prior to the start of work. No personnel will fight a fire beyond the stage where it can be put out with a portable extinguisher (incipient stage).

16.9.1 Fire Prevention

Fires will be prevented by adhering to the following precautions:

- Good housekeeping and storage of materials.
- Storage of flammable liquids and gases away from oxidizers.
- Shutting off engines to refuel.
- Grounding and bonding metal containers during transfer of flammable liquids.
- Use of UL approved flammable storage cans.
- Fire extinguishers rated at least 10 pounds ABC located on all heavy equipment, in all trailers and near all hot work activities.

The person responsible for the control of fuel source hazards and the maintenance of fire prevention and/or control equipment is the HSO.

16.10 Significant Vapor Release

Based on the proposed tasks, the potential for a significant vapor release is low. However, if a release occurs, the following steps will be taken:

- Move all personnel to an upwind location. All non-essential personnel shall evacuate.
- Upgrade to Level C Respiratory Protection.
- Downwind perimeter locations shall be monitored for volatile organics.
- If the release poses a potential threat to human health or the environment in the community, the Emergency Coordinator shall notify the Langan Project Manager.
- Local emergency response coordinators will be notified.

16.11 Overt Chemical Exposure

The following are standard procedures to treat chemical exposures. Other, specific procedures detailed on the Material Safety Data Sheet (MSDS) will be followed, when necessary.

SKIN AND EYE: Use copious amounts of soap and water from eye-wash kits and portable hand wash stations.

CONTACT: Wash/rinse affected areas thoroughly, then provide appropriate medical attention. Skin shall also be rinsed for 15 minutes if contact with caustics, acids or hydrogen peroxide occurs. Affected items of clothing shall also be removed from contact with skin.

Providing wash water and soap will be the responsibility of each individual contractor or subcontractor on-site.

16.12 Decontamination during Medical Emergencies

If emergency life-saving first aid and/or medical treatment is required, normal decontamination procedures may need to be abbreviated or omitted. The HSO or designee will accompany contaminated victims to the medical facility to advise on matters involving decontamination when necessary. The outer garments can be removed if they do not cause delays, interfere with treatment or aggravate the problem. Respiratory equipment must always be removed. Protective clothing can be cut away. If the outer contaminated garments cannot be safely removed on site, a plastic barrier placed between the injured individual and clean surfaces should be used to help prevent contamination of the inside of ambulances and/or medical personnel. Outer garments may then be removed at the medical facility. No attempt will be made to wash or rinse the victim if his/her injuries are life threatening, unless it is known that the individual has been contaminated with an extremely toxic or corrosive material which could also cause severe injury or loss of life to emergency response personnel. For minor medical problems or injuries, the normal decontamination procedures will be followed.

16.13 Adverse Weather Conditions

In the event of adverse weather conditions, the HSO will determine if work will continue without potentially risking the safety of all field workers. Some of the items to be considered prior to determining if work should continue are:

- Potential for heat stress and heat-related injuries.
- Potential for cold stress and cold-related injuries.
- Treacherous weather-related working conditions (hail, rain, snow, ice, high winds).
- Limited visibility (fog).
- Potential for electrical storms.
- Earthquakes.
- Other major incidents.

Site activities will be limited to daylight hours, or when suitable artificial light is provided, and acceptable weather conditions prevail. The HSO will determine the need to cease field operations or observe daily weather reports and evacuate, if necessary, in case of severe inclement weather conditions.

16.14 Spill Control and Response

All small spills/environmental releases shall be contained as close to the source as possible. Whenever possible, the MSDS will be consulted to assist in determining proper waste characterization and the best means of containment and cleanup. For small spills, sorbent materials such as sand, sawdust or commercial sorbents should be placed directly on the

substance to contain the spill and aid recovery. Any acid spills should be diluted or neutralized carefully prior to attempting recovery. Berms of earthen or sorbent materials can be used to contain the leading edge of the spills. All spill containment materials will be properly disposed. An exclusion zone of 50 to 100 feet around the spill area should be established depending on the size of the spill.

All contractor vehicles shall have spill kits on them with enough material to contain and absorb the worst-case spill from that vehicle. All vehicles and equipment shall be inspected prior to be admitted on site. Any vehicle or piece of equipment that develops a leak will be taken out of service and removed from the job site.

The following seven steps shall be taken by the Emergency Coordinator:

1. Determine the nature, identity and amounts of major spills.
2. Make sure all unnecessary persons are removed from the spill area.
3. Notify the HSO immediately.
4. Use proper PPE in consultation with the HSO.
5. If a flammable liquid, gas or vapor is involved, remove all ignition sources and use non-sparking and/or explosion-proof equipment to contain or clean up the spill (diesel-only vehicles, air-operated pumps, etc.)
6. If possible, try to stop the leak with appropriate material.
7. Remove all surrounding materials that can react or compound with the spill.

In addition to the spill control and response procedures described in this HASP, Langan personnel will coordinate with the designated project manager relative to spill response and control actions. Notification to the Project Manager must be immediate and, to the extent possible, include the following information:

- Time and location of the spill.
- Type and nature of the material spilled.
- Amount spilled.
- Whether the spill has affected or has a potential to affect a waterway or sewer.
- A brief description of affected areas/equipment.
- Whether the spill has been contained.
- Expected time of cleanup completion. If spill cleanup cannot be handled by Langan's on-site personnel alone, such fact must be conveyed to the Project Manager immediately.

Langan shall not make any notification of spills to outside agencies. The client will notify regulatory agencies as per their reporting procedures.

16.15 Emergency Equipment

The following minimum emergency equipment shall be kept and maintained on site:

- Industrial first aid kit.
- Fire extinguishers (one per site).

16.16 Restoration and Salvage

After an emergency, prompt restoration of utilities, fire protection equipment, medical supplies and other equipment will reduce the possibility of further losses. Some of the items that may need to be addressed are:

- Refilling fire extinguishers.
- Refilling medical supplies.
- Recharging eyewashes and/or showers.
- Replenishing spill control supplies.

16.17 Documentation

Immediately following an incident or near miss, unless emergency medical treatment is required, either the employee or a coworker must contact the Langan Incident/Injury Hotline at 1-(800)-9-LANGAN (ext. #4699) and the client representative to report the incident or near miss. For emergencies involving personnel injury and/or exposure, the HSO and affected employee will complete and submit an Employee Exposure/Injury Incident Report (Attachment C) to the Langan Corporate Health and Safety Manager as soon as possible following the incident.

17.0 SPECIAL CONDITIONS

This guideline contains information and requirements for special conditions that may not be routinely encountered.

17.1 Scope

The guideline applies to the specific projects identified within this document. Additional provisions will be addressed in each Site-Specific HASP, as needed.

17.2 Responsibilities

Site Personnel - All site personnel must be alert to safety hazards on work sites and take action to minimize such hazards. Personnel must utilize the buddy system, watch for inappropriate behavior, and be alert to changes in site conditions.

Health and Safety Officer (HSO) - The HSO is responsible for considering these procedures in the development of site specific HASPs. The HSO shall schedule frequent "tail gate" safety briefings to enhance safety awareness and discuss potential problems.

17.3 Procedures

The procedures outlined below shall be followed when such conditions are encountered.

17.3.1 Ladders

Langan safety procedures shall be used to ensure employee safety when using ladders in the office or work sites. All ladders shall be coated or repaired to prevent injury to the employee from punctures or lacerations and to prevent snagging or clothing. Any wood ladders used must have an opaque covering except for identification or warning labels, which may be placed on one face only of a side rail.

17.3.1.1 Ladder Use

Employees shall only use ladders for the purposes, which they were designed and shall not be used as scaffolding. Ladders will be maintained and inspected prior to use for slip hazards including oil and grease. Employees shall use ladders only on stable and level surfaces unless the ladder is secured to prevent possible displacement. Ladders should not be used on slippery surfaces unless secured or provided with slip resistant feet to prevent accidental displacement. Ladders should not be used in locations where they could be displaced by workplace activities or traffic. Ladder rungs, cleats and steps shall be parallel, level and uniformly spaced when the ladder is in the use position.

Employees should not be carrying anything including equipment that could cause injury if there was a fall while utilizing the ladder. The top and bottom of the ladder area must remain clear while in use. When ascending and descending the ladder, employees must face the ladder.

Ladders shall not be loaded beyond the maximum intended load for which they were built or the manufacturer's rated capacity.

17.3.1.2 Portable Ladders

Rungs, cleats and steps for portable ladders and fixed ladders shall be spaced not less than 10 inches apart, nor more than 14 inches apart, as measured between center lines of the rungs, cleats and steps. When used to access an upper landing surface, the ladder side rails must extend at least three feet above the upper landing surface to which the ladder is used to gain access. If this is not possible, due to the ladders length, then the top of the ladder shall be

secured at its top to a rigid support.

17.3.1.3 Step Stools

Rungs, cleats and steps of step stools shall not be less than 8 inches apart, nor more than 12 inches apart, as measured between center lines of the rungs, cleats and steps.

17.3.1.4 Extension Ladders

Rungs, cleats and steps of the base section of extension trestle ladders shall be spaced not less than 8 inches apart, nor more than 18 inches apart, as measured between center lines of the rungs, cleats and steps. The rung spacing on the extension section of the extension trestle ladder shall not be less than 6 inches nor more than 12 inches, as measured between center lines of the rungs, cleats and steps. Ladders shall be used at an angle such that the horizontal distance from the top support to the foot of the ladder is approximately one-quarter of the working length of the ladder (the distance along the ladder between the foot and the top support).

17.3.1.5 Inspection

Ladders will be inspected for visible defects periodically, prior to utilization or after any occurrence that could have negatively affected the ladder. Portable ladders with defects including broken or missing rungs, cleats, or steps, broken or split rails, corroded components or other faulty or defective components shall not be used. The ladder will be immediately marked as defective, tagged as "Do Not Use" or blocked from being used and removed from service until repaired.

17.3.2 First Aid/Cardiopulmonary Resuscitation (CPR)

Langan field and office personnel will be encouraged to be trained in First Aid and Cardiopulmonary Resuscitation (CPR). Training will be provided free of charge by Langan to all employees. Employees will receive a training certificate that will be kept on file with the Health & Safety Coordinator (HSC). Training and certification will be provided by a credited provider such as American Red Cross or equivalent.

17.3.2.1 Emergency Procedures

Prior to work at sites the Langan employees certified in first aid and CPR will be identified in the site specific HASP. Langan will endeavor to have at least one employee at a job site trained and able to render first aid and CPR. The site specific HASP will contain first aid information on both potential chemical and physical hazards. Emergency procedures to be followed are in case of injury or illnesses are provided in the HASP. The HASP will include emergency contact information including local police and fire departments, hospital emergency rooms, ambulance

services, on-site medical personnel and physicians. The HASP will also include directions and contact information to the nearest emergency facility in case immediate medical attention is required. The emergency contact information will be conspicuously posted at the worksite. Employees that are injured and require immediate medical attention shall call either 911 or the local posted emergency contacts. Employees should use ambulatory services to transport injured workers to the nearest facility for emergency medical care. In areas where 911 is not available, the telephone numbers of the physicians, hospitals, or ambulances shall be conspicuously posted.

17.3.2.2 First Aid Supplies

First aid supplies are readily available to all Langan employees when required. First aid kits are located in each Langan office. Portable first aid kits are available for employees to use at work sites. First aid kits should consist of items needed to treat employees for potential chemical and physical injuries. At a minimum, first aid kits should contain items to allow basic first aid to be rendered. Where the eyes or body of an employee may be exposed to corrosive materials, suitable facilities for quick drenching or flushing of the eyes and body shall be provided within the work area for immediate emergency use including eye wash.

First aid kits will be weatherproof with individual sealed packages of each item. All portable first aid kits shall be inspected by Langan employees before and after use to ensure all used items are replaced. When out in the field, employees shall check first aid kits weekly to ensure used items are replaced.

17.3.3 Hydrogen Sulfide

Langan employees with the potential to be exposed to hydrogen sulfide while at work sites shall have training in hydrogen sulfide awareness. The training will include identification of areas where employees could be exposed to hydrogen sulfide, health effects, permissible exposure limits, and first aid procedures and personnel protective equipment. Langan employees could be exposed to hydrogen sulfide while at job sites including petroleum refineries, hazardous waste treatment, storage and disposal facilities, uncontrolled hazardous waste sites and remediation projects.

17.3.3.1 Characteristics

Hydrogen sulfide is a colorless gas with a strong odor of rotten eggs that is soluble in water. Hydrogen sulfide is used to test and make other chemicals. It is also found as a by-product of chemical reactions, such as in sewer treatment. It is a highly flammable gas and a dangerous fire hazard. Poisonous gases are produced in fires including sulfur oxides. Hydrogen sulfide is

not listed as a carcinogen.

17.3.3.2 Health Effects

Hydrogen Sulfide can affect employees if inhaled or through contact with skin or eyes. Acute (or short term) health effects of hydrogen sulfide exposure include irritation of the nose and throat, dizziness, confusion, headache and trouble sleeping. Inhalation of hydrogen sulfide can irritate the lungs causing coughing and/or shortness of breath. Higher levels of exposure can cause build-up of fluid in the lungs (pulmonary edema), a medical emergency, with severe shortness of breath.

Chronic (or long term) health effects of low levels of exposure to hydrogen sulfide can cause pain and redness of the eyes with blurred vision. Repeated exposure may cause bronchitis with cough, phlegm and shortness of breath.

17.3.3.3 Protective Clothing and Equipment

Respirators are required for those operations in which employees will be exposed to hydrogen sulfide above OSHA permissible exposure level. The maximum OSHA permissible exposure limit (PEL) for hydrogen sulfide is 20 parts of hydrogen sulfide vapor per million parts of air (20 ppm) for an 8-hour workday and the maximum short-term exposure limit (STEL) is 10 ppm for any 10-minute period.

Where employees are exposed to levels up to 100 parts of hydrogen sulfide vapor per million parts of air (100 ppm), the following types of respiratory protection are allowed:

- Any powered, air purifying respirator with cartridge(s);
- Any air purifying, full-facepiece respirator (gas mask) with a chin style, front- or back-mounted canister;
- Any supplied air system with escape self-contained breathing apparatus, if applicable; and,
- Any self-contained breathing apparatus with a full facepiece.

Respirators used by employees must have joint Mine Safety and Health Administration and the National Institute for Occupational Safety and Health (NIOSH) seal of approval. Cartridges or canisters must be replaced before the end of their service life, or the end of the shift, whichever occurs first. Langan employees that have the potential to be exposed to hydrogen sulfide will be trained in the proper use of respirators. Respirator training is discussed under– Langan’s Respiratory Protection Program.

Employees with potential exposure to hydrogen sulfide, or when required by the client, will wear a portable hydrogen sulfide gas detector. The detector should have an audible, visual and vibrating alarm. The detector may also provide detection for carbon monoxide, sulfur dioxide and oxygen deficient atmospheres. The hydrogen sulfide monitor will, at a minimum, be calibrated to detect hydrogen sulfide at a level of 20 parts of hydrogen sulfide vapor per million parts of air (20 ppm). Many portable gas detectors will have factory defaults with a low level alarm at 10 ppm and a high level alarm at 15 ppm. Langan employees shall consult clients to determine if any site specific threshold levels exist.

If the hydrogen sulfide gas detector sounds and employees are not wearing appropriate respiratory protection, employees must immediately vacate the area and meet at the assigned emergency location. Langan employees may not re- enter the site without proper respiratory protection and approval from the client or property owner, if needed.

Employees shall wear PPE to prevent eye and skin contact with hydrogen sulfide. Employees must wear appropriate protective clothing including boots, gloves, sleeves and aprons, over any parts of their body that could be exposed to hydrogen sulfide. Non-vented, impact resistant goggles should be worn when working with or exposed to hydrogen sulfide.

17.3.3.4 Emergency and First Aid Procedures

Eye and Face Exposure

If hydrogen sulfide comes in contact with eyes, it should be washed out immediately with large amounts of water for 30 minutes, occasionally lifting the lower and upper eye lids. Seek medical attention immediately.

Skin Exposure

If hydrogen sulfide contaminates clothing or skin, remove the contaminated clothing immediately and wash the exposed skin with large amounts of water and soap. Seek medical attention immediately. Contaminated clothing should either be disposed of or washed before wearing again.

Breathing

If a Langan employee or other personnel breathe in hydrogen sulfide, immediately get the exposed person to fresh air. If breathing has stopped, artificial respiration should be started. Call for medical assistance or a doctor as soon as possible.

Safety Precautions

Hydrogen sulfide is a highly flammable gas and a dangerous fire hazard. Containers of hydrogen sulfide may explode in a fire situation. Poisonous gases are produced during fires.

Langan employees should contact property owners and operators prior to conducting work onsite to be aware of any site specific contingency plans, identify where hydrogen sulfide is used at the facility and be informed about additional safety rules or procedures.

19.3.4 Fire Protection/Extinguishers

Langan field personnel that have been provided with portable fire extinguishers for use at worksites will be trained to familiarize employees with general principles of fire extinguisher use and hazards associated with the incipient stage of firefighting. Training will be provided prior to initial assignment for field work and annually thereafter.

Portable fire extinguishers shall be visually inspected monthly and subjected to an annual maintenance check. Langan shall retain records of the annual maintenance date.

17.3.5 Overhead lines

When field work is performed near overhead lines, the lines shall be deenergized and grounded, or other protective measures shall be provided before the work shall commence. If overhead lines are to be deenergized, arrangements shall be made with the client, property owner or organization that operates or controls the electric circuits involved to deenergize and ground them. If protective measures, such as guarding, isolating, or insulating, are provided, these precautions shall prevent employees from contacting such lines directly with any part of their body or indirectly through conductive materials, tools, or equipment.

When unqualified Langan personnel are working in an elevated position near overhead lines, the location shall be such that the person and the longest conductive object they may contact cannot come closer to any unguarded, energized overhead line than the following distances:

1. For voltages to ground 50kV or below - 10 feet; and
2. For voltages to ground over 50kV - 10 feet, plus 4 inches for every 10kV over 50kV.

As previously indicated, Langan does not retain qualified employees to perform work on energized equipment.

17.3.5.1 Vehicle and Equipment Clearance

Any vehicle or mechanical equipment capable of having parts of its structure elevated near energized overhead lines shall be operated so that a clearance of 10 feet is maintained. If the voltage of the overhead lines is higher than 50kV, the clearance shall be increased 4 inches for

every 10kV over that voltage.

If any of the following discussed conditions occur, the clearance may be reduced.

- If the vehicle is in transit with its structure lowered, the clearance may be reduced to 4 ft. If the voltage is higher than 50kV, the clearance shall be increased 4 in. for every 10 kV over that voltage.
- If insulating barriers are installed to prevent contact with the lines, and if the barriers are rated for the voltage of the line being guarded and are not a part of or an attachment to the vehicle or its raised structure, the clearance may be reduced to a distance within the designed working dimensions of the insulating barrier.

Employees standing on the ground may not contact the vehicle or mechanical equipment or any of its attachments, unless the employee is using protective equipment rated for the voltage; or the equipment is located so that no uninsulated part of its structure (that portion of the structure that provides a conductive path to employees on the ground) can come closer to the overhead line than permitted.

If any vehicle or mechanical equipment capable of having parts of its structure elevated near energized overhead lines is intentionally grounded, employees working on the ground near the point of grounding may not stand at the grounding location whenever there is a possibility of overhead line contact. Additional precautions, such as the use of barricades or insulation, shall be taken to protect employees from hazardous ground potentials, depending on earth resistivity and fault currents, which can develop within the first few feet or more outward from the grounding point.

17.3.6 Trade Secret

Langan employees could potentially be provided trade secret information by the client or property owner when site specific information is provided about highly hazardous chemicals. Trade secret means any confidential formula, pattern, process, device, information or compilation of information that is used in an employer's business, and that gives the employer an opportunity to obtain an advantage over competitors who do not know or use it. Langan employees understand that this information should be kept confident and if required, may enter into a confidentially agreement with the client.

17.3.7 Bloodborne Pathogens

Langan employees that can reasonably anticipate exposure to blood or other potentially infectious material while at work sites shall have training in bloodborne pathogens. Applicable employees

would include those trained in first aid and serving a designated role as an emergency medical care provider. Bloodborne pathogens are pathogenic microorganisms that are present in human blood and can cause disease in humans. These pathogens include, but are not limited to, hepatitis B virus and human immunodeficiency virus.

17.3.7.1 Training

Langan employees with potential occupational exposure to blood or other potentially infectious material must participate in a training program. Training must be conducted prior to initial assignment where there would be potential for exposure and annually thereafter within one year of previous training. The training program will be provided to Langan employees at no cost to them and during working hours.

Langan will ensure the training program shall consist of the following:

- An accessible copy of the regulatory text of 29 CFR 1910.1030 and an explanation of its contents;
- A general explanation of the epidemiology and symptoms of bloodborne diseases;
- An explanation of the modes of transmission of bloodborne pathogens;
- An explanation of Langan's exposure control plan and the means by which the employee can obtain a copy of the written plan;
- An explanation of the appropriate methods for recognizing tasks and other activities that may involve exposure to blood and other potentially infectious materials;
- An explanation of the use and limitations of personal protective
 - equipment (PPE) to prevent and reduce exposure;
 - Information on the types, proper use, location, removal, handling and disposal of PPE;
 - An explanation of the basis for selection of PPE;
 - Information on the hepatitis B vaccine, including information on its efficacy, safety, method of administration, the benefits of being vaccinated, and that the vaccine and vaccination will be offered free of charge;
 - Information on the appropriate actions to take and persons to contact in an emergency involving blood or other potentially infectious materials;
 - An explanation of the procedure to follow if an exposure incident occurs, including the method of reporting the incident and the medical follow-up that will be made available;
 - Information on the post-exposure evaluation and follow-up that the
 - employer is required to provide for the employee following an exposure incident;
 - An explanation of the signs and labels and/or color coding required by paragraph 29 CFR 1910.1030(g)(1); and
 - An opportunity for interactive questions and answers with the person conducting the training session.

Langan will develop and implement a written Exposure Control Plan, which will be designed to eliminate or minimize employee exposure to bloodborne pathogens. The Exposure Control Plan will contain the following elements:

- An exposure determination for employees;
- The schedule and method of implementation for Methods of Compliance (29 CFR 191.1030(d)), Hepatitis B Vaccination and Post-Exposure Evaluation and Follow-up (29 CFR 1910.1030(f)), Communication of Hazards to Employees (29 CFR 1910.1030(g)) and (h) Recordkeeping (29 CFR 1910.1030(h));
- The procedure for the evaluation of circumstances surrounding exposure incidents;
- Ensure a copy of the Exposure Control Plan will be accessible to employees; and,
- The Exposure Control Plan shall be reviewed and updated at least annually.

Langan employees with occupational exposure to bloodborne pathogens include any employees trained in first aid that would be expected to provide emergency medical care. This determination is made without regards to the use of PPE, which could eliminate or minimize exposure.

Universal precautions shall be observed to prevent contact with blood or other potentially infectious materials. According to the concept of Universal Precautions, all human blood and certain human body fluids are treated as if known to be infectious for bloodborne pathogens. Under circumstances in which differentiation between body fluid types is difficult or impossible, all body fluids shall be considered potentially infectious materials.

Work practice controls shall be used to eliminate or minimize employee exposure, if applicable. Since Langan employees will have occupational exposure only during rendering of first aid, personnel protective equipment will be utilized to reduce or minimize exposure. PPE that could be available to Langan personnel when administering first aid includes safety glasses, gloves, and Tyvek suits or sleeves. PPE and first aid kits will be provided to employees at no cost to them.

Langan employees that render first aid in office areas will have access to hand washing facilities or restrooms. For first aid rendered at field locations, first aid kits will contain an appropriate antiseptic hand cleanser and clean cloth/paper towels or antiseptic towelettes. After using antiseptic hand cleansers or towelettes, employees shall wash their hands with soap and running water as soon as feasible.

After administering first aid, potentially infectious materials, including towels, personnel protective equipment, clothes and bandages, shall be placed in a container, which prevents leakage during collection, handling, processing, storage, transport, or shipping. All PPE will be dispose of after use. Any equipment or working surfaces which was been exposed to blood or

potentially infectious materials due to an injury, will be decontaminated prior to reuse.

Langan will make available the hepatitis B vaccine and vaccination series to all employees who have occupational exposure, and post-exposure evaluation and follow-up to all employees who have had an exposure incident. These services will be available to the employee at no cost to them through a medical provider.

17.3.7.2 Recordkeeping

Langan will maintain training and medical records for each employee with occupational exposure to blood or potentially infectious materials. Medical and training records will be maintained by Langan's H&S Department.

Training records will include the following:

- Dates of the training sessions;
- Contents or a summary of the training sessions;
- Names and qualifications of persons conducting the training; and
- Names and job titles of all persons attending the training sessions.

Training records shall be maintained for 3 years from the date on which the training occurred. Medical records will be will be preserved and maintained for the duration of employment plus 30 years.

All records will be made available upon request to employees, the Assistant Secretary of Labor for Occupational Safety and Health, and Director of National Institute for Occupational Safety and Health Director of OSHA for examination and copying. Medical records must have written consent from employee before releasing.

If Langan ceases to do business, all records shall be transferred to the successor employer. The successor employer shall receive and maintain these records.

If there will not be a successor, Langan will notify current employees of their rights to access records at least three months prior to the cessation of business.

18.0 RECORDKEEPING

The following is a summary of required health and safety logs, reports and recordkeeping.

18.1 Field Change Authorization Request

Any changes to the work to be performed that is not included in the CHASP will require an addendum that is approved by the Langan project manager and Langan HSM to be prepared. Approved changes will be reviewed with all field personnel at a safety briefing.

18.2 Medical and Training Records

Copies or verification of training (40-hour, 8-hour, supervisor, site-specific training, documentation of three-day OJT, and respirator fit-test records) and medical clearance for site work and respirator use will be maintained in the office and available upon request. Records for all subcontractor employees must also be available upon request. All employee medical records will be maintained by the HSM.

18.3 Onsite Log

A log of personnel on site each day will be kept by the HSO or designee.

18.4 Daily Safety Meetings (“Tailgate Talks”)

Completed safety briefing forms will be maintained by the HSO.

18.5 Exposure Records

All personal monitoring results, laboratory reports, calculations and air sampling data sheets are part of an employee exposure record. These records will be maintained by the HSO during site work. At the end of the project they will be maintained according to 29 CFR 1910.1020.

18.6 Hazard Communication Program/MSDS-SDS

Material safety data sheets (MSDS) or Safety Data Sheets (SDS) have been obtained for applicable substances and are included in this CHASP (Attachment D). Langan’s written hazard communication program, in compliance with 29 CFR 1910.1200, is maintained by the HSM.

18.7 Documentation

Immediately following an incident or near miss, unless emergency medical treatment is required, either the employee or a coworker must contact the Langan incident/injury hotline at 1-800-952-6426, extension 4699 and the Project Manager to report the incident or near miss. The Project Manager will contact the client or client representative. A written report must be completed and submitted HSM within 24 hours of the incident. For emergencies involving personnel injury and/or exposure, employee will complete and submit the Langan incident/injury report to the Langan corporate health and safety manager as soon as possible following the incident. Accidents will be investigated in-depth to identify all causes and to recommend hazard control

measures.

18.7.1 Accident and Injury Report Forms

18.7.1.1 Accident/Incident Report

All injuries, no matter how slight, shall be reported to the FTL and the PM immediately. The accident/incident report forms, attached in Attachment C will be filled out on all accidents by the applicable contractor supervision personnel, the FTL, or the HSO. Copies of all accident/incident reports shall be kept on-site and available for review. Project personnel will be instructed on the location of the first aid station, hospital, and doctor and ambulance service near the job. The emergency telephone numbers will be conspicuously posted in site vehicles near the work zone. First aid supplies will be centrally located and conspicuously posted between restricted and non-restricted areas to be readily accessible to all on the site.

18.7.1.2 First Aid Treatment Record

The first aid treatment record forms will be used for recording all non-lost time injuries treated by the project first-aid attendant, the local physician or hospital will be entered in detail on this record. "Minor" treatment of scratches, cuts, etc. will receive the same recording attention as treatment of more severe injuries.

18.7.1.3 OSHA Form 300

An OSHA Form 300 will be kept at the Langan Corporate Office in Parsippany, New Jersey. All recordable injuries or illnesses will be recorded on this form. Subcontractor employers must also meet the requirements of maintaining an OSHA 300 form. The Incident Report form used to capture the details of work-related injuries/illnesses meets the requirements of the OSHA Form 301 (supplemental record) and must be maintained with the OSHA Form 300 for all recordable injuries or illnesses.

19.0 CONFINED SPACE ENTRY

Confined spaces are not anticipated at the Site during planned construction activities. If confined spaces are identified, the contractor must implement their own confined space program that all applicable federal, state and local regulations. Confined spaces **will not** be entered by Langan personnel.

20.0 HASP ACKNOWLEDGEMENT FORM

All Langan personnel and contractors will sign this HASP Compliance Agreement indicating that

they have become familiar with this HASP and that they understand it and agree to abide by it.

[illegible]

TABLES

TABLE 1
TASK HAZARD ANALYSES

Task	Hazard	Description	Control Measures	First Aid
1.3.1 – 1.3.14	Contaminated Soil or Groundwater- Dermal Contact	Contaminated water spills on skin, splashes in eyes; contact with contaminated soil/fill during construction activities or sampling.	Wear proper PPE; follow safe practices, maintain safe distance from construction activities	See Table 2, seek medical attention as required
1.3.1 – 1.3.14	Lacerations, abrasions, punctures	Cutting bailer twine, pump tubing, acetate liners, etc. with knife; cuts from sharp site objects or previously cut piles, tanks, etc.; Using tools in tight spaces	Wear proper PPE; follow safe practices	Clean wound, apply pressure and/or bandages; seek medical attention as required.
1.3.1 – 1.3.14	Contaminated Media Inhalation	Opening drums, tanks, wells; vapors for non-aqueous phase liquids or other contaminated site media; dust inhalation during excavation; vapor accumulation in excavation	Follow air monitoring plan; have quick access to respirator, do not move or open unlabeled drums found at the site, maintain safe distance from construction activities	See Table 2, seek medical attention as required
1.3.1 – 1.3.14	Lifting	Improper lifting/carrying of equipment and materials causing strains	Follow safe lifting techniques; Langan employees are not to carry contractor equipment or materials	Rest, ice, compression, elevation; seek medical attention as required
1.3.1 – 1.3.14	Slips, trips, and falls	Slips, trips and falls due to uneven surfaces, cords, steep slopes, debris and equipment in work areas	Good housekeeping at site; constant awareness and focus on the task; avoid climbing on stockpiles; maintain safe distance from construction activities and excavations; avoid elevated areas over six feet unless fully accredited in fall protection and wearing an approved fall protection safety apparatus	Rest, ice, compression, elevation; seek medical attention as required
1.3.1 – 1.3.14	Noise	Excavation equipment, hand tools, drilling equipment.	Wear hearing protection; maintain safe distance from construction activities	Seek medical attention as required
1.3.1 – 1.3.14	Falling objects	Soil material, tools, etc. dropping from drill rigs, front-end loaders, etc.	Hard hats to be worn at all times while in work zones; maintain safe distance from construction activities and excavations	Seek medical attention as required
1.3.1 – 1.3.14	Underground/ overhead utilities	Excavation equipment, drill rig auger makes contact with underground object; boom touches overhead utility	"One Call" before dig; follow safe practices; confirm utility locations with contractor; wear proper PPE; maintain safe distance from construction activities and excavations	Seek medical attention as required
1.3.1 – 1.3.14	Insects (bees, wasps, hornet, mosquitoes, and spider)	Sings, bites	Insect Repellent; wear proper protective clothing (work boots, socks and light colored pants);field personnel who may have insect allergies (e.g., bee sting) should provide this information to the HSO or FSO prior to commencing work, and will have allergy medication on site.	Seek medical attention as required
1.3.1 – 1.3.14	Vehicle traffic / Heavy Equipment Operation	Vehicles unable to see workers on site, operation of heavy equipment in tight spaces, equipment failure, malfunctioning alarms	Wear proper PPE, especially visibility vest; use a buddy system to look for traffic; rope off area of work with cones and caution tape or devices at points of hazard, maintain safe distance from construction activities and equipment	Seek medical attention as required

TABLE 2
CONTAMINANT HAZARDS OF CONCERN

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	1,1'-Biphenyl 1,1-Biphenyl Biphenyl Phenyl benzene Diphenyl	92-52-4	None	1 mg/m ³ 100 mg/m ³	Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, throat; headache, nausea, lassitude (weakness, exhaustion), numb limbs; liver damage	Eye: Irrigate immediately Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1,2,3-Trichloropropane Allyl trichloride Glycerol trichlorohydrin Glyceryl trichlorohydrin Trichlorohydrin	96-18-4	PID	50 ppm 100 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation eyes, nose, throat; central nervous system depression; In Animals: liver, kidney injury; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1,2,4,5-Tetramethylbenzene	95-93-2	NA	None None	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat, respiratory system; bronchitis; hypochromic anemia; headache, drowsiness, lassitude (weakness, exhaustion), dizziness, nausea, incoordination; vomiting, confusion; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	1,2,4-Trimethylbenzene	95-63-6	PID	None None	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat, respiratory system; bronchitis; hypochromic anemia; headache, drowsiness, lassitude (weakness, exhaustion), dizziness, nausea, incoordination; vomiting, confusion; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1,2-Dichlorobenzene	95-50-1	PID	50 ppm 200 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eye, swelling periorbital (situated around the eye); profuse rhinitis; headache, anorexia, nausea, vomiting; weight loss, jaundice, cirrhosis; in animals: liver, kidney injury; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1,2-Dichloroethene 1,2-Dichloroethylene 1,2-DCE Total 1,2-Dichloroethene cis-1,2-Dichloroethylene mixture of cis and trans Acetylene dichloride cis-Acetylene dichloride sym-Dichloroethylene cis-1,2-Dichloroethene cDCE 1,1-dimethyl-;dimethyl1,1-cyclohexane sym-Dichloroethylene Dichloroethylenes	159-59-2 156-60-5 540-59-0	PID	200 ppm 4000 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	Irritant to eyes, skin, mucous membranes and respiratory system. May be harmful by ingestion, skin absorption and inhalation	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	1,3,5-Trimethylbenzene Mesitylene sym-Trimethylbenzene	108-67-8	PID	None None	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat, respiratory system; bronchitis; hypochromic anemia; headache, drowsiness, lassitude (weakness, exhaustion), dizziness, nausea, incoordination; vomiting, confusion; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1,3-Butadiene Biethylene Biviny Butadiene Divinyl Erythrene Vinylethylene	106-99-0	PID	1 ppm 2000 ppm	Vapor	inhalation, skin and/or eye contact (liquid)	irritation to the eyes, nose, throat; drowsiness, dizziness; liquid: frostbite; teratogenic, reproductive effects; [potential occupational carcinogen]	Eye: Frostbite Skin: Frostbite Breathing: Respiratory support
1.3.1 – 1.3.14	1,4-Dioxane 1,4-Dioxacyclohexane [1,4]Dioxane p-Dioxane [6]-crown-2 Diethylene dioxide Diethylene ether Dioxan Dioxane 1,4-Dioxane	123-91-1	PID	100 ppm 500 ppm	Groundwater Soil Vapor	Inhalation, ingestion, skin and/or eye contact	Irritant to eyes, skin, mucous membranes and respiratory system. May be harmful by ingestion, skin absorption and inhalation	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	1H,1H,2H,2H-Perfluorooctanes ulfonic Acid (6:2FTS) Sodium 1H,1H, 2H, 2H- Perfluorooctane Sulfonate (6:2)(6:2FTS) 6:2 Fluorinated Telomer Sulfonates (6:2FTS) 1H,1H,2H,2H- Perfluorooctanesulfonic Acid (6:2FTS)	27619- 97-2	NA	NA NA	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	1H,1H,2H,2H-Perfluorodecanesulfonic Acid (8:2FTS) 8 : 2 Fluorotelomer sulfonate 8 : 2 FTSA 8:2 Fluorotelomersulfonate (8:2 FTS)	39108-34-4	NA	NA NA	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	2-(N-Methylperfluorooctanesulfonamido)acetic acid N-MeFOSAA N-methylperfluorooctane sulfonamidoacetic acid 2-(N-methyl-perfluorooctane sulfonamido) acetic acid Glycine N-[(heptadecafluorooctyl)sulfonyl]-N-methyl-N-methyl perfluorooctane-sulfonamidoacetic acid NMeFOSAA MeFOSAA	2355-31-9	NA	NA NA	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	2,2,4-Trimethylpentane Isooctane	540-84-1	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat, respiratory system; bronchitis; hypochromic anemia; headache, drowsiness, lassitude (weakness, exhaustion), dizziness, nausea, incoordination; vomiting, confusion; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	2,4-Dimethylphenol 2,4-Xylenol m-Xylenol 1-Hydroxy-2,4-dimethylbenzene 2,4-Dimethylphenol 4-Hydroxy-1,3-dimethylbenzene 4,6-Dimethylphenol 1,3-Dimethyl-4-hydroxybenzene	105-67-9	None	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; headache, narcosis, coma; dermatitis; in animals: liver, kidney damage	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	2-Butanone Ethyl methyl ketone MEK Methyl acetone Methyl ethyl ketone	78-93-3	PID	200 ppm 3000 ppm	Soil Groundwater Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose; headache; dizziness; vomiting; dermatitis	Eye: Irrigate immediately Skin: Water wash immediately Breathing: Fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	2-Hexanone Butyl methyl ketone MBK Methyl butyl ketone Methyl n-butyl ketone	591-78-6	PID	100 ppm 1600 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose; peripheral neuropathy: lassitude (weakness, exhaustion), paresthesia; dermatitis; headache, drowsiness	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	2-Methylnaphthalene β-methylnaphthalene	91-57-6	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion or skin absorption, eye contact	irritation to the skin, eyes, mucous membranes and upper respiratory tract. It may also cause headaches, nausea, vomiting, diarrhea, anemia, jaundice, euphoria, dermatitis, visual disturbances, convulsions and comatose	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	4,4'-DDD Dichlorodiphenyldichloroethane 1,1'-(2,2-Dichloroethylidene)bis (4-chlorobenzene) p,p'-DDD	72-54-8	None	NA NA	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; paresthesia tongue, lips, face; tremor; anxiety, dizziness, confusion, malaise (vague feeling of discomfort), headache, lassitude (weakness, exhaustion); convulsions; paresis hands; vomiting; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	4-Chlorotoluene p-Chlorotoluene 1-Chloro-4-methylbenzene p-Tolyl chloride	106-43-4	PID	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation eyes, skin, mucous membrane; dermatitis; drowsiness, incoordination, anesthesia; cough; liver, kidney injury	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	4-Isopropyltoluene 1-Methyl-4-(1-methylethyl)benzene 4-Isopropyltoluene; 4-Methylcumene; 1-Methyl-4-isopropylbenzene Dolcymene Camphogen Paracymene Cymene p-Cymene p-Isopropyltoluene	99-87-6	PID	NA NA	Soil Groundwater Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; dermatitis; headache, narcosis, coma	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	4-Methyl-2-pentanone Hexone Isobutyl methyl ketone Methyl isobutyl ketone MIBK	108-10-1	PID	100 ppm 500 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; headache, narcosis, coma; dermatitis; in animals: liver, kidney damage	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Acenaphthene 1,2-Dihydroacenaphthylene 1,8-Ethylenenaphthalene peri-Ethylenenaphthalene Naphthyleneethylene Tricyclododecapentaene	83-32-9	PID	NA NA	Soil	inhalation, ingestion, skin and/or eye contact,	irritation to the skin, eyes, mucous membranes and upper respiratory tract; If ingested, it can cause vomiting	Eye: Irrigate immediately Skin: Soap wash immediately, if redness or irritation develop, seek medical attention immediately Breathing: Move to fresh air Swallow: do not induce vomiting, seek medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Acenaphthylene Cyclopental(de)naphthalene, Acenaphthalene	208-96-8	PID	NA NA	Soil	inhalation, ingestion, skin and/or eye contact	irritation to the skin, eyes, mucous membranes and upper respiratory tract	Eye: Irrigate immediately, seek medical attention immediately, Skin: Soap wash immediately, if redness or irritation develop, seek medical attention immediately Breathing: Move to fresh air Swallow: do not induce vomiting, seek medical attention immediately
1.3.1 – 1.3.14	Acetone Dimethyl ketone Ketone propane 2-Propanone	67-64-1	PID	1000 ppm 2500 ppm	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, nose, throat; headache, dizziness, central nervous system depression; dermatitis	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Acetophenone 1-phenylethanone Methyl phenyl ketone Phenylethanone	98-86-2	None	NA NA	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the skin, eyes, mucous membranes and upper respiratory tract	Eye: Irrigate immediately, seek medical attention immediately, Skin: Soap wash immediately, if redness or irritation develop, seek medical attention immediately Breathing: Move to fresh air Swallow: do not induce vomiting, seek medical attention immediately
1.3.1 – 1.3.14	Aluminum	7429-90- 5	None	0.5 mg/m ³ 50 mg/m ³	Soil	inhalation, skin and/or eye contact	irritation to the eyes, skin, respiratory system	Eye: Irrigate immediately Breathing: Fresh air
1.3.1 – 1.3.14	Anthracene	120-12-7	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	irritation to the skin, eyes, mucous membranes and upper respiratory tract, abdominal pain if ingested.	Eye: Irrigate immediately, seek medical attention immediately, Skin: Soap wash immediately, Breathing: Move to fresh air, refer to medical attention; Swallow: refer to medical attention

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Antimony	7440-36-0	None	0.5 mg/m ³ 50 mg/m ³	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation skin, possible dermatitis; resp distress; diarrhea; muscle tremor, convulsions; possible gastrointestinal tract	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Aroclor 1254	11097-69-1	None	0.5 mg/m ³ 5 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, chloracne	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Aroclor 1268	11100-14-4	None	0.5 mg/m ³ 5 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, chloracne	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Arsenic	NA	None	0.5 mg/m ³ NA	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation skin, possible dermatitis; resp distress; diarrhea; muscle tremor, convulsions; possible gastrointestinal tract	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Barium	10022-31-8	None	0.5 mg/m ³ 50 mg/m ³	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, upper respiratory system; skin burns; gastroenteritis; muscle spasm; slow pulse	Eye: Irrigate immediately Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Benzene Benzol Phenyl hydride Alkyl benzene isomers	71-43-2	PID	3.19 mg/m ³ 1,595 mg/m ³	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, respiratory system; dizziness; headache, nausea, staggered gait; lassitude (weakness, exhaustion) [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Benzo(a)anthracene Benzanthracene Benzanthrene 1,2-Benzanthracene Benzo[b]phenanthrene Tetraphene	56-55-3	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, skin or eye contact, ingestion	dermatitis, bronchitis, [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Benzo(a)pyrene	50-32-8	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	dermatitis, bronchitis, [potential occupational carcinogen]	Eye: Irrigate immediately, seek medical attention Skin: Soap wash immediately; Breathing: move to fresh air; Swallow: Induce vomiting if conscious, seek medical attention immediately
1.3.1 – 1.3.14	Benzo(b)fluoranthene	205-99-2	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation(dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Benzo(g,h,i)perylene Benzo(ghi)perylene	191-24-2	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	NA	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Benzo(k)fluoranthene	207-08-9	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation (dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Benzoic acid Carboxybenzene E210 Dracrylic acid Phenylmethanoic acid Benzenecarboxylic acid Benzoic acid isomer	65-85-0	None	NA NA	Groundwater Soil Vapor	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air
1.3.1 – 1.3.14	Benzyl Alcohol Benzenemethanol Phenyl carbinol alpha-Hydroxytoluene Benzoyl alcohol Phenyl methanol	100-51-6	PID	NA NA	Groundwater Soil Vapor	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation (dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Benzyl butyl phthalate Butyl benzyl phthalate Butylbenzylphthalate	86-66-7	None	NA NA	Groundwater Soil Vapor	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation (dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Beryllium	7440-41-7	None	0.002 mg/m ³ 4 mg/m ³	Soil	inhalation, skin and/or eye contact	berylliosis (chronic exposure): anorexia, weight loss, lassitude (weakness, exhaustion), chest pain, cough, clubbing of fingers, cyanosis, pulmonary insufficiency; irritation to the eyes; dermatitis; [potential occupational carcinogen]	Eye: Irrigate immediately Breathing: Fresh air
1.3.1 – 1.3.14	Bis(2-ethylhexyl)phthalate Bis(2-Ethylhexyl) Phthalate Di-sec octyl phthalate DEHP Di(2-ethylhexyl)phthalate Octyl phthalate bis(2-ethylexyl)phthalate Bis(2-Ethylhexyl) Phthalate	117-81-7	None	5 mg/m ³ 5000 mg/m ³	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, mucous membrane; in animals: liver damage; teratogenic effects; [potential occupational carcinogen]	Eye: Irrigate immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Cadmium	7440-43-9	None	0.005 mg/m ³ 9 mg/m ³	Soil	inhalation, ingestion	pulmonary edema, dyspnea (breathing difficulty), cough, chest tightness, substernal (occurring beneath the sternum) pain; headache; chills, muscle aches; nausea, vomiting, diarrhea; anosmia (loss of the sense of smell), emphysema, proteinuria, mild anemia; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Calcium	7440-70-2	None	NA	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, upper resp tract; ulcer, perforation nasal septum; pneumonitis; dermatitis	Eye: Irrigate immediately Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Carbazole 9-azafluorene Dibenzopyrrole Diphenylenimine diphenyleneimide	86-74-8	None	NA NA	Soil	inhalation, skin absorption (liquid), skin and/or eye contact	irritation to eyes and skin, respiratory irritation	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Carbon disulfide	75-15-0	PID	20 ppm 500 ppm	Soil Groundwater Vapor	inhalation, skin or eye contact, ingestion	irritation to the eyes, skin, respiratory system	Eye: Irrigate immediately (liquid) Skin: Water flush immediately (liquid) Breathing: Respiratory support
1.3.1 – 1.3.14	Carbon tetrachloride Carbon chloride Carbon tet Freon® 10 Halon® 104 Tetrachloromethane	56-23-5	PID	10 ppm 200 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; central nervous system depression; nausea, vomiting; liver, kidney injury; drowsiness, dizziness, incoordination; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Chloroform Methane trichloride Trichloromethane Chloro-3-methyl phenol	67-66-3	None	50 ppm 500 ppm	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; dizziness, mental dullness, nausea, confusion; headache, lassitude (weakness, exhaustion); anesthesia; enlarged liver; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Chromium Total Chromium Chromium, Total	7440-47-3	None	1.0 mg/m ³ 250 mg/m ³	Groundwater Soil	inhalation absorption ingestion	irritation to eye, skin, and respiratory	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Chrysene Benzo[a]phenanthrene 1,2-Benzphenanthrene	218-01-9	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, absorption, ingestion, consumption	irritation to eye, skin, and respiratory, gastrointestinal irritation nausea, vomit, diarrhea [potential occupational carcinogen]	Eyes: Irrigate immediately Skin: Soap wash promptly. Breath: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Cobalt	7440-48-4	None	0.1mg/m ³ 20 mg/m ³	Soil	inhalation, ingestion, skin and/or eye contact	Cough, dyspnea (breathing difficulty), wheezing, decreased pulmonary function; weight loss; dermatitis; diffuse nodular fibrosis; resp hypersensitivity, asthma	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Copper	7440-50-8	None	1.0 mg/m ³ 100 mg/m ³	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, nose, metallic taste; dermatitis; anemia	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Cumene Cumol Isopropylbenzene 2-Phenyl propane 1-methylethy lbenzene	98-82-8	PID	50 ppm 900 ppm	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; dermatitis; headache, narcosis, coma	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Cyanide	57-12-5	None	5 mg/m ³ 25 mg/m ³	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	Exposure to cyanide can cause weakness, headaches, confusion, dizziness, fatigue, anxiety, sleepiness, nausea and vomiting. Breathing can speed up then become slow and gasping. Coma and convulsions also occur. If large amounts of cyanide have been absorbed by the body, the person usually collapses and death can occur very quickly. Long-term exposure to lower levels of cyanide can cause skin and nose irritation, itching, rashes and thyroid changes.	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Cyclohexane Benzene hexahydride Hexahydrobenzene Hexamethylene Hexanaphthene	110-82-7	PID	300 ppm 1300 ppm	Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, respiratory system; drowsiness; dermatitis; narcosis, coma	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	DDE 4,4-DDE 4,4'-DDE 1,1-bis-(4-chlorophenyl)-2,2-dichloroethene Dichlorodiphenyldichloroethane p,p'-DDE	72-55-9	None	NA NA	Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	Oral ingestion of food is the primary source of exposure for the general population. Acute and chronic ingestion may cause nausea, vomiting, diarrhea, stomach pain, headache, dizziness, disorientation, tingling sensation, kidney damage, liver damage, convulsions, coma, and death. 4,4' DDE may cross the placenta and can be excreted in breast milk	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	DDT 4,4-DDT 4,4'-DDT p,p'-DDT Dichlorodiphenyltrichloroethane 1,1,1-Trichloro-2,2-bis(p-chlorophenyl)ethane	50-29-3	None	1 mg/m ³ 500 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; paresthesia tongue, lips, face; tremor; anxiety, dizziness, confusion, malaise (vague feeling of discomfort), headache, lassitude (weakness, exhaustion); convulsions; paresis hands; vomiting; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Dibenz(a,h)anthracene Dibenzo(a,h)anthracene Dibenzo[a,h]anthracene	53-70-3	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, absorption, ingestion, consumption	irritation to eyes, skin, respiratory, and digestion [potential occupational carcinogen]	Eyes: Irrigate immediately Skin: Soap wash promptly. Breath: Respiratory support PID Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Dibenzofuran	132-64-9	None	NA NA	Soil	inhalation, absorption	irritation to eyes, and skin	Eyes: Irrigate immediately Skin: Soap wash promptly.
1.3.1 – 1.3.14	Dibutyl phthalate Di-n-butyl phthalate Butyl phthalate n-Butyl phthalate 1,2-Benzenedicarboxylic acid dibutyl ester o-Benzenedicarboxylic acid dibutyl ester DBP Palatinol C, Elaol Dibutyl-1,2-benzene-dicarboxylate Di-n-butylphthalate	84-74-2	None	5 mg/m ³ 4000 mg/m ³	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, upper respiratory system, stomach	Eye: Irrigate immediately Skin: Wash regularly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Dichlorodifluoromethane Difluorodichloromethane, Fluorocarbon 12 Freon 12 Freon® 12 Genetron® 12 Halon® 122 Propellant 12 Refrigerant 12 Dichlorodifluoromethane	75-71-8	None	1000 pp, 15,000 ppm	Groundwater Soil Vapor	inhalation, skin and/or eye contact (liquid)	dizziness, tremor, asphyxia, unconsciousness, cardiac arrhythmias, cardiac arrest; liquid: frostbite	Eye: Frostbite Skin: Frostbite Breathing: Respiratory support
1.3.1 – 1.3.14	Dieldrin HEOD 1,2,3,4,10,10-Hexachloro-6,7-epoxy-1,4,4a,5,6,7,8,8a-octahydro-1,4-endo-exo-5,8-dimethanonaphthalene	60-57-1	PID	0.25 mg/m ³ 50 mg/m ³	Groundwater Soil Water	inhalation, skin absorption, ingestion, skin and/or eye contact	headache, dizziness; nausea, vomiting, malaise (vague feeling of discomfort), sweating; myoclonic limb jerks; clonic, tonic convulsions; coma; [potential occupational carcinogen]; in animals: liver, kidney damage	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Diesel Fuel automotive diesel fuel oil No. 2 distillate diesoline diesel oil diesel oil light diesel oil No. 1-D summer diesel	68334-30-5	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; burning sensation in chest; headache, nausea, lassitude (weakness, exhaustion), restlessness, incoordination, confusion, drowsiness; vomiting, diarrhea; dermatitis; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Endosulfan I Alpha Endosulfan	959-98-8	None	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation skin; nausea, confusion, agitation, flushing, dry mouth, tremor, convulsions, headache; in animals: kidney, liver injury; decreased testis weight	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Ethanol Absolute alcohol Alcohol cologne spirit drinking alcohol ethane monoxide ethyl alcohol EtOH ethyl alcohol ethyl hydrate ethyl hydroxide ethylol grain alcohol hydroxyethane methylcarbinol	64-17-5	PID	1000 ppm 3300 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose; headache, drowsiness, lassitude (weakness, exhaustion), narcosis; cough; liver damage; anemia; reproductive, teratogenic effects	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Fresh air Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Ethyl benzene Ethylbenzene Ethylbenzol Phenylethane	100-41-4	PID	435 mg/m ³ 3,472 mg/m ³	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; headache; dermatitis; narcosis, coma	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Fluoranthene Benzo(j, k)fluorene	206-44-0	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation(dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Fluorene	86-73-7	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation(dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Fuel Oil No. 2	68476-30-2	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; burning sensation in chest; headache, nausea, lassitude (weakness, exhaustion), restlessness, incoordination, confusion, drowsiness; vomiting, diarrhea; dermatitis; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	gamma-Chlordane Gamma Chlordane γ-Chlordane	5566-34-7	None	0.5 mg/m ³ 100 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	Blurred vision; confusion; ataxia, delirium; cough; abdominal pain, nausea, vomiting, diarrhea; irritability, tremor, convulsions; anuria	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Gasoline	8006-61-9	PID	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; dermatitis; headache, lassitude (weakness, exhaustion), blurred vision, dizziness, slurred speech, confusion, convulsions; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Helium	7440-59-7	Helium Detector	NA NA	NA	inhalation	dizziness, headache, and nausea	Breathing: Respiratory support

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Heptachlor epoxide 1,4,5,6,7,8,8-Heptachloro-3a,4,7,7a-tetrahydro-4,7-methano-1H-indene	1024-57-3	None	0.5 mg/m ³ 35 mg/m ³	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	In animals: tremor, convulsions; liver damage; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Heptane n-Heptane	142-82-5	PID	500 ppm 750 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	dizziness, stupor, incoordination; loss of appetite, nausea; dermatitis; chemical pneumonitis (aspiration liquid); unconsciousness	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Hexavalent Chromium Chromium VI Chromium, Hexavalent	18540-29-9	None	1.0 mg/m ³ 250 mg/m ³	Groundwater Soil	inhalation absorption ingestion	irritation to eye, skin, and respiratory	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Indeno(1,2,3-cd)pyrene Indeno(1,2,3-c,d)Pyrene Indeno[1,2,3-cd]Pyrene	193-39-5	None	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, absorption, ingestion, consumption	irritation to eyes, skin, respiratory, and digestion [potential occupational carcinogen]	Eyes: Irrigate immediately Skin: Soap wash promptly. Breath: Respiratory support Swallow: Medical attention immediately, wash mouth with water

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Iron	7439-89-6	None	10 mg/m ³ NA	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; abdominal pain, diarrhea, vomiting	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Isopropyl alcohol Iso-Propyl Alcohol Carbinol IPA Isopropanol 2-Propanol sec-Propyl alcohol Rubbing alcohol Isopropylalcohol	67-63-0	PID	400 ppm 2000 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, nose, throat; drowsiness, dizziness, headache; dry cracking skin; in animals: narcosis	Eye: Irrigate immediately Skin: Water flush Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Lead	7439-92-1	None	0.050 mg/m ³ 100 mg/m ³	Groundwater Soil	inhalation, ingestion, skin and/or eye contact	lassitude (weakness, exhaustion), insomnia; facial pallor; anorexia, weight loss, malnutrition; constipation, abdominal pain, colic; anemia; gingival lead line; tremor; paralysis wrist, ankles; encephalopathy; kidney disease; irritation to the eyes; hypertension	Eye: Irrigate immediately Skin: Soap flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Magnesium	7439-95-4	None	15 mg/m ³ NA	Soil	inhalation, skin and/or eye contact	irritation to the eyes, skin, respiratory system; cough	Eye: Irrigate immediately Breathing: Fresh air

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Manganese	7439-96-5	None	5 mg/m ³ 500 mg/m ³	Groundwater Soil	inhalation, ingestion	aerosol is irritating to the respiratory tract	Eye: Irrigate immediately Skin: Soap flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	m-Cresol meta-Cresol 3-Cresol m-Cresylic acid 1-Hydroxy-3-methylbenzene 3-Hydroxytoluene 3-Methylphenol	108-39-4	PID	5 ppm 250 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; central nervous system effects: confusion, depression, resp failure; dyspnea (breathing difficulty), irreg rapid resp, weak pulse; eye, skin burns; dermatitis; lung, liver, kidney, pancreas damage	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Mercury	7439-97-6	None	0.1 mg/m ³ 10 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; cough, chest pain, dyspnea (breathing difficulty), bronchitis, pneumonitis; tremor, insomnia, irritability, headache, lassitude (weakness, exhaustion); stomatitis, salivation; gastrointestinal disturbance, anorexia, weight loss; proteinuria	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Methoxychlor 4,4'-Methoxychlor p,p'- Dimethoxydiphenyltrichloroethane DMDT Methoxy-DDT 2,2-bis(p-Methoxyphenyl)- 1,1,1-trichloroethane 1,1,1-Trichloro-2,2-bis-(p-methoxyphenyl)ethane	72-43-5	None	15 mg/m ³ 5000 mg/m ³	Groundwater Soil Vapor	inhalation, ingestion	fasciculation, trembling, convulsions; kidney, liver damage; [potential occupational carcinogen]	Skin: Soap wash Breathing: Fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Methyl Chloride Chloromethane Monochloromethane Refrigerant-40 R-40	74-87-3	NA	100 ppm 2000 ppm	Groundwater Soil	inhalation, skin and/or eye contact	dizziness, nausea, vomiting; visual disturbance, stagger, slurred speech, convulsions, coma; liver, kidney damage; liquid: frostbite; reproductive, teratogenic effects; [potential occupational carcinogen]	Eye: Frostbite Skin: Frostbite Breathing: Respiratory support
1.3.1 – 1.3.14	Methyl <i>tert</i> -butyl ether MTBE Methyl tertiary-butyl ether Methyl t-butyl ether <i>tert</i> -Butyl methyl ether tBME <i>tert</i> -BuOMe Methyl <i>tert</i> butyl ether	1634-04-4	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; burning sensation in chest; headache, nausea, lassitude (weakness, exhaustion), restlessness, incoordination, confusion, drowsiness; vomiting, diarrhea; dermatitis; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Methylcyclohexane Methyl cyclohexane Methylcyclohexane Hexahydrotoluene Cyclohexylmethane Toluene hexahydride	108-87-2	PID	500 ppm 1200 ppm	Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; dizziness, drowsiness; in animals: narcosis	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Methylene Chloride Dichloromethane Methylene dichloride	75-09-2	PID	25 ppm 2300 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; lassitude (weakness, exhaustion), drowsiness, dizziness; numb, tingle limbs; nausea; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	m-Xylenes 1,3-Dimethylbenzene m-Xylol Metaxylene	108-38-3 179601-23-1	PID	100 ppm 900 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; dizziness, excitement, drowsiness, incoordination, staggering gait; corneal vacuolization; nausea, vomiting, abdominal pain; dermatitis	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Naphthalene Naphthalin Tar camphor White tar	91-20-3	PID	50 mg/m ³ 250 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes; headache, confusion, excitement, malaise (vague feeling of discomfort); nausea, vomiting, abdominal pain; irritation bladder; profuse sweating; hematuria (blood in the urine); dermatitis, optical neuritis	Eye: Irrigate immediately Skin: Molten flush immediately/solid- liquid soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	n-Butylbenzene Butylbenzene 1-phenylbutane	104-51-8	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin; dry nose, throat; headache; low blood pressure, tachycardia, abnormal cardiovascular system stress; central nervous system, hematopoietic depression; metallic taste; liver, kidney injury	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	N-ethyl perfluorooctane sulfonamido acetic acid NEtFOSAA N-ethyl perfluorooctane sulfonamido acetic acid (N- EtFOSAA) N- Ethylperfluorooctanesulfonami de N-Ethyl Perfluorooctanesulfonamidoac etic Acid N-ethyl perfluorooctane- sulfonamidoacetic acid N-Ethyl-N- [(heptadecafluorooctyl)sulphon yl]glycine NEtFOSAA	2991-50- 6	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	n-Hexane Hexane, Hexyl hydride, normal-Hexane	110-54-3	PID	500 ppm 1100 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, nose; nausea, headache; peripheral neuropathy: numb extremities, muscle weak; dermatitis; dizziness; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Nickel	7440-02-0	None	NA 10 mg/m ³	Groundwater Soil	ion, ingestion, skin and/or eye contact	sensitization dermatitis, allergic asthma, pneumonitis; [potential occupational carcinogen]	Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	N-Nitrosodiphenylamine	86-30-6	PID	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, respiratory system	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Non-Flammable Gas Mixture CALGAS (Equipment Calibration Gas : Oxygen Methane Hydrogen Sulfide Carbon Monoxide Nitrogen	7782-44-7 74-82-8 7783-08-4 830-08-0 7727-37-9	Multi-Gas PID	NA/NA NA/NA 10/100 ppm 50/1200 ppm NA/NA	NA	inhalation	dizziness, headache, and nausea	Breathing: Respiratory support

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Non-Flammable Gas Mixture CALGAS (Equipment Calibration Gas : Oxygen Isobutylene Nitrogen	7782-44- 7 115-11-7 7727-37- 9	PID	NA/NA NA/NA NA/NA	NA	inhalation	dizziness, headache, and nausea	Breathing: Respiratory support
1.3.1 – 1.3.14	n-Propylbenzene Isocumene Propylbenzene 1-Phenylpropane 1-Propylbenzene Phenylpropane	103-65-1	PID	NA NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin; dry nose, throat; headache; low blood pressure, tachycardia, abnormal cardiovascular system stress; central nervous system, hematopoietic depression; metallic taste; liver, kidney injury	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	o-Chlorotoluene 1-Chloro-2-methylbenzene 2-Chloro-1-methylbenzene 2-Chlorotoluene o-Tolyl chloride 2-Cyclohexane	95-49-8	PID	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation eyes, skin, mucous membrane; dermatitis; drowsiness, incoordination, anesthesia; cough; liver, kidney injury	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	o-Cresol ortho-Cresol 2-Cresol o-Cresylic acid 1-Hydroxy-2-methylbenzene 2-Hydroxytoluene 2-Methyl phenol 2-Methylphenol 2-Methylphenol	95-48-7	PID	5 ppm 250 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; central nervous system effects: confusion, depression, resp failure; dyspnea (breathing difficulty), irreg rapid resp, weak pulse; eye, skin burns; dermatitis; lung, liver, kidney, pancreas damage	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately ethyhp hhhhhhhhh

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	o-Xylenes 1,2-Dimethylbenzene ortho-Xylene o-Xylol	95-47-6 179601-23-1	PID	100 ppm 900 ppm	Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; dizziness, excitement, drowsiness, incoordination, staggering gait; corneal vacuolization; nausea, vomiting, abdominal pain; dermatitis	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	p-Cresol para-Cresol 4-Cresol p-Cresylic acid 1-Hydroxy-4-methylbenzene 4-Hydroxytoluene 4-Methylphenol	106-44-5	PID	5 ppm 250 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; central nervous system effects: confusion, depression, resp failure; dyspnea (breathing difficulty), irreg rapid resp, weak pulse; eye, skin burns; dermatitis; lung, liver, kidney, pancreas damage	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	p-Diethylbenzene 1,4-Diethylbenzene 1,4-Diethyl benzene	105-05-5	PID	None None	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, respiratory system; skin burns; in animals: central nervous system depression	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Pentachlorophenol PCP; Penta; 2,3,4,5,6-Pentachlorophenol	87-86-5	PID	0.5 mg/m ³ 2.5 mg/m ³	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose, throat; sneezing, cough; lassitude (weakness, exhaustion), anorexia, weight loss; sweating; headache, dizziness; nausea, vomiting; dyspnea (breathing difficulty), chest pain; high fever; dermatitis	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorobutanesulfonic acid FC-98 Nonaflate Nonafluorobutanesulphonic acid Perfluorobutanesulfonic Acid Perfluorobutane sulfonate PFBS	375-73-5	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorobutanoic Acid Heptafluorobutyric acid Heptafluorobutanoic acid Perfluorobutyric acid PFBA	375-22-4	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorodecanoic acid PFDA	335-76-2	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Perfluoroheptane sulfonic Acid Perfluoroheptane sulfonate Perfluoroheptanesulfonic acid PFHpS	375-92-8	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluoroheptanoic acid Perfluoroheptanoic acid Tridecafluoroheptanoic acid PFHpA	375-85-9	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorohexanesulfonic Acid perfluorohexanesulfonate perfluorohexanesulfonic acid Perfluorohexane-1-sulphonic acid PFHxS	355-46-4	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorohexanoic Acid PFHxA	307-24-4	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Perfluorononanoic Acid Perfluorononanoic Acid PFNA perfluoro-n-nonanoic acid perfluorononanoate	375-95-1	NA	None None	Groundwater	Groundwater	inhalation, skin or eye contact, ingestion; strong acid	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorooctanesulfonamide Erfuorocetyl sulfonamide Perfluorooctane sulfonamide Heptadecafluorooctanesulphonamide Perfluorooctanesulfonic acid amide Deethylsulfluramid FC-99 PFOSA FOSA	754-91-6	NA	NA NA	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorooctanesulfonic Acid PFOS	1763-23-1	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorooctanoic Acid PFOA pentadecafluorooctanoic acid perfluorooctanoate perfluorocaprylic acid	335-67-1	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Perfluoropentanoic Acid PFPeA	2706-90-3	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorotetradecanoic Acid PFTA	376-06-7	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Perfluorotridecanoic Acid PFTTrDA Sodium 1H,1H,2H,2H-Perfluorodecane Sulfonate (8:2) (8:2FTS)	72629-94-8	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	p-Ethyltoluene 4-Ethyltoluene 1-ethyl-4-methyl-benzene 1-methyl-4-ethylbenzene	622-96-8	NA	NA NA	Soil	ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; headache; dermatitis; narcosis, coma	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Phenanthrene	85-01-8	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation(dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	Phenol Carbolic acid Hydroxybenzene, Monohydroxybenzene Phenyl alcohol Phenyl hydroxide	108-95-2	PID	5 ppm 250 ppm	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose, throat; anorexia, weight loss; lassitude (weakness, exhaustion), muscle ache, pain; dark urine, skin burns; dermatitis; tremor, convulsions, twitching	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Potassium	7440-09-7	None	NA NA	Soil	inhalation, skin absorption, ingestion, skin and/or eye contact inhalation, ingestion, skin and/or eye contact	eye: Causes eye burns. Skin: Causes skin burns. Reacts with moisture in the skin to form potassium hydroxide and hydrogen with much heat. ingestion: Causes gastrointestinal tract burns. inhalation: May cause irritation of the respiratory tract with burning pain in the nose and throat, coughing, wheezing, shortness of breath and pulmonary edema. Causes chemical burns to the respiratory tract. inhalation may be fatal as a result of spasm, inflammation, edema of the larynx and bronchi, chemical pneumonitis and pulmonary edema.	Eyes: Get medical aid immediately Skin: Get medical aid immediately. Immediately flush skin with plenty of water for at least 15 minutes while removing contaminated clothing and shoes. Ingestion: If victim is conscious and alert, give 2-4 full cups of milk or water. Get medical aid immediately. inhalation: Get medical aid immediately.
1.3.1 – 1.3.14	p-Xylenes 1,4-Dimethylbenzene para-Xylene p-Xylol	106-42-3	PID	100 ppm 900 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; dizziness, excitement, drowsiness, incoordination, staggering gait; corneal vacuolization; nausea, vomiting, abdominal pain; dermatitis	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Pyrene benzo[def]phenanthrene	129-00-0	PID	0.2 mg/m ³ 80 mg/m ³ (Coal Pitch Tar)	Groundwater Soil	inhalation, skin or eye contact, ingestion	irritation to eyes and skin, respiratory irritation(dizziness, weakness, fatigue, nausea, headache)	Eye: Irrigate immediately, refer to medical attention Skin: Soap wash immediately Breathing: move to fresh air Swallow: Medical attention immediately
1.3.1 – 1.3.14	sec-Butylbenzene	135-98-8	PID	10 ppm 100 ppm	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose, throat; inhalation: nausea or vomiting	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Selenium	7782-49-2	None	1 mg/m ³ 0.2 mg/m ³	Soil	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; visual disturbance; headache; chills, fever; dyspnea (breathing difficulty), bronchitis; metallic taste, garlic breath, gastrointestinal disturbance; dermatitis; eye, skin burns; in animals: anemia; liver necrosis, cirrhosis; kidney, spleen damage	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Silver	7440-22-4	None	0.01mg/ m ³ 10 mg/m ³	Soil	inhalation, ingestion, skin and/or eye contact	blue-gray eyes, nasal septum, throat, skin; irritation, ulceration skin; gastrointestinal disturbance	Eye: Irrigate immediately Skin: Water flush Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Sodium	7440-23-5	None	NA NA	Groundwater Soil	ion, ingestion, skin and/or eye contact	sensitization dermatitis, allergic asthma, pneumonitis; [potential occupational carcinogen]	Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Sodium 1H,1H,2H,2H-perfluorooctanesulfonate 2-(Perfluorohexyl)ethane-1-sulfonic Acid Sodium Salt ,3,4,4,5,5,6,6,7,7,8,8,8-Tridecafluoro-1-octanesulfonic Acid Sodium Salt; Sodium 1H,1H,2H,2H-perfluoro-1-[1,2-13C2]-octane sulfonate (6:2) Sodium Salt; 3,3,4,4,5,5,6,6,7,7,8,8,8-Tridecafluorooctane-1-sulfonic Acid Sodium Salt; 3,3,4,4,5,5,6,6,7,7,8,8,8-Tridecafluorooctanesulfonic Acid Sodium Salt; 6:2 FTS Impurity: Sodium 1H, 1H, 2H, 2H-Perfluorooctane Sulfonic (6:2) Sodium 1H,1H,2H,2H-Perfluorooctane Sulfonate (6:2)	27619-94-9	NA	None None	Groundwater	inhalation, skin or eye contact, ingestion	irritation to eyes with possible eye damage, skin causing rash, redness or burning, irritation to nose, throat and lungs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Styrene Ethenyl benzene Phenylethylene Styrene monomer Styrol Vinyl benzene	100-42-5	PID	100 ppm 700 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose, respiratory system; headache, lassitude (weakness, exhaustion), dizziness, confusion, malaise (vague feeling of discomfort), drowsiness, unsteady gait; narcosis; defatting dermatitis; possible liver injury; reproductive effects	Eye: Irrigate immediately Skin: Water flush Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Tert-Butyl Alcohol Tertiary Butyl Alcohol Tert-Butanol Butyl alcohol 2-Methyl-2-propanol Trimethyl carbinol TBA	75-65-0	PID	100 ppm 1600 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; drowsiness, narcosis	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	tert-Butylbenzene t-Butylbenzene 2-Methyl-2-phenylpropane Pseudobutylbenzene	98-06-6	PID	10 ppm NA	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	eye, skin irritation; dry nose, throat; headaches; low blood pressure, tachycardia; abnormal cardiovascular system; central nervous system depression; hematopoietic depression	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Tetrachloroethylene Perchloroethylene Perchloroethylene PCE Perk Tetrachloroethylene Tetrachloroethene	127-18-4	PID	100 ppm 150 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat, respiratory system; nausea; flush face, neck; dizziness, incoordination; headache, drowsiness; skin erythema (skin redness); liver damage; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Tetrahydrofuran Diethylene oxide 1,4-Epoxybutane Tetramethylene oxide THF	109-99-9	PID	200 ppm 2000 ppm	Groundwater Soil Vapor	inhalation, skin and/or eye contact, ingestion	irritation to the eyes, upper respiratory system; nausea, dizziness, headache, central nervous system depression	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immedi
1.3.1 – 1.3.14	Thallium	7440-28-0	None	0.1 mg/m ³ 15 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	nausea, diarrhea, abdominal pain, vomiting; ptosis, strabismus; peri neuritis, tremor; retrosternal (occurring behind the sternum) tightness, chest pain, pulmonary edema; convulsions, chorea, psychosis; liver, kidney damage; alopecia; paresthesia legs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Toluene Methyl benzene Methyl benzol Phenyl methane Toluol	108-88-3	PID	200 ppm 500 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, nose; lassitude (weakness, exhaustion), confusion, euphoria, dizziness, headache; dilated pupils, lacrimation (discharge of tears); anxiety, muscle fatigue, paresthesia; dermatitis	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Total PCBs Chlorodiphenyl (42% chlorine) Aroclor® 1242 PCB Polychlorinated biphenyl	53469-21-9	None	0.5 mg/m ³ 5 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, chloracne	Eye: Irrigate immediately Skin: Soap wash immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Total Petroleum Hydrocarbons TPH	CASID30 220	PID	NA NA	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, mucous membrane; dermatitis; headache, lassitude (weakness, exhaustion), blurred vision, dizziness, slurred speech, confusion, convulsions; chemical pneumonitis (aspiration liquid)	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Total Xylenes Dimethylbenzene Xylol	1330-20-7	PID	100 ppm 900 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin, nose, throat; dizziness, excitement, drowsiness, incoordination, staggering gait; corneal vacuolization; nausea, vomiting, abdominal pain; dermatitis	Eye: Irrigate immediately Skin: Soap flush immediately Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Trans-1,2-Dichloroethene trans-1,2-Dichloroethylene tDEC trans-Acetylene dichloride	156-60-5	PID	200 ppm 4000 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	Irritant to eyes, skin, mucous membranes and respiratory system. May be harmful by ingestion, skin absorption and inhalation	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Trichloroethylene Ethylene trichloride TCE Trichloroethene Trilene	79-01-6	PID	100 ppm 1000 ppm	Groundwater Soil Vapor	inhalation, skin absorption, ingestion, skin and/or eye contact	irritation to the eyes, skin; headache, visual disturbance, lassitude (weakness, exhaustion), dizziness, tremor, drowsiness, nausea, vomiting; dermatitis; cardiac arrhythmias, paresthesia; liver injury; [potential occupational carcinogen]	Eye: Irrigate immediately Skin: Soap wash promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Trichlorofluoromethane Fluorotrichloromethane Freon® 11 Monofluorotrichloromethane Refrigerant 11 Trichloromonofluoromethane Freon 11	75-69-4	PID	1000 ppm 2000 ppm	Groundwater Soil Vapor	inhalation, ingestion, skin and/or eye contact	incoordination, tremor; dermatitis; cardiac arrhythmias, cardiac arrest; asphyxia; liquid: frostbite	Eye: Irrigate immediately Skin: Water flush immediately Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Trivalent Chromium Chromium III Chromium, Trivalent	NA	None	1.0 mg/m ³ 250 mg/m ³	Groundwater Soil	inhalation absorption ingestion	irritation to eye, skin, and respiratory	Eye: Irrigate immediately Skin: Soap wash Breathing: Respiratory support Swallow: Medical attention immediately

Task	Contaminant	CAS Number	Monitoring Device	PEL/ IDLH	Source of Concentration on Site	Route of Exposure	Symptoms	First Aid
1.3.1 – 1.3.14	Vanadium	7440-62-2	None	0.1 mg/m ³ 15 mg/m ³	Groundwater Soil	inhalation, skin absorption, ingestion, skin and/or eye contact	nausea, diarrhea, abdominal pain, vomiting; ptosis, strabismus; peri neuritis, tremor; retrosternal (occurring behind the sternum) tightness, chest pain, pulmonary edema; convulsions, chorea, psychosis; liver, kidney damage; alopecia; paresthesia legs	Eye: Irrigate immediately Skin: Water flush promptly Breathing: Respiratory support Swallow: Medical attention immediately
1.3.1 – 1.3.14	Vinyl Chloride Chloroethene Chloroethylen Ethylene monochloride Monochloroethene Monochloroethylene VC Vinyl chloride monomer (VCM)	75-01-4	PID	1 ppm NA	Groundwater Soil Vapor	inhalation, skin and/or eye contact (liquid)	lassitude (weakness, exhaustion); abdominal pain, gastrointestinal bleeding; enlarged liver; pallor or cyanosis of extremities; liquid: frostbite; [potential occupational carcinogen]	Eye: Frostbite Skin: Frostbite Breathing: Respiratory support
1.3.1 – 1.3.14	Zinc	7440-62-2	None	15 mg/m ³ 500 mg/m ³	Groundwater Soil	inhalation	chills, muscle ache, nausea, fever, dry throat, cough; lassitude (weakness, exhaustion); metallic taste; headache; blurred vision; low back pain; vomiting; malaise (vague feeling of discomfort); chest tightness; dyspnea (breathing difficulty), rales, decreased pulmonary function	Breathing: Respiratory support

EXPLANATION OF ABBREVIATIONS

PID = Photoionization Detector

PEL = Permissible Exposure Limit (8-hour Time Weighted Average)

IDLH = Immediately Dangerous to Life and Health

ppm = part per million

mg/m³ = milligrams per cubic meter

TABLE 3
Summary of Monitoring Equipment

Instrument	Operation Parameters
Photoionization Detector (PID)	<p>Hazard Monitored: Many organic and some inorganic gases and vapors.</p> <p>Application: Detects total concentration of many organic and some inorganic gases and vapors. Some identification of compounds is possible if more than one probe is measured.</p> <p>Detection Method: Ionizes molecules using UV radiation; produces a current that is proportional to the number of ions.</p> <p>General Care/Maintenance: Recharge or replace battery. Regularly clean lamp window. Regularly clean and maintain the instrument and accessories.</p> <p>Typical Operating Time: 10 hours. 5 hours with strip chart recorder.</p>
Oxygen Meter	<p>Hazard Monitored: Oxygen (O₂).</p> <p>Application: Measures the percentage of O₂ in the air.</p> <p>Detection Method: Uses an electrochemical sensor to measure the partial pressure of O₂ in the air, and converts the reading to O₂ concentration.</p> <p>General Care/Maintenance: Replace detector cell according to manufacturer's recommendations. Recharge or replace batteries prior to expiration of the specified interval. If the ambient air is less than 0.5% C O₂, replace the detector cell frequently.</p> <p>Typical Operating Time: 8 – 12 hours.</p>
Additional equipment (if needed, based on site conditions)	
Combustible Gas Indicator (CGI)	<p>Hazard Monitored: Combustible gases and vapors.</p> <p>Application: Measures the concentration of combustible gas or vapor.</p> <p>Detection Method: A filament, usually made of platinum, is heated by burning the combustible gas or vapor. The increase in heat is measured. Gases and vapors are ionized in a flame. A current is produced in proportion to the number of carbon atoms present.</p> <p>General Care/Maintenance: Recharge or replace battery. Calibrate immediately before use.</p> <p>Typical Operating Time: Can be used for as long as the battery lasts, or for the recommended interval between calibrations, whichever is less.</p>
Flame Ionization Detector (FID) with Gas Chromatography Option (i.e., Foxboro Organic Vapor Analyzer (OVA))	<p>Hazard Monitored: Many organic gases and vapors (approved areas only).</p> <p>Application: In survey mode, detects the concentration of many organic gases and vapors. In gas chromatography (GC) mode, identifies and measures specific compounds. In survey mode, all the organic compounds are ionized and detected at the same time. In GC mode, volatile species are separated.</p> <p>General Care/Maintenance: Recharge or replace battery. Monitor fuel and/or combustion air supply gauges. Perform routine maintenance as described in the manual. Check for leaks.</p> <p>Typical Operating Time: 8 hours; 3 hours with strip chart recorder.</p>
Potable Infrared (IR) Spectrophotometer	<p>Hazard Monitored: Many gases and vapors.</p> <p>Application: Measures concentration of many gases and vapors in air. Designed to quantify one or two component mixtures.</p> <p>Detection Method: Passes different frequencies of IR through the sample. The frequencies absorbed are specific for each compound.</p> <p>General Care/Maintenance: As specified by the manufacturer.</p>

Instrument	Operation Parameters
Direct Reading Colorimetric Indicator Tube	<p>Hazard Monitored: Specific gas and vapors.</p> <p>Application: Measures concentration of specific gases and vapors.</p> <p>Detection Method: The compound reacts with the indicator chemical in the tube, producing a stain whose length or color change is proportional to the compound's concentration.</p> <p>General Care/Maintenance: Do not use a previously opened tube even if the indicator chemical is not stained. Check pump for leaks before and after use. Refrigerate before use to maintain a shelf life of about 2 years. Check expiration dates of tubes. Calibrate pump volume at least quarterly. Avoid rough handling which may cause channeling.</p>
Aerosol Monitor	<p>Hazard Monitored: Airborne particulate (dust, mist, fume) concentrations</p> <p>Application: Measures total concentration of semi-volatile organic compounds, PCBs, and metals.</p> <p>Detection Method: Based on light-scattering properties of particulate matter. Using an internal pump, air sample is drawn into the sensing volume where near infrared light scattering is used to detect particles.</p> <p>General Care/Maintenance: As specified by the mfr. Also, the instrument must be calibrated with particulates of a size and refractive index similar to those to be measured in the ambient air.</p>
Monitox	<p>Hazard Monitored: Gases and vapors.</p> <p>Application: Measures specific gases and vapors.</p> <p>Detection Method: Electrochemical sensor relatively specific for the chemical species in question.</p> <p>General Care/Maintenance: Moisten sponge before use; check the function switch; change the battery when needed.</p>
Gamma Radiation Survey Instrument	<p>Hazard Monitored: Gamma Radiation.</p> <p>Application: Environmental radiation monitor.</p> <p>Detection Method: Scintillation detector.</p> <p>General Care/Maintenance: Must be calibrated annually at a specialized facility.</p> <p>Typical Operating Time: Can be used for as long as the battery lasts, or for the recommended interval between calibrations, whichever is less.</p>

TABLE 4
INSTRUMENTATION ACTION LEVELS

Photoionization Detector Action Levels	Action Required
Background to 5 ppm ¹	No Respirator, no further action
>5ppm but \leq 15 ppm at the parameter of the work area	Work temporarily halted and monitoring continues If instantaneous readings decrease below 5 ppm above background, work activities will resume with continued monitoring
>5ppm but \leq 25 ppm at the downwind parameter of the hot zone	Work activities will be halted Source of vapors identified Corrective actions taken to abate emissions Continued monitoring Workers will don appropriate respirators and work can resume if vapor levels 200 feet downwind or the hot zone or half the distance to the nearest potential receptor or residential/commercial structure, Work can continue when vapor levels be whichever is less – but in no case less than 20 feet, is below 5 ppm above background for the 15-minute average
>25ppm at the perimeter of the hot zone	Activities will shut down

Particulate Monitoring Action Levels	Action Required
Background to 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) ² , no dust observed	No further action
Background to 100 $\mu\text{g}/\text{m}^3$, dust observed leaving the work area	Dust suppression must be employed
100 to 150 $\mu\text{g}/\text{m}^3$ at the downwind perimeter of the hot zone	Work activities will be halted Source of dust identified Dust suppression activities initiated Corrective actions taken to abate emissions Continued monitoring Workers will don appropriate respirators Work can resume provided that dust suppression measures and other controls are successful in reducing the downwind PM10 concentration to within 150 $\mu\text{g}/\text{m}^3$ of the upwind level and in preventing visible dust migration.
>150 $\mu\text{g}/\text{m}^3$ at the perimeter of the hot zone	Activities will shut down

¹ VOC concentrations are 15-minute averages above site background (upwind parameter)

² Particulate concentrations are 15 minute averages above site background (upwind parameter)

TABLE 5
EMERGENCY NOTIFICATION LIST

ORGANIZATION	CONTACT	TELEPHONE
Local Police Department		911
Local Fire Department		911
Ambulance/Rescue Squad		911
Hospital	North Central Bronx Hospital	911 or 718-519-3500
Langan Incident Hotline		800-952-6426 ex 4699
Medical Treatment Hotline	Incident Intervention	888-449-7787
Langan Environmental Project Manager	Greg Wyka	347-267-2679 (cell)
Langan Health and Safety Manager (HSM)	Tony Moffa	215-756-2523 (cell)
Langan Health & Safety Officer (HSO)	William Bohrer	410-984-3068 (cell)
Langan Field Team Leader (FTL)	To Be Determined	
Client's Representative	David Dimond	914-740-6436
National Response Center (NRC)		800-424-8802
Chemical Transportation Emergency Center (Chemtrec)		800-424-9300
Center for Disease Control (CDC)		404-639-3534
EPA (RCRA Superfund Hotline)		800-424-9346
TSCA Hotline		202-554-1404
Poison Control Center		800-222-1222

Immediately following an injury, unless immediate emergency medical treatment is required, the injured employee must contact Incident Intervention® at 888-449-7787.

For all other incidents or near misses, unless emergency response is required, either the employee or a coworker must contact the Langan Incident Hotline at 1-(800)-9-LANGAN (ext. #4699).

TABLE 6
SUGGESTED FREQUENCY OF PHYSIOLOGICAL MONITORING
FOR FIT AND ACCLIMATED WORKERS^A

Adjusted Temperature^b	Normal Work Ensemble^c	Impermeable Ensemble
90°F or above (32.2°C) or above	After each 45 min. of work	After each 15 min. of work
87.5°F (30.8°-32.2°C)	After each 60 min. of work	After each 30 min. of work
82.5°-87.5°F (28.1°-30.8°C)	After each 90 min. of work	After each 60 min. of work
77.5°-82.5°F (25.3°-28.1°C)	After each 120 min. of work	After each 90 min. of work
72.5°-77.5°F (22.5°-25.3°C)	After each 150 min. of work	After each 120 min. of work

a For work levels of 250 kilocalories/hour.

b Calculate the adjusted air temperature (ta adj) by using this equation: $ta\ adj\ ^\circ F = ta\ ^\circ F + (13 \times \% \text{ sunshine})$. Measure air temperature (ta) with a standard mercury-in-glass thermometer, with the bulb shielded from radiant heat. Estimate percent sunshine by judging what percent time the sun is not covered by clouds that are thick enough to produce a shadow. (100 percent sunshine = no cloud cover and a sharp, distinct shadow; 0 percent sunshine = no shadows.)

c A normal work ensemble consists of cotton coveralls or other cotton clothing with long sleeves and pants.

TABLE 7
HEAT INDEX

RELATIVE HUMIDITY	ENVIRONMENTAL TEMPERATURE (Fahrenheit)										
	70	75	80	85	90	95	100	105	110	115	120
	APPARENT TEMPERATURE*										
0%	64	69	73	78	83	87	91	95	99	103	107
10%	65	70	75	80	85	90	95	100	105	111	116
20%	66	72	77	82	87	93	99	105	112	120	130
30%	67	73	78	84	90	96	104	113	123	135	148
40%	68	74	79	86	93	101	110	123	137	151	
50%	69	75	81	88	96	107	120	135	150		
60%	70	76	82	90	100	114	132	149			
70%	70	77	85	93	106	124	144				
80%	71	78	86	97	113	136					
90%	71	79	88	102	122						
100%	72	80	91	108							

*Combined Index of Heat and Humidity...what it "feels like" to the body

Source: National Oceanic and Atmospheric Administration

How to use Heat Index:

1. Across top locate Environmental Temperature
2. Down left side locate Relative Humidity
3. Follow across and down to find Apparent Temperature
4. Determine Heat Stress Risk on chart at right

Note: Exposure to full sunshine can increase Heat Index values by up to 15 degrees F.

Apparent Temperature	Heat Stress Risk with Physical Activity and/or Prolonged Exposure
90-105	Heat Cramps or Heat Exhaustion Possible
105-130	Heat Cramps or Heat Exhaustion Likely, Heat Stroke Possible
>130	Heatstroke Highly Likely

FIGURES

FIGURE 1

Site Location Map

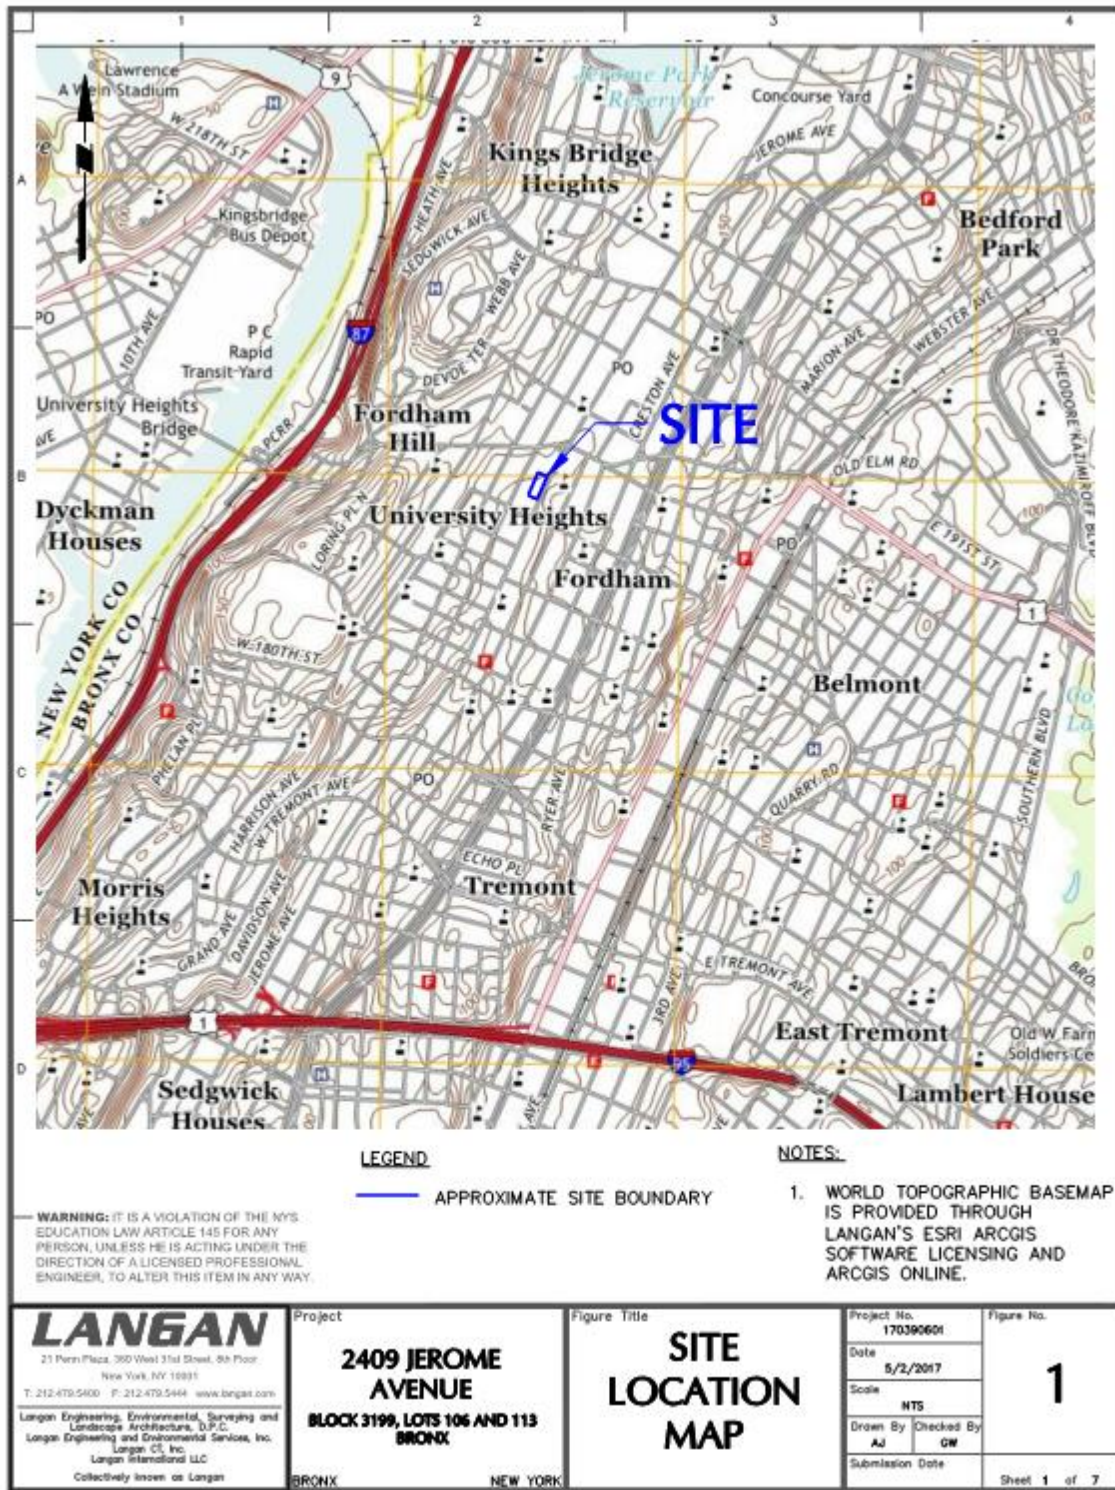


FIGURE 2


HOSPITAL ROUTE PLAN

Hospital Location: **North Central Bronx Hospital**
 3424 Kossuth Avenue
 Bronx, NY
 718-519-3500

START: 2409 Jerome Avenue, Bronx, NY

1. Head northeast on Jerome Avenue toward E. Fordham Road
2. Turn right onto East 208th Street
3. Sharp left onto Steuben Avenue
4. Turn left onto East 210th Street
5. Turn right at the first cross street onto Kossuth Avenue; destination will be on the right.

END: North Central Bronx Hospital, 3424 Kossuth Avenue, Bronx, NY

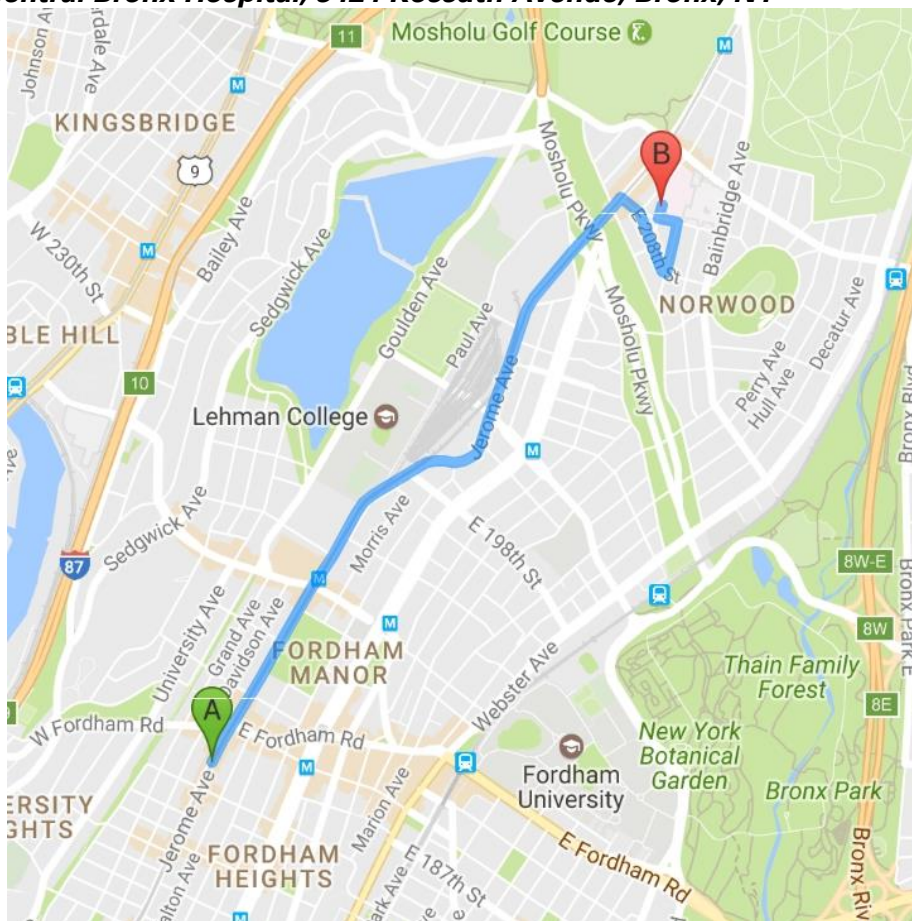

ATTACHMENT A

STANDING ORDERS

STANDING ORDERS

GENERAL

- No smoking, eating, or drinking in this work zone.
- Upon leaving the work zone, personnel will thoroughly wash their hands and face.
- Minimize contact with contaminated materials through proper planning of work areas and decontamination areas, and by following proper procedures. Do not place equipment on the ground. Do not sit on contaminated materials.
- No open flames in the work zone.
- Only properly trained and equipped personnel are permitted to work in potentially contaminated areas.
- Always use the appropriate level of PPE.
- Maintain close contact with your buddy in the work zone
- Contaminated material will be contained in the Exclusion Zone (EZ).
- Report any unusual conditions.
- Work areas will be kept clear and uncluttered. Debris and other slip, trip, and fall hazards will be removed as frequently as possible.
- The number of personnel and equipment in the work zone will be kept to an essential minimum.
- Be alert to the symptoms of fatigue and heat/cold stress, and their effects on the normal caution and judgment of personnel.
- Conflicting situations which may arise concerning safety requirements and working conditions must be addressed and resolved quickly by the site HSO.

TOOLS AND HEAVY EQUIPMENT

- Do not, under any circumstances, enter or ride in or on any backhoe bucket, materials hoist, or any other device not specifically designed to carrying passengers.
- Loose-fitting clothing or loose long hair is prohibited around moving machinery.
- Ensure that heavy equipment operators and all other personnel in the work zone are using the same hand signals to communicate.
- Drilling/excavating within 10 feet in any direction of overhead power lines is prohibited.
- The locations of all underground utilities must be identified and marked out prior to initiating any subsurface activities.
- Check to insure that the equipment operator has lowered all blades and buckets to the ground before shutting off the vehicle.
- If the equipment has an emergency stop device, have the operator show all personnel its location and how to activate it.
- Help the operator ensure adequate clearances when the equipment must negotiate in tight quarters; serve as a signalman to direct backing as necessary.
- Ensure that all heavy equipment that is used in the Exclusion Zone is kept in that zone until the job is done, and that such equipment is completely decontaminated before moving it into the clean area of the work zone.
- Samplers must not reach into or get near rotating equipment such as the drill rig. If personnel must work near any tools that could rotate, the equipment operator must completely shut down the rig prior to initiating such work. It may be necessary to use a remote sampling device.

ATTACHMENT B

DECONTAMINATION PROCEDURES

PERSONNEL DECONTAMINATION

LEVEL C DECONTAMINATION

Station 1:	Equipment Drop	1. Deposit equipment used on-site (tools, sampling devices and containers, monitoring instruments, radios, clipboards, etc.) on plastic drop cloths. Segregation at the drop reduces the probability of cross contamination. During hot weather operations, cool down stations may be set up within this area.
Station 2:	Outer Garment, Boots, and Gloves Wash and Rinse	2. Scrub outer boots, outer gloves and chemical-resistant splash suit with decon solution or detergent and water. Rinse off using copious amounts of water.
Station 3:	Outer Boot and Glove Removal	3. Remove outer boots and gloves. Deposit in container with plastic liner.
Station 4:	Canister or Mask Change	4. If worker leaves Exclusion Zone to change canister (or mask), this is the last step in the decontamination procedure. Worker's canister is exchanged, new outer gloves and boot covers donned, joints taped, and worker returns to duty.
Station 5:	Boot, Gloves and Outer Garment Removal	5. Boots, chemical-resistant splash suit, inner gloves removed and deposited in separate containers lined with plastic.
Station 6:	Face piece Removal	6. Face piece is removed (avoid touching face with fingers). Face piece deposited on plastic sheets.
Station 7:	Field Wash	7. Hands and face are thoroughly washed. Shower as soon as possible.

LEVEL D DECONTAMINATION

Station 1:	Equipment Drop	1. Deposit equipment used on-site (tools, sampling devices and containers, monitoring instruments, radios, clipboards, etc.) on plastic drop cloths. Segregation at the drop reduces the probability of cross contamination. During hot weather operations, cool down stations may be set up within this area.
Station 2:	Outer Garment, Boots, and Gloves Wash and Rinse	2. Scrub outer boots, outer gloves and chemical-resistant splash suit with decon solution or detergent and water. Rinse off using copious amounts of water.
Station 3:	Outer Boot and Glove Removal	3. Remove outer boots and gloves. Deposit in container with plastic liner.
Station 4:	Boot, Gloves and Outer Garment Removal	4. Boots, chemical-resistant splash suit, inner gloves removed and deposited in separate containers lined with plastic.
Station 5:	Field Wash	5. Hands and face are thoroughly washed. Shower as soon as possible.

EQUIPMENT DECONTAMINATION

GENERAL:

Equipment to be decontaminated during the project may include tools, monitoring equipment, respirators, sampling containers, laboratory equipment and drilling equipment.

All decontamination will be done by personnel in protective gear, appropriate for the level of decontamination, as determined by the site HSO. The decontamination work tasks will be split or rotated among support and work crews.

Depending on site conditions, backhoe and pumps may be decontaminated over a portable decontamination pad to contain wash water; or, wash water may be allowed to run off into a storm sewer system. Equipment needed may include a steam generator with high-pressure water, empty drums, screens, screen support structures, and shovels. Drums will be used to hold contaminated wash water pumped from the lined pit. These drums will be labeled as such.

Miscellaneous tools and equipment will be dropped into a plastic pail, tub, or other container. They will be brushed off and rinsed with a detergent solution, and finally rinsed with clean water.

MONITORING EQUIPMENT:

Monitoring equipment will be protected as much as possible from contamination by draping, masking, or otherwise covering as much of the instruments as possible with plastic without hindering the operation of the unit. The PID, HNu or OVA meter, for example, can be placed in a clear plastic bag, which allows reading of the scale and operation of knobs. The probes can be partially wrapped keeping the sensor tip and discharge port clear.

The contaminated equipment will be taken from the drop area and the protective coverings removed and disposed in the appropriate containers. Any dirt or obvious contamination will be brushed or wiped with a disposable paper wipe.

RESPIRATORS:

Respirators will be cleaned and disinfected after every use. Taken from the drop area, the masks (with the cartridges removed and disposed of with other used disposable gear) will be immersed in a cleaning solution and scrubbed gently with a soft brush, followed by a rinse in plain warm water, and then allowed to air dry. In the morning, new cartridges will be installed. Personnel will inspect their own masks for serviceability prior to donning them. And, once the mask is on, the wearer will check the respirator for leakage using the negative and positive pressure fit check techniques.

ATTACHMENT C

EMPLOYEE EXPOSURE/ INJURY INCIDENT REPORT

EMPLOYEE INCIDENT/INJURY REPORT

LANGAN ENGINEERING & ENVIRONMENTAL SERVICES

(Complete and return to Tony Moffa in the Doylestown Office)

Affected Employee Name: _____

Date: _____

Incident type: ☐ Injury ☐ Report Only/No Injury

☐ Near Miss ☐ Other: _____

EMPLOYEE INFORMATION (Person completing Form)

Employee Name: _____

Employee

No: _____

Title: _____

Office

Location: _____

Length of time employed or date of hire: _____

Mailing address: _____

Sex: M ☐ F ☐ Birth date: _____

Business phone & extension: _____

Residence/cell

phone: _____

ACCIDENT INFORMATION

Project: _____

Project

#: _____

Date & time of incident: _____ Time work started & ended: _____

Site location: _____

Incident Type: Possible Exposure ☐

Exposure ☐

Physical Injury ☐

Names of person(s) who witnessed the incident: _____

Exact location incident occurred:

Describe work being done: _____

Describe what affected employee was doing prior to the incident occurring:

Describe in detail how the incident occurred:

Nature of the incident (List the parts of the body affected):

Person(s) to whom incident was reported (Time and Date):

List the names of other persons affected during this incident:

Possible causes of the incident (equipment, unsafe work practices, lack of PPE, etc.):

Weather conditions during incident:

MEDICAL CARE INFORMATION

Did affected employee receive medical care? Yes ☐ No ☐

If Yes, when and where was medical care received: _____

Provide name of facility (hospital, clinic, etc.):

Length of stay at the facility?

Did the employee miss any work time? Yes ☐ No ☐ Undetermined ☐

Date employee last worked: _____ Date employee returned to work: _____

Has the employee returned to work? Yes ☐ No ☐

Does the employee have any work limitations or restrictions from the injury? : Yes ☐ No ☐

If Yes, please describe:

Did the exposure/injury result in permanent disability? Yes ☐ No ☐ Unknown ☐

If Yes, please describe:

HEALTH & SAFETY INFORMATION

Was the operation being conducted under an established site specific HEALTH AND SAFETY PLAN?

Yes ☐ No ☐ Not Applicable: ☐

Describe protective equipment and clothing used by the employee:

Did any limitations in safety equipment or protective clothing contribute to or affect exposure / injury? If so, explain:

Employee Signature

Date

Langan Representative

Date

ATTACHMENT D

CALIBRATION LOG

DATE: _____

PROJECT:_____

CALIBRATION LOG

[illegible]

ATTACHMENT E

MATERIAL SAFETY DATA SHEETS

SAFETY DATA SHEETS

All Langan Field Personnel Completing This Work Plan Are To Have Real Time Accessibility To Material Safety Data Sheet (MSDs) or Safety Data Sheet (SDSs) Through Their Smart Phone.

The link is <http://www.msds.com/>

The login name is "drapehead"

The password is "2angan987"

If You Are Unable To Use the Smart Phone App, You Are To Bring Printed Copies of the MSDs/SDSs to the Site

ATTACHMENT F

JOBSITE SAFETY INSPECTION CHECKLIST

Jobsite Safety Inspection Checklist

Date: _____ **Inspected By:** _____

Location: _____ **Project #:** _____

Check one of the following: **A:** Acceptable **NA:** Not Applicable **D:** Deficiency

	A	NA	D	Remark
1. HASP available onsite for inspection?				
2. Health & Safety Compliance agreement (in HASP) appropriately signed by Langan employees and contractors?				
3. Hospital route map with directions posted on site?				
4. Emergency Notification List posted on site?				
5. First Aid kit available and properly stocked?				
6. Personnel trained in CPR/First Aid on site?				
7. MSDSs readily available, and all workers knowledgeable about the specific chemicals and compounds to which they may be exposed?				
8. Appropriate PPE being worn by Langan employees and contractors?				
9. Project site safe practices ("Standing Orders") posted?				
10. Project staff have 40-hr./8-hr./Supervisor HAZWOPER training?				
11. Project staff medically cleared to work in hazardous waste sites and fit-tested to wear respirators, if needed?				
12. Respiratory protection readily available?				
13. Health & Safety Incident Report forms available?				
14. Air monitoring instruments calibrated daily and results recorded on the Daily Instrument Calibration check sheet?				
15. Air monitoring readings recorded on the air monitoring data sheet/field log book?				
16. Subcontract workers have received 40-hr./8-hr./Spvsr. HAZWOPER training, as appropriate?				
17. Subcontract workers medically cleared to work on site, and fit-tested for respirator wear?				
18. Subcontract workers have respirators readily available?				
19. Mark outs of underground utilities done prior to initiating any subsurface activities?				
20. Decontamination procedures being followed as outlined in HASP?				
21. Are tools in good condition and properly used?				
22. Drilling performed in areas free from underground objects including utilities?				

23. Adequate size/type fire extinguisher supplied?				
24. Equipment at least 20 feet from overhead power lines?				
25. Evidence that drilling operator is responsible for the safety of his rig.				
26. Trench sides shored, layer back, or boxed?				
27. Underground utilities located and authorities contacted before digging?				
28. Ladders in trench (25-foot spacing)?				
29. Excavated material placed more than 2 feet away from excavation edge?				
30. Public protected from exposure to open excavation?				
31. People entering the excavation regarding it as a permit-required confined space and following appropriate procedures?				
32. Confined space entry permit is completed and posted?				
33. All persons knowledgeable about the conditions and characteristics of the confined space?				
34. All persons engaged in confined space operations have been trained in safe entry and rescue (non-entry)?				
35. Full body harnesses, lifelines, and hoisting apparatus available for rescue needs?				
36. Attendant and/or supervisor certified in basic first aid and CPR?				
37. Confined space atmosphere checked before entry and continuously while the work is going on?				
38. Results of confined space atmosphere testing recorded?				
39. Evidence of coordination with off-site rescue services to perform entry rescue, if needed?				
40. Are extension cords rated for this work being used and are they properly maintained?				
41. Are GFCIs provided and being used?				

Unsafe Acts:

Notes:

ATTACHMENT G

JOB SAFETY ANALYSIS FORM

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: COVID-19 Awareness – Site Work
JSA Number: JSA046-00

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work “TAKE 5” and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Boots	<input type="checkbox"/> Long Sleeves	<input type="checkbox"/> Safety Vest (Class 2)	<input type="checkbox"/> Hard Hat	<input type="checkbox"/> Hearing Protection
<input type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input checked="" type="checkbox"/> Other: Alcohol-based hand sanitizer, disinfectant wipes/spray				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
1. All Activities	1. Transmittal/exposure of COVID-19	1. Ask yourself and your managers – is this work essential? Can this be done remotely? 2. Stay home if sick or showing symptoms of COVID-19 (e.g. fever, cough, etc.). 3. Carry nitrile gloves, alcohol-based hand sanitizer, face coverings and disinfectant wipes/spray during field work. 4. Check federal, state, and/or local travel restrictions prior to travel. Many states, counties, and cities are passing strict “shelter-in-place” or business restrictions in response to COVID-19. 5. Immediately notify Beverly Williams or Rory Johnston (Supervisor if employee chooses) if you display symptoms of COVID-19. Symptoms include fever (over 100.4 F), cough, and shortness of breath. 6. Notify Beverly Williams or Rory Johnston, Supervisor and Coronavirus Task Force if you had close contact with an individual who tested positive or displayed symptoms of COVID-19. 7. Do not touch your face, to the extent possible. 8. Wear face coverings when around other worker to minimize spread of COVID-19. (May be required in certain states or locations.)

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
		9. Practice social distancing, maintaining at least 6 feet of distance between yourself and others. Avoid gatherings of more than 10 people. Limit, to the extent possible, contact with public items/objects. 10. Clean your hands frequently with soap and water for at least 20 seconds especially after you have been in a public place, or after blowing your nose, coughing, sneezing, or using the rest room. 11. If soap and water are not readily available, use a hand sanitizer that contains at least 60% alcohol. Cover all surfaces of your hands and rub them together until they feel dry. 12. Cover your mouth and nose with a tissue when you cough or sneeze or use the inside of your elbow. 13. Clean and disinfect frequently touched surfaces daily, for example, cell phones, computer equipment, headsets, tables, doorknobs, light switches, countertops, handles, desks, toilets, faucets, and sinks.
2. Travel to Jobsite	1. Transmittal/exposure of COVID-19 between passengers 2. Transmittal/exposure of COVID-19 from previous occupants (rental and fleet vehicles) 3. Transmittal/exposure of COVID-19 while refueling	1. Limit the number of occupants to each vehicle to 2 people. Employees should sit as far away from each other as possible. 2. Disinfect high "hand-traffic" areas of the vehicle: Door handles, steering wheel, turn signal and control rods, dashboard controls, seatbelts, armrests, etc. To the extent possible, do not use recycled air for heat/AC and travel with the windows open. 3. Use hand sanitizer before and after pumping gas and only return to the inside of the vehicle after refueling is complete. 4. Wear nitrile gloves if available or disinfect the key pad, pump handle, and fuel grade button prior to use. 5. Recommend face coverings are worn to minimize spread of COVID-19.
3. Conduct Tailgate Safety Meeting & Complete H&S Paperwork	1. Transmittal/exposure of COVID-19 between meeting participants	1. Practice social distancing, maintaining at least 6 feet of distance between yourself and others. 2. Recommend face coverings are worn when around other workers to minimize spread of COVID-19, 3. Hold meetings outside and keep in mind wind direction. To the extent possible, remain cross-wind from other people. 4. Designate a single person to maintain sign-in sheets/permits throughout the day to limit the passing of pens/clipboards between people. 5. Each person should complete their own JSA, even if they are completing similar tasks as others in order to limit the passing of paper/pens/clipboards between people. 6. Include COVID-19 topics and prevention measures in safety meetings.
4. Conduct Site Work	1. Transmittal/exposure of COVID-19 between site workers and public.	1. Practice social distancing maintaining 6 feet of distance between yourself and others. 2. Recommend face coverings are worn when around other workers to minimize spread of COVID-19, 3. To the extent possible, do not interact with the public. If it is necessary, politely explain you are practicing social distance and request they stay at least 6 feet away and they do not attempt to pass objects to you. 4. Wear nitrile gloves during site work underneath the appropriate gloves for your task. Utilize appropriate decontamination procedures, securely bag all waste (including nitrile gloves) generated during site work and dispose of.

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
		<ol style="list-style-type: none"> Do not share tools. Each person should be equipped with the tools to complete their task or tasks should be divided to remove the need to share tools. If tools must be shared, surfaces should be disinfected. Clean and disinfect surfaces of rental tools and equipment upon receipt. To the extent possible rent equipment from Langan's internal equipment reservation center, where cleaning/disinfecting procedures can be verified.
5. Use of Construction Trailers	1. Transmittal/exposure of COVID-19 between site workers and others.	<ol style="list-style-type: none"> Avoid use of shared trailers, if possible. Minimize trailer use to essential personnel. Practice social distancing; maintaining 6 feet of distance between yourself and others in trailer. Clean and disinfect areas including desks, phones, chairs and other common areas, before and after use.
6. Purchasing Food from a Restaurant	1. Transmittal/exposure of COVID-19 from other customers, staff, surfaces.	<ol style="list-style-type: none"> To the extent possible, bring your own food. If you must visit a restaurant, call ahead for take-out or "contactless delivery". Do not dine in. When picking up food, follow guidelines for <u>Job Step #8: Purchasing Supplies at Retail/Shipping Centers</u>. Wash hands before and after eating.
7. Smoking Cigarettes	1. Transmittal/exposure of COVID-19 by touching mouth with hands	<ol style="list-style-type: none"> Cigarette smokers maybe at greater risk of complications arising from COVID-19. Nicotine patches/lozenges/gum, smoking cessation programs, and prescription medications may aid in "kicking the habit" if you decide to quit. Wash hands thoroughly before and after smoking. Discard cigarette butts properly. Do not light cigarettes from others and do not give cigarettes to others.
8. Hotel Stay	1. Transmittal/exposure of COVID-19 from previous occupants, hotel staff, common areas.	<ol style="list-style-type: none"> Verify the hotel chain/brand has modified cleaning procedures to reflect risk of COVID-19. Most hotel companies have issued statements on their websites and in email blasts reflecting these new procedures. Use the front door, and not peripheral entrances. Front doors of hotels are generally automatic. Request ground floor room to avoid elevator use and a room that has not be utilized in 48-72 hours. If elevator use is required, do not directly touch elevator buttons with your hands. Do not ride elevators with other people, to the extent possible. Bring disinfecting wipes or sanitizing spray. Upon arrival, disinfect high "hand-traffic" areas of the hotel room: Door handles, light switches, shower/sink faucet handles, TV remote, curtain/blind handles. Clean these surfaces daily. Place the "Do Not Disturb" Sign on your door to prevent people (housekeeping) from entering your room. Avoid common spaces and hotel sponsored events where crowds will be present. Confirm hotel cleaning procedures have been modified to address COVID-19. Confirm no COVID-19 cases have occurred in hotel
9. Purchasing Supplies at Retail/Shipping Centers	1. Transmittal/exposure of COVID-19 from other customers, staff, surfaces.	<ol style="list-style-type: none"> Plan your travel to limit the need to visit retail/shipping centers. Practice social distancing, maintaining at least 6 feet of distance between yourself and others. If the store is too crowded/small, consider visiting another store or returning at a different time. Avoid high "hand-traffic" items/areas like door handles (i.e. use your shoulder, hip/butt, or open with a disposable napkin/paper towel), credit cards terminals (i.e. use Apple/Android pay if available), shopping carts/baskets (i.e. bring your own shopping

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Environmental Sampling
JSA Number: JSA021-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input checked="" type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input checked="" type="checkbox"/> Insect/Animal Repellent	<input checked="" type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input checked="" type="checkbox"/> Other: Tyvek Sleeves				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
1. Drive to sample location	1. Rough/Off Road terrain	1. Pay attention to road conditions such as road erosion, unprotected embankments, and soft road conditions.
2. Sample Collection (Walking)	1. Slip/Trips/Falls 2. Back strains 3. Wildlife (Insects, Stray animals, rodents) 4. Poisonous vegetation	1. Minimize distance to sample area/ Plan route and check surface prior to carrying heavy equipment/ Locate safest access point/ Follow good housekeeping procedures/ Mark significant below grade hazards (holes, trenches) with spray paint or cones/ Wear foot protection with ankle support and gripping soles. 2. Use proper lifting techniques/ Use wheeled transport/ Obtain assistance where and when needed/ Consider load weight when evaluating what is safe and unsafe to carry. 3. Be aware of surroundings for the presence of wildlife. Do not approach stray animals. Carry and use animal repellant when needed/ Use bug spray when needed. 4. Keep skin covered/ Identify and avoid poisonous vegetation/ Clean areas after contact with suspected vegetation.
3. Sample Collection (Water)	1. Drowning Hazards 2. Chemical burns (when adding acid preservative to sample) 3. Back Strains 4. Ergonomic issues 5. Slip/Trips/Falls	1. Use buddy system/ Wear flotation vest if water is deeper than 2 feet or swift moving/ Select working area with stable footing. Do not attempt to cross or stand in swift moving water. 2. Wear proper PPE (Nitrile gloves, Tyvek Sleeves) 3. Use proper lifting techniques/ Use wheeled transport/ Obtain assistance where and when needed/ Consider load weight when evaluating what is safe or unsafe to carry. 4. When possible avoid bending over for long periods of time/ Use a small stool for sitting or knee pad for kneeling.

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
		5. Minimize distance to sample area/ Plan route and check surface prior to carrying heavy equipment/ Locate safest access point/ Follow good housekeeping procedures/ Mark significant below grade hazards (holes, trenches) with spray paint or cones/ Wear foot protection with ankle support and gripping soles/ Avoid standing water or slippery terrain.
4.All activities	1. Slips/ Trips/ Falls 2. Hand injuries, cuts or lacerations during manual handling of materials 3. Foot injuries 4. Back injuries 5. Traffic 6. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 7. High Noise levels 8. Overhead hazards 9. Heat Stress/ Cold Stress 10. Eye Injuries	1. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 2. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 3. Wear Langan approved safety shoes 4. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 5. Wear high visibility clothing & vest / Use cones or signs to designate work area 6. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 7. Wear hearing protection 8. Wear hard hat / Avoid areas where overhead hazards exist. 9. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Takes breaks as necessary to avoid heat/cold stress 10. Wear safety glasses
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Subsurface Investigation
JSA Number: JSA030-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input checked="" type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input checked="" type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input checked="" type="checkbox"/> Other: Dielectric Overshoes, Sun Block				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
5. Transport equipment to work area	2. Back/strain 3. Slip/Trip/Falls 4. Traffic 5. Cuts/abrasions/contusions from equipment 6. Accidents due to vehicle operations	1. Use proper lifting techniques/Use wheeled transport 2. Minimize distance to work area/unobstructed path to work area/follow good housekeeping procedures 3. Wear proper PPE (high visibility vest or clothing) 4. Wear proper PPE (leather gloves, long sleeves, Langan approved safety shoes) 5. Observe posted speed limits/ Wear seat belts at all times
6. Traffic	1. Hit by moving vehicle	1. Use traffic cones and signage/ Use High visibility traffic vests and clothing/ Caution tape when working near active roadways.
7. Field Work (drilling, resistivity testing, and inspection)	1. Biological Hazards: insects, rats, snakes, poisonous plants, and other animals 2. Heat stress/injuries 3. Cold Stress/injuries 4. High Energy Transmission Lines 5. Underground Utilities 6. Electrical (soil resistivity testing)	1. Inspect work area to identify biological hazards. Wear light colored long sleeve shirt and long pants/ Use insect repellent as necessary/ Beware of tall grass, bushes, woods and other areas where ticks may live/ Avoid leaving garbage on site to prevent attracting animals/ Identify and avoid contact with poisonous plants/Beware of rats, snakes, or stray animals. 2. Wear proper clothing (light colored)/ drink plenty of water/ take regular breaks/use sun block 3. Wear proper clothing/ dress in layers/ take regular breaks. 4. Avoid direct contact with high energy transmission lines/ position equipment at least 15 feet or as required by PSE&G from the transmission lines/ wear proper PPE (dielectric overshoes 15 kV minimum rating).

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
		5. Call one-call service before performing intrusive field work/ Review utility mark-outs and available utility drawings (with respect to proposed work locations)/ Follow Underground Utility Guidelines 6. See AGI Sting R1 operating manual for specific concerns during operating instrument
8.All activities	1. Slips/ Trips/ Falls 2. Hand injuries, cuts or lacerations during manual handling of materials 3. Foot injuries 4. Back injuries 5. Traffic 6. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 7. High Noise levels 8. Overhead hazards 9. Heat Stress/ Cold Stress 10. Eye Injuries	7. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 8. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 9. Wear Langan approved safety shoes 10. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 11. Wear high visibility clothing & vest / Use cones or signs to designate work area 12. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 13. Wear proper hearing protection 14. Wear hard hat / Avoid areas where overhead hazards exist. 15. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Take breaks as necessary to avoid heat/cold stress 16. Wear safety glasses
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Field Sampling

JSA Number: JSA022-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?

T – Think about the task

E – Evaluate potential hazards

P – Plan safe approach

S - Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input checked="" type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input type="checkbox"/> Other:				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
9. Unpack/Transport equipment to work area.	7. Back Strains 8. Slip/Trips/Falls 9. Cuts/Abrasions from equipment 10. Contusions from dropped equipment	6. Use proper lifting techniques/Use wheeled transport 7. Minimize distance to work area/Unobstructed path to work area/follow good housekeeping procedures. Mark slip/trip/fall hazards with orange safety cones. 8. Wear proper PPE (leather gloves, long sleeves). 9. Wear proper PPE (Langan approved safety shoes).
10. Initial Site Arrival-Site Assessment	5. Traffic	5. Situational awareness (be alert of your surroundings). Secure area from through traffic.
11. Surface Water Sampling	6. Contaminated media. Skin/eye contact with biological agents and/or chemicals.	6. Wear appropriate PPE (Safety glasses, appropriate gloves). Review (M)SDS for all chemicals being.
12. Sampling from bridges	1. Struck by vehicles	1. Wear appropriate PPE (Safety Vest). Use buddy system and orange safety cones.
13. Icing of Samples/Transporting coolers/equipment from work area.	11. Back Strains 12. Slips/Trips/Falls 13. Cuts/Abrasions from equipment 14. Pinch/Crushing Hazards.	17. Drain coolers of water. Use proper lifting techniques. Use wheeled transport. 18. Have unobstructed path from work area. Aware of surroundings. 19. Wear proper PPE (Leather gloves, long sleeves) 20. Wear proper PPE (Leather gloves, long sleeves)
14. Site Departure	1. Contaminated PPE/Vehicle	1. Contaminated PPE should be disposed of on-site. Remove boots and soiled clothing for secure storage in trunk. Wash hands promptly.

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
15. All activities	1. Slips/ Trips/ Falls 2. Hand injuries, cuts or lacerations during manual handling of materials 3. Foot injuries 4. Back injuries 15. Traffic 16. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 17. High Noise levels 18. Overhead hazards 19. Heat Stress/ Cold Stress 20. Eye Injuries	1. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 2. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 3. Wear Langan approved safety shoes 4. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 21. Wear high visibility clothing & vest / Use cones or signs to designate work area 22. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 23. Wear hearing protection 24. Wear hard hat / Avoid areas were overhead hazards exist. 25. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Takes breaks as necessary to avoid heat/cold stress 26. Wear safety glasses
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Equipment Transportation and Set-up
JSA Number: JSA012-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other:

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
16. Transport equipment to work area	11. Back Strain 12. Slips/ Trips/ Falls 13. Traffic 14. Cuts/abrasions from equipment 15. Contusions from dropped equipment	1. Use proper lifting techniques / Use wheeled transport 2. Minimize distance to work area / Have unobstructed path to work area / Follow good housekeeping procedures 3. Wear proper PPE (high visibility vest or clothing) 4. Wear proper PPE (leather gloves, long sleeves) 5. Wear proper PPE (safety shoes)
17. Moving equipment to its planned location	6. Pinch Hazard 7. Slips/ Trips/ Falls	1. Wear proper PPE (leather gloves) 2. Be aware of potential trip hazards / Practice good housekeeping procedures / Mark significant below-grade hazards (i.e. holes, trenches) with safety cones or spray paint
18. Equipment Set-up	7. Pinch Hazard 8. Cuts/abrasions to knuckles/hands 9. Back Strain	1. Wear proper PPE (leather gloves) 2. Wear proper PPE (leather gloves) 3. Use proper lifting techniques / Use wheeled transport
19. All activities	21. Slips/ Trips/ Falls 22. Hand injuries, cuts or lacerations during manual handling of materials 23. Foot injuries 24. Back injuries 25. Traffic 26. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.)	27. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 28. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 29. Wear Langan approved safety shoes

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
4. All activities (cont'd)	27. High Noise levels 28. Overhead hazards 29. Heat Stress/ Cold Stress 30. Eye Injuries	30. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 31. Wear high visibility clothing & vest / Use cones or signs to designate work area 32. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 33. Wear hearing protection 34. Wear hard hat / Avoid areas where overhead hazards exist. 35. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Takes breaks as necessary to avoid heat/cold stress 36. Wear safety glasses
Additional items.		
Additional Items identified while in the field.		
(Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: 55-gallon Drum Sampling
JSA Number: JSA043-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input checked="" type="checkbox"/> Safety Goggles	<input checked="" type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input checked="" type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input checked="" type="checkbox"/> Other: All Drums are required to be labeled. Langan employees do not open or move undocumented drums or unlabeled drums without proper project manager authorization.				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
20. Unpack/Transport equipment to work area.	16. Back Strains 17. Slip/Trips/Falls 18. Cuts/Abrasions from equipment 4. Contusions from dropped equipment	10. Use proper lifting techniques/Use wheeled transport 11. Minimize distance to work area/Unobstructed path to work area/follow good housekeeping procedures. Mark slip/trip/fall hazards with orange safety cones. 12. Wear proper PPE (leather gloves, long sleeves). 4. Wear proper PPE (Langan approved safety shoes).
21. Open Drums	1. Hand Injuries, cuts or lacerations when untightening drum locking bolt, removing drum lid strap, or removing lid. 2. Pressure from drums.	1. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves. Use non-metallic mallet and non-sparking tools/wrenches. 2. Open drum slowly to relieve pressure. Wear proper PPE: face shield and goggles; correct gloves; and over garments.
22. Collecting Soil/Fluid Sample	8. Irritation to eye from vapor, soil dust, or splashing 9. Irritation to exposed skin	6. Wear proper eye protection including safety glasses/ face shield/goggles and when necessary, splash guard. If dust or vapor phase is present, wear appropriate safety breathing gear (1/2 mask or full face mask with correct filter) 7. Wear proper skin protection including nitrile gloves.
23. Closing Drums	1. Hand Injuries, cuts or lacerations when untightening drum locking bolt, removing drum lid strap, or removing lid.	7. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves. Use non-metallic mallet and non-sparking tools/wrenches.

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
24. Moving Drums	2. Hand Injuries, cuts or lacerations when untightening drum locking bolt, removing drum lid strap, or removing lid. 3. Back Strains	2. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves. Use non-metallic mallet and non-sparking tools/wrenches. 3. Use proper lifting techniques/Use wheeled transport
25. All activities	31. Slips/ Trips/ Falls 32. Hand injuries, cuts or lacerations during manual handling of materials 33. Foot injuries 34. Back injuries 35. Traffic 36. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 37. High Noise levels 38. Overhead hazards 39. Heat Stress/ Cold Stress 40. Eye Injuries	37. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 38. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 39. Wear Langan approved safety shoes 40. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 41. Wear high visibility clothing & vest / Use cones or signs to designate work area 42. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 43. Wear hearing protection 44. Wear hard hat / Avoid areas where overhead hazards exist. 45. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Take breaks as necessary to avoid heat/cold stress 46. Wear safety glasses
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Direct-Push Soil Borings
JSA Number: JSA004-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT REQUIRED:

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input checked="" type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	
<input checked="" type="checkbox"/> Other: Half-face respirator, dust cartridges, PID (if applicable)				

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
26. Move equipment to work site	19. Back strain when lifting equipment 20. Slips/ Trips/ Falls while moving equipment 21. Traffic (if applicable) 22. Pinched fingers or running over toes during geoprobe set-up 23. Overturn drilling rig while transporting to loading dock on flat-bed tow truck	13. Use proper lifting technique (use legs for bending and lifting and not the back)/ Use wheeled transport for heavy equipment / Get assistance when handling loads greater than 50 lbs. / Minimize distance to vehicle 14. Use proper lifting technique (use legs for bending and lifting and not the back) / Use wheeled transport for heavy equipment / Get assistance when handling loads greater than 50 lbs. / Minimize distance to vehicle / Have unobstructed path to vehicle or collection point / Do not lift/walk with boxes that are heavy/difficult to lift 15. Wear high visibility safety vests or clothing / Exercise caution 16. Wear proper PPE (cut-resistant gloves) / Stay alert, be aware of geoprobe rig at all times 17. Drill rig should be parked in center of flat-bed tow truck / Emergency brake shall be used at all times during transport on the flat-bed truck/ All unnecessary personnel should stay away from the flat-bed truck during moving activities
27. Calibration of monitoring equipment	10. Skin or eye contact with calibration chemicals 11. Pinch fingers in monitoring equipment	8. Wear proper PPE (safety glasses/ goggles) 9. Wear proper PPE (leather gloves)
28. Set-up geoprobe rig	10. Geoprobe rig movement	8. All field personnel should stay clear of the geoprobe rig while moving / Use a spotter when backing up the geoprobe
29. Advance geoprobe rods below ground surface to desired depth	4. Underground utilities 5. High noise levels	4. Clean all subsurface soil borings to a minimum of 5 feet below grade 5. Wear proper PPE (hearing protection)

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
30. Remove and open acetate liner 5. Remove and open acetate liner (cont'd)	41. Pinched fingers while removing macrocore 42. Cuts/lacerations when cutting acetate liner open 43. Exposure to hazardous vapors 44. Skin contact with contaminated soil	1. Wear proper PPE (nitrile gloves, cut-resistant or leather gloves) 2. Wear proper PPE (cut-resistant or leather gloves) 3. Do not place face over acetate liner when opening / Monitor hazardous vapors in air with PID / Upgrade PPE as necessary based on levels contained in the Health and Safety Plan 4. Wear proper PPE (nitrile gloves)
31. Sample Collections a) Monitor parameters b) Prepare sample containers and labels	1. Contact with potentially contaminated soil 2. Lacerations from broken sample bottles 3. Back strain while transporting full coolers 4. Internal exposure to contaminants and metals through inhalation of dust 5. Slips/ Trips/ Falls	1. Use monitoring devices / Wear proper PPE (safety glasses, nitrile gloves) 2. Do not over-tighten bottle caps / Handle bottles safely to prevent breakage 6. Use proper lifting techniques / Do not lift heavy loads without assistance 7. Avoid creating dust / If necessary, wear a half mask respirator with applicable dust cartridge / Inspect respirator for damage and cleanliness prior to use / Clean respirator after each use and store in a clean, secure location 8. Be alert / Follow good housekeeping procedures
32. Remove excess soil from acetate liner and place in 55-gallon drum (IF NOT PERFORMED BY LANGAN, REMOVE!)	1. Cuts/lacerations from acetate liner 2. Pinched fingers/hand while opening/closing drum 3. Skin contact with contaminated soil 4. Soil debris in eyes	1. Wear proper PPE (cut-resistant or leather gloves) 2. Wear proper PPE (cut-resistant or leather gloves) 3. Wear proper PPE (nitrile gloves) 4. Wear proper PPE (safety glasses)

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
8. Transport drums to central staging location (IF NOT PERFORMED BY LANGAN, REMOVE!)	1. Back, arm or shoulder strain from moving drums 2. Pinch fingers/hand in drum cart when moving drums 3. Pinch fingers/hand when operating lift-gate on vehicle 4. Contact with potentially contaminated groundwater when moving improperly sealed drums 5. Slips when moving drums 6. Drop drum on feet/toes	47. Use drum cart for moving drums / Use proper lifting techniques / Do not lift heavy loads without assistance 48. Wear proper PPE (cut-resistant or leather gloves) 49. Wear proper PPE (cut-resistant or leather gloves) 50. Wear proper PPE (nitrile gloves underneath work gloves) 51. Follow good housekeeping procedures / Ensure route to move drum and storage space is free from obstructions 52. Wear proper PPE (safety shoes) / Work in a safe manner to prevent dropped drum
9. All activities	1. Slips/ Trips/ Falls 2. Hand injuries, cuts or lacerations during manual handling of materials 3. Foot injuries 4. Back injuries 5. Traffic 6. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 7. High Noise levels 8. Overhead hazards 9. Heat Stress/ Cold Stress	1. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 2. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 3. Wear Langan approved safety shoes 4. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 5. Wear high visibility clothing & vest / Use cones or signs to designate work area 6. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 7. Wear hearing protection 8. Wear hard hat / Avoid areas where overhead hazards exist. 9. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Take breaks as necessary to avoid heat/cold stress 10. Wear safety glasses
9. All activities (cont'd)	10. Eye Injuries	
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
-------------------	------------------	-------------

[illegible]

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Geophysical Investigation
JSA Number: JSA023-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input checked="" type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other:

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
33. Transport equipment to work area	24. Back/strain 25. Slip/Trip/Falls 26. Traffic 27. Cuts/abrasions/contusions from equipment	18. Use proper lifting techniques/Use wheeled transport 19. Minimize distance to work area/unobstructed path to work area/follow good housekeeping procedures 20. Wear proper PPE (high visibility vest or clothing) 21. Wear proper PPE (leather gloves, long sleeves, Langan approved safety shoes)
34. Supervision of subcontractor and all other activities	12. Slip/Trips/Falls 13. Hand injuries 14. Foot injuries 15. Back injuries/Strains 16. Traffic 17. Wildlife a. Wildlife b. Mice/rats c. Vectors (i.e. mosquitoes, bees, etc.) 7. Heat/Cold Stress	10. Be aware of potential trip hazards/follow good housekeeping procedures/mark significant below-grade hazards (i.e. holes, trenches, wires, ropes) with safety cones or spray paint. 11. Wear proper PPE (leather gloves)/watch wear you place your hands/inspect material or equipment for jagged, rough or slippery surfaces/ watch for pinch points/ wipe off slippery, wet, or dirty items prior to handling. 12. Wear proper PPE (Langan approved safety shoes)/ Be aware of uneven terrain) 13. Use proper lifting techniques/ Buddy system when lifting/ use wheeled transport. 14. Wear proper PPE (high-visibility shirts and vests)/ use cones if appropriate/ notify equipment operators of work area. 15. Be aware of surroundings at all times for the presence of wildlife. a. Do not approach stray animals b. Carry animal repellent/ use if situation arises. c. Use bug spray when needed. 7. Wear proper attire for weather conditions (sunscreen, protective clothing in

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
		sunlight or layer clothing in cold weather)/ drink plenty of fluids/ take regular breaks.
35. All activities	45. Slips/ Trips/ Falls 46. Hand injuries, cuts or lacerations during manual handling of materials 47. Foot injuries 48. Back injuries 49. Traffic 50. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 51. High Noise levels 52. Overhead hazards 53. Heat Stress/ Cold Stress 54. Eye Injuries	53. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 54. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 55. Wear Langan approved safety shoes 56. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 57. Wear high visibility clothing & vest / Use cones or signs to designate work area 58. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 59. Wear proper hearing protection 60. Wear hard hat / Avoid areas were overhead hazards exist. 61. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Takes breaks as necessary to avoid heat/cold stress 62. Wear safety glasses
Additional items.		
Additional Items identified while in the field. (Delete row if not needed.)		

<u>Print Name</u>	<u>Sign Name</u>	<u>Date</u>
<u>Prepared by:</u>		
<u>Reviewed by:</u>		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Excavation Oversight
JSA Number: JSA041-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input checked="" type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other: _____

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
36. Transport equipment to work area	28. Back Strain 29. Slips/Trips/Falls 30. Traffic 31. Cuts/abrasions/contusions from equipment	22. Use proper lifting techniques / Use wheeled transport 23. Minimize distance to work area / Have unobstructed path to work area / Follow good housekeeping procedures 24. Wear proper PPE (high visibility vest or clothing) 25. Wear proper PPE (leather gloves, long sleeves, safety shoes)
37. Earth Moving Equipment	18. Equipment running over employee	16. Ensure you have direct line of sight with operator of equipment; don't walk behind equipment; maintain a safe distance away from equipment. 17. Wear proper PPE (high vis vest/clothing)
38. Excavation	11. Excavation collapse 12. Confined space 13. Soil	9. Use proper shoring/benching/sloping techniques; Ladder is properly situated in excavation; no water in excavation; competent person has inspected excavation prior to allow employees to enter. 10. Langan employees are not authorized to enter a confined space; 11. Soil and equipment is kept at least 2 feet from edge of excavation
39. Excavated soil	1. Hazardous substances	1. Use proper equipment to monitor excavated soil for contaminants; ensure levels do not exceed PEL's for contaminants; Wear proper PPE
40. All activities	55. Slips/ Trips/ Falls 56. Hand injuries, cuts or lacerations during manual handling of materials 57. Foot injuries 58. Back injuries 59. Traffic	63. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 64. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 65. Wear proper PPE (Langan approved safety shoes)

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: General Construction Activities
JSA Number: JSA010-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventative/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input checked="" type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input checked="" type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other:

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
41. Transport equipment to work area	32. Back Strain 33. Slips/ Trips/ Falls 34. Traffic 35. Cuts/abrasions from equipment 36. Contusions from dropped equipment	6. Use proper lifting techniques / Use wheeled transport 7. Minimize distance to work area / Have unobstructed path to work area / Follow good housekeeping procedures 8. Wear proper PPE (high visibility vest or clothing) 9. Wear proper PPE (leather gloves, long sleeves) 10. Wear proper PPE (safety shoes)
42. Installation of piping from vapor wells to skid connections and from discharge piping to effluent stack	19. Pinch fingers when connecting pipes 20. Slips/ Trips/ Falls 21. Machinery Hazards	3. Wear proper PPE (leather gloves) 4. Be aware of potential trip hazards / Practice good housekeeping procedures / Mark significant below-grade hazards (i.e. holes, trenches) with safety cones or spray paint 5. Wear proper PPE (safety vest) / Maintain safe distance from operating machinery
43. Remediation equipment installation	14. Back strain when lifting heavy equipment 15. Slips/ Trips/ Falls 16. Traffic	5. Use proper lifting techniques / Use wheeled transport / Minimize distance to vehicle 6. Be aware of potential trip hazards / Practice good housekeeping procedures / Mark significant below-grade hazards (i.e. holes, trenches) with safety cones or spray paint 7. Wear proper PPE (safety vest)
44. All activities	65. Slips/ Trips/ Falls 66. Hand injuries, cuts or lacerations during manual handling of materials 67. Foot injuries 68. Back injuries	73. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 74. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Site Inspection
JSA Number: JSA024-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventive/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – *Stop, what has changed?*
T – *Think about the task*
E – *Evaluate potential hazards*
P – *Plan safe approach*
S – *Start task / Stop & regroup*

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input checked="" type="checkbox"/> Rubber Boots
<input checked="" type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input checked="" type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other:

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
45. Jobsite Pre-briefing	37. None	26. Review JSA, SOP's, and discuss hazards that may be present and control measures for present hazards while on-site.

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
2. Working near railroads	1. Passing Trains. 2. Slip/Trips/Falls.	1. Wear reflective vest/ Stay away from tracks/ Do not cross tracks within 10 ft. of train car or when there is a train within view/listen for train horn. 2. Be aware of tripping hazards/ Follow good housekeeping procedures/ Mark significant hazards with spray paint or cones.
3. Walking around site	6. Uneven terrain 7. Wildlife: Stray animals, mice/rats, vectors (i.e. mosquitoes, bees, etc.) 8. Weather: Heat/cold stress 9. Slip/Trips/Falls 10. Foot injuries 11. Eye injuries	9. Pay attention to surrounding area (puddles, wet, frozen, uneven areas); Mark with cones or spray paint. 10. Use bug spray/ Avoid stray animals/Use repellant when needed. 11. Dress for the correct weather situation/ Use sunscreen or protective clothing in sunlight, layers in cold weather/ Drink plenty of fluids/ Take breaks when needed. 4. Be aware of tripping hazards/ Follow good housekeeping procedures/ Mark significant hazards with spray paint or cones. 5. Wear proper PPE (Langan approved safety shoes)/ Change wet socks during cold weather. 6. Wear proper PPE (safety glasses/goggles).
4. Working near road	1. Passing vehicles 2. Slip/Trips/Falls	1. Wear reflective vest/ Stay away from roadway/ Use buddy system/ Place signage or cones when needed. 2. Be aware of tripping hazards/ Follow good housekeeping procedures/ Mark significant hazards with spray paint or cones.
5. All activities	75. Slips/ Trips/ Falls 76. Hand injuries, cuts or lacerations during manual handling of materials 77. Foot injuries 78. Back injuries 79. Traffic 80. Wildlife: Stray dogs, Mice/rats, Vectors (i.e. mosquitoes, bees, etc.) 81. High Noise levels 82. Overhead hazards 83. Heat Stress/ Cold Stress 84. Eye Injuries	83. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 84. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 85. Wear Langan approved safety shoes 86. Use proper lifting techniques / Consider load location, task repetition, and load weigh when evaluating what is safe or unsafe to lift / Obtain assistance when possible 87. Wear high visibility clothing & vest / Use cones or signs to designate work area 88. Be aware of surroundings at all times, including the presence of wildlife/ Do not approach stray dogs / Carry/use dog/animal repellant / Use bug spray when needed 89. Wear hearing protection 90. Wear hard hat / Avoid areas where overhead hazards exist. 91. Wear proper attire for weather conditions (sunscreen or protective clothing in sunlight, layers for cold weather) / Drink plenty of fluids to avoid dehydration / Takes breaks as necessary to avoid heat/cold stress 92. Wear safety glasses
Additional items.		

LANGAN

Job Safety Analysis (JSA) Health and Safety

JSA Title: Building Construction Oversight
JSA Number: JSA006-01

A Job Safety Analysis (JSA) must identify all job steps required to complete the task, the potential hazards employees could be exposed to while performing the job step and the preventative/corrective actions required to reduce/mitigate the identified potential hazards. Employees must certify that they have either prepared the JSA or have reviewed the JSA and are aware of the potential hazards associated with this task and will follow the provided preventative/corrective actions. Prior to the start of any work "TAKE 5" and conduct a Last Minute Risk Assessment.



S – Stop, what has changed?
T – Think about the task
E – Evaluate potential hazards
P – Plan safe approach
S – Start task / Stop & regroup

PERSONAL PROTECTIVE EQUIPMENT (Required or to be worn as needed):

<input checked="" type="checkbox"/> Safety Shoes	<input checked="" type="checkbox"/> Long Sleeves	<input checked="" type="checkbox"/> Safety Vest (Class 2)	<input checked="" type="checkbox"/> Hard Hat	<input checked="" type="checkbox"/> Hearing Protection
<input checked="" type="checkbox"/> Safety Glasses	<input type="checkbox"/> Safety Goggles	<input checked="" type="checkbox"/> Face Shield	<input checked="" type="checkbox"/> Nitrile Gloves	<input type="checkbox"/> PVC Gloves
<input checked="" type="checkbox"/> Leather Gloves	<input type="checkbox"/> Cut Resist. Gloves	<input type="checkbox"/> Fall Protection	<input type="checkbox"/> Fire Resistant Clothing	<input type="checkbox"/> Rubber Boots
<input type="checkbox"/> Insect/Animal Repellent	<input type="checkbox"/> Ivy Blocker/Cleaner	<input checked="" type="checkbox"/> Traffic Cones/Signs	<input type="checkbox"/> Life Vest/Jacket	

☐ Other:

JOB STEPS	POTENTIAL HAZARDS	PREVENTATIVE / CORRECTIVE ACTION
46. Transport equipment to work area	38. Back Strain 39. Slips/ Trips/ Falls 40. Traffic 41. Cuts/abrasions from equipment 42. Contusions from dropped equipment	11. Use proper lifting techniques / Use wheeled transport 12. Minimize distance to work area / Have unobstructed path to work area / Follow good housekeeping procedures 13. Wear proper PPE (high visibility vest or clothing) 14. Wear proper PPE (leather gloves, long sleeves) 15. Wear proper PPE (safety shoes)
47. Drilling/anchor bolt installation	22. Hazards associated with drilling, flying objects, heavy equipment, ground level hazards and dust 23. Slips/ Trips/ Falls 24. Hazards associated with concrete work	6. Maintain a safe distance from drilling operation / Wear proper PPE (hard hat, safety glasses, safety shoes, safety vest) 7. Be aware of potential trip hazards / Follow good housekeeping procedures / Mark significant below-grade hazards (i.e. holes, trenches) with safety cones or spray paint / Wear the proper PPE (safety shoes) 8. Maintain a safe distance from pouring operation
48. Steel building erection	17. Overhead hazards, falling objects 18. Pinching/crushing hazards	8. Wear proper PPE (hard hat, safety glasses, safety vest) / Be aware of overhead hazards and maintain a safe distance of at least 10 ft. 9. All personnel should make others aware of moving objects or their intent to move objects / Avoid areas where pinching and crushing hazards are possible
49. All activities	85. Slips/ Trips/ Falls 86. Hand injuries, cuts or lacerations during manual handling of materials 87. Foot injuries 88. Back injuries 89. Traffic	93. Be aware of potential trip hazards / Follow good housekeeping procedures/ Mark significant hazards 94. Inspect for jagged/sharp edges, and rough or slippery surfaces / Keep fingers away from pinch points / Wipe off greasy, wet, slippery or dirty objects before handling / Wear leather/ cut-resistant gloves 95. Wear Langan approved safety shoes

ATTACHMENT H

TAILGATE SAFETY BRIEFING FORM

LANGAN TAILGATE SAFETY BRIEFING

Date: _____

Time: _____

Leader: _____

Location: _____

Work Task:

SAFETY TOPICS (provide some detail of discussion points)

Chemical Exposure Hazards and Control: _____

Physical Hazards and Control: _____

Air Monitoring: _____

PPE: _____

Communications: _____

Safe Work Practices: _____

Emergency Response: _____

Hospital/Medical Center Location: _____

Phone Nos.: _____

Other: _____

FOR FOLLOW-UP (the issues, responsibilities, due dates, etc.)

ATTENDEES

PRINT NAME	COMPANY	SIGNATURE

APPENDIX C

QUALITY ASSURANCE PROJECT PLAN

QUALITY ASSURANCE PROJECT PLAN

for

**2409 JEROME AVENUE
Bronx, New York
BCP Site No. C203087**

Prepared For:

**2409 Jerome, Inc.
29 East Fordham Road
Bronx, NY 10468**

Prepared By:

**Langan Engineering, Environmental, Surveying
Landscape Architecture and Geology, D.P.C.
21 Penn Plaza
360 West 31st Street, 8th Floor
New York, New York 10001**

**March 29, 2021
Langan Project No. 170390601**

LANGAN

TABLE OF CONTENTS

1.0	PROJECT DESCRIPTION	3
1.1	Introduction	3
1.2	Project Objectives	3
1.3	Scope of Work.....	4
1.4	Data Quality Objectives and Process	5
2.0	PROJECT ORGANIZATON	7
3.0	QUALITY ASSURANCE OBJECTIVES FOR QUALITY OF DATA	8
3.1	Introduction	8
3.2	Precision	8
3.3	Accuracy	9
3.4	Representativeness.....	10
3.5	Completeness	10
3.6	Compatability.....	11
3.7	Sensitivity	11
4.0	SAMPLING PROGRAM.....	13
4.1	Introduction	13
4.2	Field Documentation Procedures	13
4.2.1	Field Data and Notes	13
4.2.2	Sample Labeling	14
4.3	Sample Collection.....	14
4.4	Sample Nomenclature	14
4.5	Sample Container Preparation and Sample Preservation	15
4.6	Sample Holding Times.....	15
4.7	Field QC Samples	15
4.8	Residuals Management.....	15
4.9	Special Considerations For PFAS Sample Collection.....	16
5.0	SAMPLE SHIPMENT, TRACKING AND CUSTODY.....	18
5.1	Introduction	18
5.2	Packaging	18
5.3	Shipping.....	18
5.4	Field Sample Custody.....	19
5.5	Laboratory Sample Custody	22
6.0	CALIBRATION PROCEDURES.....	25
6.1	Field Instruments.....	25
6.2	Laboratory Instruments	25
7.0	ANALYTICAL PROCEDURES	26

7.1	Introduction	26
8.0	DATA REDUCTION, VALIDATION, AND REPORTING	26
8.1	Introduction	26
8.2	Data Reduction	26
8.3	Data Validation	28
9.0	INTERNAL QUALITY CONTROL CHECKS AND FREQUENCY	30
9.1	Quality Assurance Batching	30
9.2	Calibration Standards and Surrogates	30
9.3	Organic Blanks and Matrix Spike	30
10.0	Quality Assurance Performance Audits and System Audits	31
10.1	Introduction	31
10.2	System Audits	31
10.3	Performance Audits	31
10.4	Formal Audits	31
11.0	PREVENTIVE MAINTENANCE PROCEDURES AND SCHEDULES	33
11.1	Preventive Maintenance Procedures	33
11.2	Schedules	33
11.3	Records	33
12.0	CORRECTIVE ACTION	34
12.1	Introduction	34
12.2	Procedure Description	34
13.0	REFERENCES	37

FIGURES

Figure 5.1	Sample Custody	20
Figure 5.2	Sample Chain-of-Custody Form	21
Figure 12.1	Corrective Action Request	36

ATTACHMENTS

Attachment A	Resumes
Attachment B	Laboratory Reporting Limits and Method Detection Limits
Attachment C	Analytical Methods and Quality Assurance Table
Attachment D	Sample Nomenclature
Attachment E	PFAS Sampling Protocol
Attachment F	PFAS Standard Order of Procedure

1.0 PROJECT DESCRIPTION

1.1 INTRODUCTION

This Quality Assurance Project Plan (QAPP) for the proposed interim remedial measures (IRM) Work Plan was completed on behalf of 2409 Jerome, Inc. (the Participant) pursuant to the New York State Department of Environmental Conservation (NYSDEC) Brownfield Cleanup Program (BCP) under site number C203087 for the property at 2409 Jerome Avenue, Bronx, New York (the site). The Participant selected Langan Engineering, Environmental, Surveying, and Landscape Architecture and Geology, DPC (Langan) to complete the IRM Work Plan. Additional site information including site maps and data collected previously by Langan is provided in the IRM Work Plan.

This QAPP specifies analytical methods to be used to ensure that data during the proposed IRM are precise, accurate, representative, comparable, and complete.

1.2 PROJECT OBJECTIVES

The objective of the IRM is to address an out-of-service 550-gallon waste oil underground storage tank (UST) identified as a petroleum source area at the site. The proposed IRM consists of the following tasks:

- Development and implementation of a Community Air Monitoring Plan (CAMP) for the protection of on-site remediation workers and the community during remedial activities.
- Removal of the concrete surface cover above the waste oil UST in the auto repair shop by a licensed tank contractor and management of the waste concrete as construction and demolition (C&D) debris in accordance with Part 360 and 361 regulations.
- Decommissioning and removal and/or abandonment of the 550-gallon waste oil UST by a licensed tank contractor in accordance with DER-10 and 6 NYCRR Parts 612-614;
- Excavation and off-site disposal of any historic fill or soil required to remove or abandon the UST and removal of grossly-impacted soil, if present and as practical;
- Placement of a demarcation barrier at the base of the excavation;
- Screening of excavated historic fill and soil for indication of contamination by visual and olfactory means and with a photoionization detector (PID);
- Collection of documentation endpoint soil samples from the base and sidewalls of the excavation, as practical;

- Waste characterization sampling of the excavated historic fill or soil prior to off-site disposal;
- Backfilling the excavation with crushed aggregate from a virgin source and/or clean fill meeting the lower of the 6 New York Codes, Rules, and Regulations (NYCRR) Part 375-6.8(b) Restricted Use Commercial (CU) and Protection of Groundwater (PGW) Soil Cleanup Objectives (SCO); and
- Restoring the concrete surface cover system inside the auto repair shop.

This QAPP addresses sampling and analytical methods that may be necessary in support of the IRM, which will be performed in accordance with applicable federal, state, and city regulations. These objectives were established in order to meet standards that will protect public health and the environment for the site.

1.3 SCOPE OF WORK

Implementation of the IRM will include management of LNAPL- and petroleum-contaminated historic fill and soil during excavation activities, screening and visual examination of excavated historic fill and soil, collection of post-excavation documentation endpoint samples and waste characterization sampling, and handling of imported fill materials for backfilling purposes. Excavated soil will be sampled for laboratory analysis per disposal facility requirements, and visually examined, screened, and characterized to determine whether it is suitable for potential re-use onsite (pending waste characterization analytical sampling results) or will be transported to an approved off-site disposal facility. Dust, odors, and organic vapors will be managed by following a site-specific HASP and through an established CAMP during ground intrusive activities.

IRM work will be overseen by Langan personnel. The following sampling activities will be performed as part of the interim remedial action:

- Post-Excavation Documentation Endpoint Soil Sampling – If practical, the UST and any petroleum-contaminated soil will be excavated and removed in accordance with NYSDEC Division of Environmental Remediation Technical Guidance for Site Investigation and Remediation (DER-10) guidelines and the IRM Work Plan. Post-excavation documentation endpoint soil samples will be collected after reaching final excavation depths and prior to backfilling to document residual contamination and subsurface conditions. Documentation endpoint samples will be collected in accordance with the IRM Work Plan and analyzed for CP-51 list volatile organic compounds (VOC) and semivolatile organic compounds (SVOC) (Tables 2 and 3).
- Waste Characterization Sampling – Waste characterization samples for excess excavated material requiring off-site disposal will be collected during implementation of the IRM per

disposal facility requirements. Waste characterization samples will be analyzed for parameters typically required by disposal facilities, including VOCs, SVOCs, polychlorinated biphenyls (PCB), pesticides, herbicides, metals (including hexavalent and trivalent chromium), Resource Conservation and Recovery Act (RCRA) hazardous characteristics of ignitability, corrosivity, and reactivity, RCRA toxicity characteristic using the Toxic Characteristics Leaching Procedure (TCLP) for VOCs, SVOCs, metals, pesticides, and herbicides, Diesel Range Organics (DRO); and/or Gasoline Range Organics (GRO).

- Sampling of Imported Fill Materials - The clean soil or aggregate fill materials will be segregated at a source/facility that is free of environmental contamination. Representative samples will be collected in accordance with the IRM Work Plan at a frequency consistent with NYSDEC DER-10 Table 5.4(e)(10). The samples will be analyzed for Target Compound List (TCL)/Target Analyte List (TAL)/Part 375 VOCs, SVOCs, PCBs, pesticides, herbicides, metals (including hexavalent and trivalent chromium), and emerging contaminants including per- and polyfluoroalkyl substances (PFAS) and 1,4-dioxane by a New York State Department of Health (NYSDOH) Environmental Laboratory Accreditation Program (ELAP)-certified laboratory NYSDOH ELAP-certified laboratory.

1.4 DATA QUALITY OBJECTIVES AND PROCESS

The quality assurance and quality control objectives for all measurement data include:

- **Precision** – an expression of the reproducibility of measurements of the same parameter under a given set of conditions. Field sampling precision will be determined by analyzing coded duplicate samples and analytical precision will be determined by analyzing internal Quality Control (QC) duplicates and matrix spike duplicates.
- **Accuracy** – a measure of the degree of agreement of a measured value with the true or expected value of the quantity of concern. Soil sampling accuracy will be determined through the assessment of the analytical results of field blanks and trip blanks for each sample set. Analytical accuracy will be assessed by examining the percent recoveries of surrogate compounds that are added to each sample (organic analyses only), and the percent recoveries of matrix spike compounds added to selected samples and laboratory blanks.
- **Representativeness** – expresses the degree to which sample data accurately and precisely represent a characteristic of a population, parameter variations at a sampling point, or an environmental condition. Representativeness will be satisfied by ensuring that the scope of work is followed and that specified sampling and analysis techniques are used. Representativeness in the laboratory is ensured by compliance to nationally-recognized analytical methods, meeting sample holding times, and maintaining sample integrity while the samples are in the laboratory's possession. This is accomplished by following all applicable methods, laboratory-issued standard operating procedures (SOP), the

laboratory's Quality Assurance Manual, and this QAPP. The laboratory is required to be properly certified and accredited.

- **Completeness** – the percentage of measurements made which are judged to be valid. Completeness will be assessed through data validation. The QC objective for completeness is generation of valid data for at least 90 percent of the analyses requested.
- **Comparability** – expresses the degree of confidence with which one data set can be compared to another. The comparability of all data collected for this project will be ensured using several procedures, including standard methods for sampling and analysis as documented in the QAPP, instrument calibrations, using standard reporting units and reporting formats, and data validation.
- **Sensitivity** - the ability of the instrument or method to detect target analytes at the levels of interest. The project manager will select, with input from the laboratory and Quality Assurance (QA) personnel, sampling and analytical procedures that achieve the required levels of detection.

Each of the above objectives is discussed in detail in Section 3.

2.0 PROJECT ORGANIZATON

Execution of the IRM Work Plan will be overseen by Langan on behalf of 2409 Jerome, Inc. Langan will collect media samples and will subcontract with a qualified driller and an ELAP-certified laboratory. Langan will also perform the data analysis, evaluation, and reporting tasks.

The analytical services will be performed by Alpha Analytical Laboratories, Inc. of Mansfield, MA (NYSDOH ELAP Certification Number 11148). Data validation services will be performed by Joe Conboy; resume attached (Attachment A).

Key contacts for this project are as follows:

2409 Jerome, Inc.:	Mr. David Dimond Telephone: (914)740-6436
Langan Project Manager:	Mr. Gregory C. Wyka, PG Telephone: (212) 479-5476
Qualified Environmental Professional (QEP):	Mr. Michael Burke, PG, CHMM Telephone: (212) 479-5413
Langan Quality Assurance Officer (QAO):	Mr. Woo Kim Telephone: (212) 479-5499x5733
Data Validator:	Mr. Joe Conboy Telephone: (609) 282-8099
Laboratory Representatives:	Alpha Analytical Laboratories, Inc. Mr. Ben Rao Telephone: (201) 812-2633

3.0 QUALITY ASSURANCE OBJECTIVES FOR QUALITY OF DATA

3.1 INTRODUCTION

The quality assurance/quality control (QA/QC) objectives for all data include precision, accuracy, representativeness, completeness, comparability, and sensitivity. These objectives are defined in following subsections. They are formulated to meet the requirements of the USEPA SW-846. The analytical methods and their Contract Required Quantification Limits (CRQL) are provided in Attachment B.

3.2 PRECISION

Precision is an expression of the reproducibility of measurements of the same parameter under a given set of conditions. Specifically, it is a quantitative measurement of the variability of a group of measurements compared to their average value (USEPA, 1987). Precision is usually stated in terms of standard deviation, but other estimates such as the coefficient of variation (relative standard deviation), range (maximum value minus minimum value), relative range, and relative percent difference (RPD) are common.

For this project, field sampling precision will be determined by analyzing coded duplicate samples (labeled so that the laboratory does not recognize them as duplicates) for the same parameters, and then, during data validation (Section 8.3), calculating the RPD for duplicate sample results. For field duplicates, results less than 2x the reporting limit (RL) meet the precision criteria if the absolute difference is less than $\pm 2x$ the RL. For results greater than 2x the RL, the acceptance criteria is a RPD of $\leq 50\%$ (soil), and $< 30\%$ (groundwater). Method Detection Limits (MDL), RLs, and the data quality objectives for analytical precision, calculated as the RPD between duplicate analyses are included as Attachment B.

Analytical precision will be determined by the laboratory by calculating the RPD for the results of the analysis of internal QC duplicates and matrix spike duplicates. The formula for calculating RPD is as follows:

$$RPD = \frac{|V1 - V2|}{(V1 + V2)/2} \times 100$$

where:

- | | | |
|---------|---|--|
| RPD | = | Relative Percent Difference. |
| V1, V2 | = | The two values to be compared. |
| V1 - V2 | = | The absolute value of the difference between the two values. |

$(V1 + V2)/2$ = The average of the two values.

3.3 ACCURACY

Accuracy is a measure of the degree of agreement of a measured value with the true or expected value of the quantity of concern (Taylor, 1987), or the difference between a measured value and the true or accepted reference value. The accuracy of an analytical procedure is best determined by the analysis of a sample containing a known quantity of material, and is expressed as the percent of the known quantity, which is recovered or measured. The recovery of a given analyte is dependent upon the sample matrix, method of analysis, and the specific compound or element being determined. The concentration of the analyte relative to the detection limit of the analytical method is also a major factor in determining the accuracy of the measurement. Concentrations of analytes, which are close to the detection limits are less accurate because they are more affected by such factors as instrument “noise.” Higher concentrations will not be as affected by instrument noise or other variables and thus will be more accurate.

Sampling accuracy may be determined through the assessment of the analytical results of field blanks and trip blanks for each sample set. Analytical accuracy is typically assessed by examining the percent recoveries of surrogate compounds that are added to each sample (organic analyses only), and the percent recoveries of matrix spike compounds added to selected samples and laboratory blanks. Additionally, initial and continuing calibrations must be performed and accomplished within the established method control limits to define the instrument accuracy before analytical accuracy can be determined for any sample set.

Accuracy is normally measured as the percent recovery (%R) of a known amount of analyte, called a spike, added to a sample (matrix spike) or to a blank (blank spike). The %R is calculated as follows:

$$\%R = \frac{SSR - SR}{SA} \times 100$$

where:

- %R = Percent recovery.
- SSR = Spike sample result: concentration of analyte obtained by analyzing the sample with the spike added.
- SR = Sample result: the background value, i.e., the concentration of the analyte obtained by analyzing the sample.
- SA = Spiked analyte: concentration of the analyte spike added to the sample.

The acceptance limits for accuracy for each parameter are presented in Attachment B.

3.4 REPRESENTATIVENESS

Representativeness expresses the degree to which sample data accurately and precisely represent a characteristic of a population, parameter variations at a sampling point, or an environmental condition. Representativeness is a qualitative parameter, which is most concerned with the proper design of the sampling program (USEPA, 1987). Samples must be representative of the environmental media being sampled. Selection of sample locations and sampling procedures will incorporate consideration of obtaining the most representative sample possible.

Field and laboratory procedures will be performed in such a manner as to ensure, to the degree that is technically possible, that the data derived represents the in-place quality of the material sampled. Every effort will be made to ensure chemical compounds will not be introduced into the sample via sample containers, handling, and analysis. Analysis of field blanks, trip blanks, and method blanks will be performed to monitor for potential sample contamination from field and laboratory procedures.

The assessment of representativeness also must consider the degree of heterogeneity in the material from which the samples are collected. Sampling heterogeneity will be evaluated during data validation through the analysis of coded field duplicate samples. The analytical laboratory will also follow acceptable procedures to assure the samples are adequately homogenized prior to taking aliquots for analysis, so the reported results are representative of the sample received.

Chain-of-custody procedures will be followed to document that contamination of samples has not occurred during container preparation, shipment, and sampling. Details of blank, duplicate and chain-of-custody procedures are presented in Sections 4 and 5.

3.5 COMPLETENESS

Completeness is defined as the percentage of measurements made which are judged to be valid (USEPA, 1987). The QC objective for completeness is generation of valid data for at least 90 percent of the analyses requested. Completeness is defined as follows for all sample measurements:

$$\%C = \frac{V}{T} \times 100$$

where:

%C = Percent completeness.

V = Number of measurements judged valid.

T = Total number of measurements.

3.6 COMPATABILITY

Comparability expresses the degree of confidence with which one data set can be compared to another (USEPA, 1987). The comparability of all data collected for this project will be ensured by:

- Using identified standard methods for both sampling and analysis phases of this project;
- Requiring traceability of all analytical standards and/or source materials to the USEPA or National Institute of Standards and Technology (NIST);
- Requiring that all calibrations be verified with an independently prepared standard from a source other than that used for calibration (if applicable);
- Using standard reporting units and reporting formats including the reporting of QC data;
- Performing a complete data validation on a representative fraction of the analytical results, including the use of data qualifiers in all cases where appropriate; and
- Requiring that all validation qualifiers be used any time an analytical result is used for any purpose.

These steps will ensure all users of either the data or the conclusions drawn from them will be able to judge the comparability of the data and conclusions.

3.7 SENSITIVITY

Sensitivity is the ability of the instrument or method to detect target analytes at the levels of interest. The project manager will select, with input from the laboratory and QA personnel, sampling and analytical procedures that achieve the required levels of detection and QC acceptance limits that meet established performance criteria. Concurrently, the project manager will select the level of data assessment to ensure that only data meeting the project data quality objectives are used in decision-making.

Field equipment will be used that can achieve the required levels of detection for analytical measurements in the field. In addition, the field sampling staff will collect and submit full volumes of samples as required by the laboratory for analysis, whenever possible. Full volume aliquots will help ensure achievement of the required limits of detection and allow for reanalysis, if necessary. The concentration of the lowest level check standard in a multi-point calibration curve will represent the reporting limit.

Analytical methods and quality assurance parameters associated with the sampling program are presented in Attachment C. The frequency of associated equipment blanks and duplicate samples will be based on the recommendations listed in the NYSDEC DER-10, and as described in Section 4.7.

Site-specific matrix spike and matrix spike duplicate (MSD) samples will be prepared and analyzed by the analytical laboratory by spiking an aliquot of submitted sample volume with analytes of interest. Additional sample volume is not required by the laboratory for this purpose. A matrix spike/matrix spike duplicate (MS/MSD) analysis will be analyzed at a rate of 1 out of every 20 samples, or one per analytical batch. MS/MSD samples are only required for soil and groundwater samples.

4.0 SAMPLING PROGRAM

4.1 INTRODUCTION

Soil sampling will be conducted in accordance with the established NYSDEC protocols contained in DER-10. The following sections describe procedures to be followed for specific tasks.

4.2 FIELD DOCUMENTATION PROCEDURES

Field documentation procedures will include summarizing field data in field books and notes and proper sample labeling. These procedures are described in the following sections.

4.2.1 Field Data and Notes

Field notebooks contain the documentary evidence regarding procedures conducted by field personnel. Hard cover, bound field notebooks will be used because of their compact size, durability, and secure page binding. The pages of the notebook will not be removed.

Entries will be made in waterproof, permanent blue or black ink. No erasures will be allowed. If an incorrect entry is made, the information will be crossed out with a single strike mark and the change initialed and dated by the team member making the change. Each entry will be dated. Entries will be legible and contain accurate and complete documentation of the individual or sampling team's activities or observations made. The level of detail will be sufficient to explain and reconstruct the activity conducted. Each entry will be signed by the person(s) making the entry.

The following types of information will be provided for each sampling task, as appropriate:

- Project name and number
- Reasons for being on-site or taking the sample
- Date and time of activity
- Sample identification numbers
- Geographical location of sampling points with references to the site, other facilities or a map coordinate system. Sketches will be made in the field logbook when appropriate.
- Physical location of sampling locations such as depth below grade surface
- Description of the method of sampling including procedures followed, equipment used and any departure from the specified procedures
- Description of the sample including physical characteristics, odor, etc.
- Readings obtained from health and safety equipment
- Weather conditions at the time of sampling and previous meteorological events that may affect the representative nature of a sample

- Photographic information including a brief description of what was photographed, the date and time, the compass direction of the picture and the number of the picture on the camera
- Other pertinent observations such as the presence of other persons on the site, actions by others that may affect performance of site tasks, etc.
- Names of sampling personnel and signature of persons making entries

4.2.2 Sample Labeling

Each sample collected will be assigned a unique identification number in accordance with the sample nomenclature guidance included in Attachment D, and placed in an appropriate sample container. Each sample container will have a sample label affixed to the outside with the date and time of sample collection and project name. In addition, the label will contain the sample identification number, analysis required and chemical preservatives added, if any. All documentation will be completed in waterproof ink.

4.3 SAMPLE COLLECTION

Samples will be visually classified and field screened using a photoionization detector (PID) to assess potential impacts from volatile VOCs and for health and safety monitoring. Soil samples collected for analysis of VOCs will be collected using either EnCore® or Terra Core® sampling equipment. For analysis of non-volatile parameters, samples will be homogenized and placed into glass jars. After collection, all sample jars will be capped and securely tightened, and placed in iced coolers and maintained at 4°C ±2°C until they are transferred to the laboratory for analysis, in accordance with the procedures outlined in Section 4.2. Analysis and/or extraction and digestion of collected soil samples will meet the holding times required for each analyte as specified in Attachment C. In addition, analysis of collected soil sample will meet all quality assurance criteria set forth by this QAPP and DER-10.

Samples collected for analysis of PFAS will be collected in accordance with the specialized protocol outlined in Attachment E.

4.4 SAMPLE NOMENCLATURE

The sample nomenclature system was devised such that the following objectives can be attained (see Attachment D):

- Sorting of data by matrix;
- Sorting of data by depth;
- Maintenance of consistency (filed, laboratory, and database sample numbers);
- Accommodation of all project-specific requirements; and
- Accommodation of laboratory sample number length constraints (maximum 20 characters).

4.5 SAMPLE CONTAINER PREPARATION AND SAMPLE PRESERVATION

Sample containers will be properly washed and decontaminated prior to their use by either the analytical laboratory or the container vendor to the specifications required by the USEPA. Copies of the sample container QC analyses will be provided by the laboratory for each container lot used to obtain samples. The containers will be labeled and the appropriate preservatives will be added. The types of containers are shown in Attachment C.

Samples shall be preserved according to the preservation techniques given in Attachment C. Preservatives will be added to the sample bottles by the laboratory prior to their shipment in sufficient quantities to ensure that proper sample pH is met. Following sample collection, the sample bottles should be placed on ice in the shipping cooler, cooled to 4°C with ice in Ziploc® bags (or equivalent), and delivered to the laboratory within 48 hours of collection. Chain-of-custody procedures are described in Section 5.

4.6 SAMPLE HOLDING TIMES

The sample holding times for organic and inorganic parameters are provided in Attachment C and must be in accordance with the USEPA requirements for each method. The USEPA technical holding times must be strictly adhered to by the laboratory. Any holding time exceedances must be reported to Langan.

4.7 FIELD QC SAMPLES

The precision of field sampling procedures will be assessed by collecting and submitting coded field duplicates and MS/MSDs for laboratory analyses. The duplicates will include:

- a. **Coded Field Duplicate** - To determine the representativeness of the sampling methods, coded field duplicates will be collected at a minimum frequency of one per 20 field samples. The samples are termed “coded” because they will be labeled in such a manner that the laboratory will not be able to determine that they are a duplicate sample. This will eliminate any possible bias that could arise.
- b. **Matrix Spike/Matrix Spike Duplicate (MS/MSD)** - MS/MSD samples (MS/MSD for organics; MS and laboratory duplicate for inorganics) will be taken at a frequency of one pair per 20 field samples. These samples are used to assess the effect of the sample matrix on the recovery of target compounds or target analytes. The percent recoveries and RPDs are provided in Attachment B.

4.8 RESIDUALS MANAGEMENT

Debris (e.g., paper, plastic and disposable personal protective equipment [PPE]) will be collected in plastic garbage bags and disposed of as non-hazardous industrial waste. Debris is expected to

be transported to a local municipal landfill for disposal. Grossly-contaminated soil from excavations will be stockpiled at the site and will be analyzed and characterized prior to off-site disposal in accordance with applicable federal and state regulations as discussed in the IRM Work Plan.

4.9 SPECIAL CONSIDERATIONS FOR PFAS SAMPLE COLLECTION

Sample collection for PFAS analysis will be conducted in accordance with the January 2021 NYSDEC Sampling, Analysis, and Assessment of Per- and Polyfluoroalkyl Substances under Part 375 Remedial Programs Guidelines. The following special considerations apply to the collection of soil samples for PFAS analysis to prevent cross-contamination:

- Field equipment will not contain Teflon®
- Sampling material will be made from stainless steel, high-density polyethylene (HDPE), acetate, or silicon, as appropriate
- No waterproof field books will be used
- No plastic clipboards, binders, or spiral hard cover notebooks will be used
- No adhesives will be used
- No sharpies or permanent markers will be used; ball point pens are acceptable
- Aluminum foil will not be used
- PFAS samples will be kept in a separate cooler from other sampling containers
- Coolers will be filled only with regular ice

PFAS compound sampling protocol is described above and provided in Attachment E.

4.10 PFAS TARGET ANALYTE LIST

The NYSDEC has developed a PFAS target analyte list. The laboratory SOP for determination of PFAS in soil is included as Attachment F. At minimum, the laboratory will report the following twenty-one target PFAS compounds:

Group	Analyte Name	Abbreviation	CAS #
Perfluoroalkyl carboxylates	Perfluorobutanoic acid	PFBA	375-22-4
	Perfluoropentanoic acid	PFPeA	2706-90-3
	Perfluorohexanoic acid	PFHxA	307-24-4
	Perfluoroheptanoic acid	PFHpA	375-85-9
	Perfluorooctanoic acid	PFOA	335-67-1
	Perfluorononanoic acid	PFNA	375-95-1
	Perfluorodecanoic acid	PFDA	335-76-2
	Perfluoroundecanoic acid	PFUA/PFUdA	2058-94-8
	Perfluorododecanoic acid	PFDaA	307-55-1
	Perfluorotridecanoic acid	PFTriA/PFTTrDA	72629-94-8
	Perfluorotetradecanoic acid	PFTA/PFTTeDA	376-06-7
Perfluoroalkyl sulfonates	Perfluorobutanesulfonic acid	PFBS	375-73-5
	Perfluorohexanesulfonic acid	PFHxS	355-46-4
	Perfluoroheptanesulfonic acid	PFHpS	375-92-8
	Perfluorooctanesulfonic acid	PFOS	1763-23-1
	Perfluorodecanesulfonic acid	PFDS	335-77-3
Fluorinated Telomer Sulfonates	6:2 Fluorotelomer sulfonate	6:2 FTS	27619-97-2
	8:2 Fluorotelomer sulfonate	8:2 FTS	39108-34-4
Perfluorooctane-sulfonamides	Perfluorooctanesulfonamide	FOSA	754-91-6
Perfluorooctane-sulfonamidoacetic acids	N-methyl perfluorooctanesulfonamidoacetic acid	N-MeFOSAA	2355-31-9
	N-ethyl perfluorooctanesulfonamidoacetic acid	N-EtFOSAA	2991-50-6

5.0 SAMPLE SHIPMENT, TRACKING AND CUSTODY

5.1 INTRODUCTION

This section presents sample custody procedures for both the field and laboratory. Implementation of proper custody procedures for samples generated in the field is the responsibility of field personnel. Both laboratory and field personnel involved in the Chain-of-custody (COC) and transfer of samples will be trained as to the purpose and procedures prior to implementation.

Evidence of sample traceability and integrity is provided by COC procedures. These procedures document the sample traceability from the selection and preparation of the sample containers by the laboratory, to sample collection, to sample shipment, to laboratory receipt and analysis. The sample custody flowchart is shown in Figure 5.1. A sample is considered to be in a person's custody if the sample is:

- In his/her possession;
- Maintained in view after possession is accepted and documented;
- Locked and tagged with custody seals so that no one can tamper with it after having been in physical custody; or
- In a secured area, restricted to authorized personnel.

5.2 PACKAGING

As discussed in Section 4.5, soil sample containers will be placed in plastic coolers. Ice in Ziploc® bags (or equivalent) will be placed around sample containers. Cushioning material will be added around the sample containers if necessary. COCs and other paperwork will be placed in a Ziploc® bag (or equivalent) and placed inside the cooler. The cooler will be taped closed and custody seals will be affixed to one side of the cooler at a minimum. If the samples are being shipped by an express delivery company (e.g. FedEx) then laboratory address labels will be placed on top of the cooler.

5.3 SHIPPING

Standard procedures to be followed for shipping environmental samples to the analytical laboratory are outlined below.

- All environmental samples will be transported to the laboratory by a laboratory-provided courier under the chain-of-custody protocols.

Prior notice will be provided to the laboratory regarding when to expect shipped samples. If the number, type or date of shipment changes due to site constraints or program changes, the laboratory will be informed.


5.4 FIELD SAMPLE CUSTODY

A COC record (Figure 5.2 or similar) accompanies the sample containers from selection and preparation at the laboratory, during shipment to the field for sample containment and preservation, and during return to the laboratory. Triplicate copies of the COC must be completed for each sample set collected.

The COC lists the field personnel responsible for taking samples, the project name and number, the name of the analytical laboratory to which the samples are sent, and the method of sample shipment. The COC also lists a unique description of every sample bottle in the set. If samples are split and sent to different laboratories, a copy of the COC record will be sent with each sample.

The *REMARKS* space on the COC is used to indicate if the sample is a matrix spike, matrix spike duplicate, or any other sample information for the laboratory. Once all bottles are properly accounted for on the form, a sampler will write his or her signature and the date and time on the first *RELINQUISHED BY* space. The sampler will also write the method of shipment, the shipping cooler identification number, and the shipper airbill number on the top of the COC.

Figure 5.1 Sample Custody

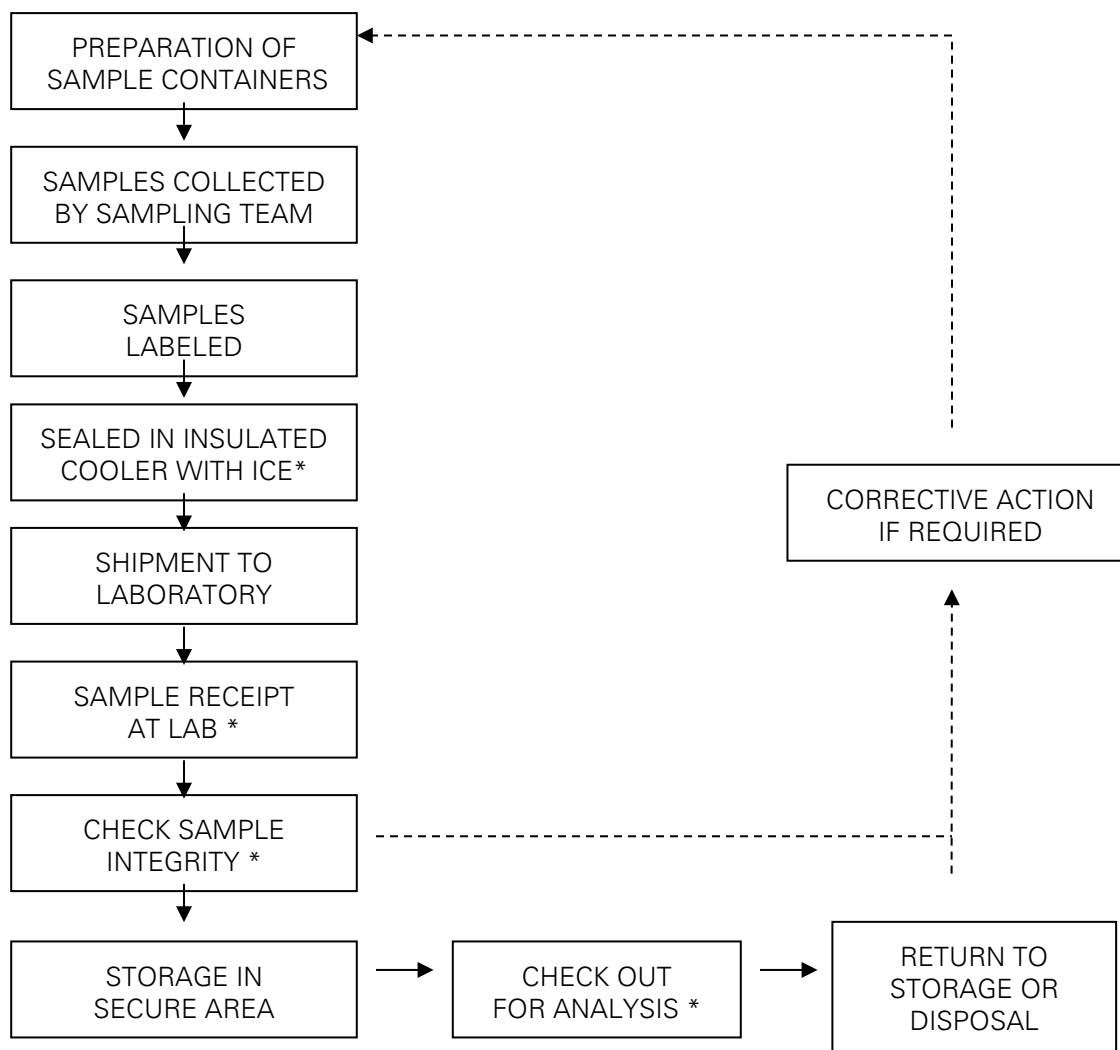

* REQUIRES SIGN-OFF ON CHAIN-OF-CUSTODY FORM

[illegible]

Mistakes will be crossed out with a single line in ink and initialed by the author.

One copy of the COC is retained by sampling personnel (notations identifying blind duplicate samples will be added to this copy of the COC, but not the others that will go to the laboratory) and the other two copies are put into a sealable plastic bag and taped inside the lid of the shipping cooler. The cooler lid is closed, custody seals provided by the laboratory are affixed to the latch and across the back and front lids of the cooler, and the person relinquishing the samples signs their name across the seal. The seal is taped, and the cooler is wrapped tightly with clear packing tape. It is then relinquished by field personnel to personnel responsible for shipment, typically an overnight carrier. The COC seal must be broken to open the container. Breakage of the seals before receipt at the laboratory may indicate tampering. If tampering is apparent, the laboratory will contact the Project Manager, and the sample will not be analyzed.

5.5 LABORATORY SAMPLE CUSTODY

The Project Manager or Field Team Leader will notify the laboratory of upcoming field sampling activities, and the subsequent shipment of samples to the laboratory. This notification will include information concerning the number and type of samples to be shipped as well as the anticipated date of arrival.

The following laboratory sample custody procedures will be used:

- The laboratory will designate a sample custodian who will be responsible for maintaining custody of the samples, and for maintaining all associated records documenting that custody.
- Upon receipt of the samples, the custodian will check cooler temperature, and check the original COC documents and compare them with the labeled contents of each sample container for correctness and traceability. The sample custodian will sign the COC record and record the date and time received.
- Care will be exercised to annotate any labeling or descriptive errors. In the event of discrepant documentation, the laboratory will immediately contact the Project Manager or Field Team Leader as part of the corrective action process. A qualitative assessment of each sample container will be performed to note any anomalies, such as broken or leaking bottles. This assessment will be recorded as part of the incoming chain-of-custody procedure.
- The samples will be stored in a secured area at a temperature of approximately 4°C until analyses commence.
- A laboratory tracking record will accompany the sample or sample fraction through final analysis for control.

- A copy of the tracking record will accompany the laboratory report and will become a permanent part of the project records.

6.0 CALIBRATION PROCEDURES

6.1 FIELD INSTRUMENTS

A PID will be used during the sampling activities to evaluate work zone action levels, collect pre- and post-sample readings for air samples, screen soil samples, and collect monitoring well headspace readings. Field calibration and/or field checking of the PID will be the responsibility of the field team leader and will be accomplished by following the procedures outlined in the operating manual for the instrument. At a minimum, field calibration and/or field equipment checking will be performed once daily, prior to use. Field calibration will be documented in the field notebook. Entries made into the logbook regarding the status of field equipment will include the following information:

- Date and time of calibration
- Type of equipment serviced and identification number (such as serial number)
- Reference standard used for calibration
- Calibration and/or maintenance procedure used
- Other pertinent information

Equipment that fails calibration or becomes inoperable during use will be removed from service and segregated to prevent inadvertent utilization. The equipment will be properly tagged to indicate that it is out of calibration. Such equipment will be repaired and recalibrated to the manufacturer's specifications by qualified personnel. Equipment that cannot be repaired will be replaced.

Off-site calibration and maintenance of field instruments will be conducted as appropriate throughout the duration of project activities. All field instrumentation, sampling equipment and accessories will be maintained in accordance with the manufacturer's recommendations and specifications and established field equipment practice. Off-site calibration and maintenance will be performed by qualified personnel. A logbook will be kept to document that established calibration and maintenance procedures were followed. Documentation will include both scheduled and unscheduled maintenance.

6.2 LABORATORY INSTRUMENTS

The laboratory will follow all calibration procedures and schedules as specified in the sections of the USEPA SW-846 and subsequent updates that apply to the instruments used for the analytical methods given in Section 7.

7.0 ANALYTICAL PROCEDURES

7.1 INTRODUCTION

Samples will be analyzed according to the USEPA SW-846 “Test Methods for Evaluating Solid Waste,” November 1986, 3rd edition and subsequent updates. The methods for the laboratory analysis of soil samples and the quantitation limits presented in Attachment B.

8.0 DATA REDUCTION, VALIDATION, AND REPORTING

8.1 INTRODUCTION

Data collected during the IRM will be reduced and reviewed by the laboratory QA personnel, and a report on the findings will be tabulated in a standard format. The criteria used to identify and quantify the analytes will be those specified for the applicable methods in the USEPA SW-846 and subsequent updates. The data package provided by the laboratory will contain all items specified in the USEPA SW-846 appropriate for the analyses to be performed, and be reported in standard format.

The completed copies of the chain-of-custody records (both external and internal) accompanying each sample from time of initial bottle preparation to completion of analysis shall be attached to the analytical reports.

8.2 DATA REDUCTION

The Analytical Services Protocol (ASP) Category B data packages and an electronic data deliverable (EDD) will be provided by the laboratory after receipt of a complete sample delivery group. ASP Category B data packages will be requested for post-excavation documentation endpoint samples and samples of imported clean soil and fill materials only. ASP Category B data packages will not be requested for waste characterization samples. The Project Manager will immediately arrange for archiving the results and preparation of result tables. These tables will form the database for assessment of the site contamination condition.

Each EDD deliverable must be formatted using a Microsoft Windows operating system and the NYSDEC data deliverable format for EQulS. To avoid transcription errors, data will be loaded directly into the ASCII format from the laboratory information management system (LIMS). If this cannot be accomplished, the consultant should be notified via letter of transmittal indicating that manual entry of data is required for a particular method of analysis. All EDDs must also undergo a QC check by the laboratory before delivery. The original data, tabulations, and electronic media are stored in a secure and retrievable fashion.

The Project Manager will maintain close contact with the QA reviewer to ensure all non-conformance issues are acted upon prior to data manipulation and assessment routines. Once the QA review is completed, the Project Manager may direct others to initiate and finalize the analytical data assessment.

8.3 DATA VALIDATION

Data validation will be performed in accordance with the USEPA validation guidelines for organic and inorganic data review. Waste characterization analytical data will not be validated. Validation will include the following:

- Verification of the QC sample results,
- Verification of the identification of sample results (both positive hits and non-detects),
- Recalculation of 10% of all investigative sample results, and
- Preparation of Data Usability Summary Reports (DUSR).

A DUSR will be prepared and reviewed by the QAO. The DUSR will present the results of data validation, including a summary assessment of laboratory data packages, sample preservation and COC procedures, and a summary assessment of precision, accuracy, representativeness, comparability, completeness, and sensitivity for each analytical method. A detailed assessment of each sample delivery group (SDG) will follow. For each of the organic analytical methods, the following will be assessed:

- Holding times;
- Instrument tuning;
- Instrument calibrations;
- Blank results;
- System monitoring compounds or surrogate recovery compounds (as applicable);
- Internal standard recovery results;
- MS and MSD results;
- Target compound identification;
- Chromatogram quality;
- Pesticide cleanup (if applicable);
- Compound quantitation and reported detection limits;
- System performance; and
- Results verification.

For each of the inorganic compounds, the following will be assessed:

- Holding times;

- Calibrations;
- Blank results;
- Interference check sample;
- Laboratory check samples;
- Duplicates;
- Matrix Spike;
- Furnace atomic absorption analysis QC;
- ICP serial dilutions; and
- Results verification and reported detection limits.

Based on the results of data validation, the validated analytical results reported by the laboratory will be assigned one of the following usability flags:

- “U” – Not detected. The associated number indicates the approximate sample concentration necessary to be detected significantly greater than the level of the highest associated blank;
- “UJ” – Not detected. Quantitation limit may be inaccurate or imprecise;
- “J” – The analyte is present. Reported value may be associated with a higher level of uncertainty than is normally expected with the analytical method;
- “N” – Tentative identification. The analyte is considered present in the sample;
- “R” – Unreliable result; data is rejected or unusable. The analyte may or may not be present in the sample; and
- No Flag - Result accepted without qualification

9.0 INTERNAL QUALITY CONTROL CHECKS AND FREQUENCY

9.1 QUALITY ASSURANCE BATCHING

Each set of samples will be analyzed concurrently with calibration standards, method blanks, MS/MSD samples or laboratory duplicates, and QC check samples (if required by the protocol). The MS/MSD samples will be designated by the field personnel. If no MS/MSD samples were designated, the laboratory will contact the Langan Project Manager for corrective action.

9.2 CALIBRATION STANDARDS AND SURROGATES

All organic standard and surrogate compounds are checked by the method of mass spectrometry for correct identification and gas chromatography for degree of purity and concentration. All standards are traceable to a source of known quality certified by the USEPA or NIST, or other similar program. When the compounds pass the identity and purity tests, they are certified for use in standard and surrogate solutions. Concentrations of the solutions are checked for accuracy before release for laboratory use. Standard solutions are replaced monthly or more frequently, based upon data indicating deterioration.

9.3 ORGANIC BLANKS AND MATRIX SPIKE

Analysis of blank samples verifies that the analytical method does not introduce contaminants or detect “false positives.” The blank water can be generated by reverse osmosis and Super-Q filtration systems, or distillation of water containing KMnO_4 . The matrix spike is generated by addition of surrogate standard to each sample.

10.0 Quality Assurance Performance Audits and System Audits

10. INTRODUCTION

Quality assurance audits may be performed by the project quality assurance group under the direction and approval of the QAO. These audits will be implemented to evaluate the capability and performance of project and subcontractor personnel, items, activities, and documentation of the measurement system(s). Functioning as an independent body and reporting directly to corporate quality assurance management, the QAO may plan, schedule, and approve system and performance audits based upon procedures customized to the project requirements. At times, the QAO may request additional personnel with specific expertise from company and/or project groups to assist in conducting performance audits. However, these personnel will not have responsibility for the project work associated with the performance audit.

10.2 SYSTEM AUDITS

System audits may be performed by the QAO or designated auditors, and encompass a qualitative evaluation of measurement system components to ascertain their appropriate selection and application. In addition, field and laboratory quality control procedures and associated documentation may be system audited. These audits may be performed once during the performance of the project. However, if conditions adverse to quality are detected or at the request of the Project Manager, additional audits may occur.

10.3 PERFORMANCE AUDITS

The laboratory may be required to conduct an analysis of Performance Evaluation samples or provide proof that Performance Evaluation samples submitted by the USEPA or a state agency were analyzed within the past twelve months.

10.4 FORMAL AUDITS

Formal audits refer to any system or performance audit that is documented and implemented by the QA group. These audits encompass documented activities performed by qualified lead auditors to a written procedure or checklists to objectively verify that quality assurance requirements were developed, documented, and instituted in accordance with contractual and project criteria. Formal audits may be performed on project and subcontractor work at various locations.

Audit reports will be written by auditors who have performed the site audit after gathering and evaluating all data. Items, activities, and documents determined by lead auditors to be in noncompliance shall be identified at exit interviews conducted with the involved management. Non-compliances will be logged, and documented through audit findings, which are attached to

and are a part of the integral audit report. These audit-finding forms are directed to management to satisfactorily resolve the noncompliance in a specified and timely manner.

The Project Manager has overall responsibility to ensure that all corrective actions necessary to resolve audit findings are acted upon promptly and satisfactorily. Audit reports must be submitted to the Project Manager within fifteen days of completion of the audit. Serious deficiencies will be reported to the Project Manager within 24 hours. All audit checklists, audit reports, audit findings, and acceptable resolutions will be reviewed and approved by the QAO. Verification of acceptable resolutions may be determined by re-audit or documented surveillance of the item or activity. Upon verification acceptance, the QAO will close out the audit report and findings.

11.0 PREVENTIVE MAINTENANCE PROCEDURES AND SCHEDULES

11.1 PREVENTIVE MAINTENANCE PROCEDURES

Equipment, instruments, tools, gauges, and other items requiring preventive maintenance will be serviced in accordance with the manufacturer's specified recommendations and written procedure developed by the operators.

A list of critical spare parts will be established by the operator. These spare parts will be available for use in order to reduce the downtime. A service contract for rapid instrument repair or backup instruments may be substituted for the spare part inventory.

11.2 SCHEDULES

Written procedures will establish the schedule for servicing critical items to minimize the downtime of the measurement system. Rental equipment subcontractors and the laboratory will adhere to the maintenance schedule, and arrange any necessary and prompt service. Required service will be performed by qualified personnel.

11.3 RECORDS

Logs shall be established to record and control maintenance and service procedures and schedules. All maintenance records will be documented and traceable to the specific equipment, instruments, tools, and gauges. Records produced shall be reviewed, maintained, and filed by the operators at the laboratories. The QAO may audit these records to verify complete adherence to these procedures.

12.0 CORRECTIVE ACTION

12.1 INTRODUCTION

The following procedures were established to ensure that conditions adverse to quality, such as malfunctions, deficiencies, deviations, and errors, are promptly investigated, documented, evaluated, and corrected.

12.2 PROCEDURE DESCRIPTION

When a significant condition adverse to quality is noted at the site or laboratory, the cause of the condition will be determined and corrective action will be taken to preclude repetition. Condition identification, cause, reference documents, and corrective action planned to be taken will be documented and reported to the QAO, Project Manager, Field Team Leader and laboratory management, at a minimum. Implementation of corrective action is verified by documented follow-up action.

All project personnel have the responsibility, as part of the normal work duties, to promptly identify, solicit approved correction, and report conditions adverse to quality. Corrective actions will be initiated as follows:

- When predetermined acceptance standards are not attained;
- When procedure or data compiled are determined to be deficient;
- When equipment or instrumentation is found to be faulty;
- When samples and analytical test results are not clearly traceable;
- When quality assurance requirements have been violated;
- When designated approvals have been circumvented;
- As a result of system and performance audits;
- As a result of a management assessment;
- As a result of laboratory/field comparison studies; and
- As required by USEPA SW-846, and subsequent updates, or by the NYSDEC ASP.

Project management and staff, such as remedial action teams and laboratory groups, will monitor on-going work performance in the normal course of daily responsibilities. Work may be audited at the sites or laboratory. Activities ascertained to be noncompliant with quality assurance requirements will be documented. Corrective actions will be mandated through audit finding sheets

attached to the audit report. Audit findings are logged, maintained, and controlled by the Project Manager.

Personnel assigned to quality assurance functions will have the responsibility to issue and control Corrective Action Request (CAR) Forms (Figure 12.1 or similar). The CAR identifies the out-of-compliance condition, reference document(s), and recommended corrective action(s) to be administered. The CAR is issued to the personnel responsible for the affected item or activity. A copy is also submitted to the Project Manager. The individual to whom the CAR is addressed returns the requested response promptly to the QA personnel, affixing his/her signature and date to the corrective action block, after stating the cause of the conditions and corrective action to be taken. The QA personnel maintain the log for status of CARs, confirms the adequacy of the intended corrective action, and verifies its implementation. CARs will be retained in the project file for the records.

Any project personnel may identify noncompliance issues; however, the designated QA personnel are responsible for documenting, numbering, logging, and verifying the close out action. The Project Manager will be responsible for ensuring that all recommended corrective actions are implemented, documented, and approved.

FIGURE 12.1

CORRECTIVE ACTION REQUEST					
Number: _____			Date: _____		
TO: _____ You are hereby requested to take corrective actions indicated below and as otherwise determined by you to (a) resolve the noted condition and (b) to prevent it from recurring. Your written response is to be returned to the project quality assurance manager by _____					
CONDITION:					
REFERENCE DOCUMENTS:					
RECOMMENDED CORRECTIVE ACTIONS:					
_____ Originator	_____ Date	_____ Approval	_____ Date	_____ Approval	_____ Date
RESPONSE					
CAUSE OF CONDITION					
<div style="text-align: center; margin-bottom: 10px;">CORRECTIVE ACTION</div> (A) RESOLUTION (B) PREVENTION (C) AFFECTED DOCUMENTS					
C.A. FOLLOWUP: CORRECTIVE ACTION VERIFIED BY: _____ DATE: _____					

13.0 REFERENCES

- NYSDEC. Division of Environmental Remediation. DER-10/Technical Guidance for Site Investigation and Remediation, dated May 3, 2010.
- NYSDEC. Sampling, Analysis, and Assessment of Per- and Polyfluoroalkyl Substances (PFAS) under NYSDEC's Part 375 Remedial Programs, dated January 2021.
- Taylor, J. K., 1987. Quality Assurance of Chemical Measurements. Lewis Publishers, Inc., Chelsea, Michigan
- USEPA. Validating Volatile Organic Compounds By Gas Chromatography/Mass Spectrometry. SOP No. HW-24, Revision 4, dated October 2014. USEPA Region II.
- USEPA. Polychlorinated Biphenyl (PCB) Aroclor Data Validation. SOP No. HW-37, Revision 3, dated May 2013. USEPA Region II.
- USEPA. Pesticide Data Validation. SOP No. HW-36, Revision 4, dated May 2013. USEPA Region II.
- USEPA. Semivolatile Data Validation. SOP No. HW-35, Revision 2, dated March 2013. USEPA Region II.
- USEPA. Tetra-through Octa-chlorinated Dioxins and Furans by Isotope Dilution (HRGC/HRMS). SOP For EPA Method 1613, Revision B, dated December 2010. USEPA Region II.
- USEPA. PCDDs/PCDFs using HRGC/HRMS. SOP for SW-846 Method 8290 HW-19, Revision 1.1, dated December 2010. USEPA Region II.
- USEPA, Polychlorinated Dibenzodioxins/Polychlorinated Dibenzofurans. SW-846 Method 8280 HW-11, Revision 3, dated December 2010. USEPA Region II.
- USEPA. Low/Medium Volatile Data Validation. SOP No. HW-33, Revision 3, dated March 2013. USEPA Region II.
- USEPA. ICP-AES Data Validation. SOP No. HW-2a, Revision 15, dated December 2012. USEPA Region II.
- USEPA. ICP-MS Data Validation. SOP No. HW-2b, Revision 15, dated December 2012. USEPA Region II.
- USEPA. Mercury and Cyanide Data Validation. SOP No. HW-2c, Revision 15, dated December 2012, USEPA Region II.
- USEPA. Trace Volatile Data Validation. SOP No. HW-34, Revision 3, dated February 2013, USEPA Region II.

ATTACHMENT A

RESUMES

JOSEPH CONBOY

STAFF CHEMIST
ENVIRONMENTAL

Mr. Conboy has seven years of environmental chemistry, quality assurance, and environmental database management experience, with a current emphasis on validation of laboratory data for submittal to NJDEP via the New Jersey Data of Known Quality Protocols and to NYSDEC. Previous work experience includes performing validation of data for projects in USEPA Regions 2 and 3 while employing appropriate validation guidelines for each region, managing large data sets, updating appropriate regulatory limits, performing statistical evaluations, and preparing electronic data deliverables and report deliverables using the Earthsoft EQulS database program, and acted as an intermediary between project managers, field staff, and laboratories. Mr. Conboy also has experience in field sampling techniques and maintains current OSHA HAZWOPER certification.



SELECTED PROJECTS

- 1400 Ferris, Bronx, NY – Completed validation of soil and groundwater data and prepared the Data Usability Summary Report for submittal to NYSDEC. USEPA Region II guidelines, with aide from National Functional Guidelines, were employed to perform validation of VOCs and SVOCs including 1,4-dioxane, and tangentially used based on professional judgment to perform validation of PFAS data.
- Broome Street Parking Lot, NY - Completed validation of waste characterization data and prepared the Data Usability Summary Report for submittal to NYSDEC. USEPA Region II guidelines, with aide from National Functional Guidelines, were employed to perform validation of VOCs, SVOCs, herbicides, PCBs, pesticides, metals including mercury, ignitability temperature, pH, reactive cyanide, reactive sulfide, cyanide, and hexavalent chromium. Toxicity characteristic leachate procedure extraction data for VOCs, SVOCs, herbicides, pesticides, metals, and mercury were also validated.
- 215 North 10th Street, Brooklyn, NY - Completed validation of soil and groundwater data and prepared the Data Usability Summary Report for submittal to NYSDEC. USEPA Region II guidelines, with aide from National Functional Guidelines, were employed to perform validation of VOC, SVOC, SVOC SIM, herbicide, PCB, pesticide, metals, mercury, cyanide, hexavalent chromium, trivalent chromium data.
- 35 Commercial Street, Brooklyn, NY - Completed validation of soil data and prepared the Data Usability Summary Report for submittal to NYSDEC. USEPA Region II guidelines, with aide from National Functional Guidelines, were employed to perform validation of VOC, SVOC, SVOC SIM, herbicide, PCB, pesticide, metals, mercury, cyanide, hexavalent chromium, trivalent chromium data, and tangentially used based on professional judgment to perform validation of PFAS data.
- Suffolk Street, Lower East Side, NY- Completed validation of soil, groundwater, and soil vapor data and prepared the Data Usability Summary Report for submittal to NYSDEC. USEPA Region II

EDUCATION

B.Sc., Chemistry with a
minor in Mathematics
Rowan University

CERTIFICATIONS & TRAINING

OSHA 40-Hour
HAZWOPER 29 CFR
1910.120(e)(4)
Certification

NJ Analytical Guidance
and Data Usability
Training

USEPA Data Validation
Training

Earthsoft EQulS
Environmental Database
Training

JOSEPH CONBOY

guidelines, with aide from National Functional Guidelines, were employed to perform validation of VOC, VOCs by USEPA TO-15, SVOC, SVOC SIM, herbicide, PCB, pesticide, metals, mercury, cyanide, hexavalent chromium, trivalent chromium data, and tangentially used based on professional judgment to perform validation of PFAS data.

- Managed a database for a confidential client containing 10+ years of environmental chemical data from multiple laboratories, requiring select data validation in accordance with New Jersey Data of Known Quality Protocols and identifying areas of delineation from historic field information. Once identified, NJDEP designated groundwater, surface water, soil, sediment, soil vapor, and custom screening criteria were researched and applied to each area, requiring individualized flagging for reporting.*
- Prepared the New Jersey Data of Known Quality Protocol Data Usability Evaluation and managed the database for a confidential client for a data set greater than 20 years old. A DUE or any validation effort was not prepared in the 20 years prior to current. This included data from variations of methods for volatile organic compounds, semivolatile organic compounds, total and dissolved metals, pesticides, herbicides, natural attenuation parameters, and per- and polyfluoroalkyl substances in multiple media.*
- Performed 200+ Stage 2a validations for a combined 87-acre USEPA designated Corrective Action site under the Resource Conservation and Recovery Act, including a quick-turn USEPA required PCB by soxhlet extraction investigation across multiple plants. Once a former train car painting facility, USEPA required a quick-turn PCB by soxhlet extraction soil investigation.
- Preparation of a quality assurance program for a confidential client in West Virginia. A quick turn QAPP was prepared in a service location new to the consultant, resulting in research into state requirements for data usability and auditing newly employed laboratories. The QAPP was understood to be prepared for groundwater only, but the client did not reveal the need for sediment and soil. Two QAPPs were submitted for review to governing agencies.*
- Used statistical software to determine a localized background upper confidence limit of chromium for a confidential client's sand and gravel site. Validation was used to confirm laboratory procedures, and data was used in ProUCL calculations to compare to researched background chromium levels for Pennsylvania soils. *
- Prepared daily perimeter dust and air monitoring summaries and validation of low level mirex data for a confidential client's superfund site. Low level mirex data was generated by university laboratories and subject to validation following national functional guidelines to aide in river clean-up, including sediment, surface water, and treatment system water matrices.*

**Project completed prior to employment at LANGAN.*

ATTACHMENT B

LABORATORY REPORTING LIMITS AND METHOD DETECTION LIMITS



Date Created: 07/27/18
Created By: Ben Rao
File: PM5251-1
Page: 1

Langan Engineering & Environmental

TCL Volatiles - EPA 8260C/5035 High&Low (SOIL)

Holding Time: 14 days
Container/Sample Preservation: 1 - 1 Vial MeOH/2 Vial Water

Analyte	CAS #	RL	MDL	Units	LCS Criteria	LCS RPD	MS Criteria	MS RPD	Duplicate RPD	Surrogate Criteria		
Methylene chloride	75-09-2	5	2.29	ug/kg	70-130	30	70-130	30	30			
1,1-Dichloroethane	75-34-3	1	0.145	ug/kg	70-130	30	70-130	30	30			
Chloroform	67-66-3	1.5	0.14	ug/kg	70-130	30	70-130	30	30			
Carbon tetrachloride	56-23-5	1	0.23	ug/kg	70-130	30	70-130	30	30			
1,2-Dichloropropane	78-87-5	1	0.125	ug/kg	70-130	30	70-130	30	30			
Dibromochloromethane	124-48-1	1	0.14	ug/kg	70-130	30	70-130	30	30			
1,1,2-Trichloroethane	79-00-5	1	0.267	ug/kg	70-130	30	70-130	30	30			
Tetrachloroethene	127-18-4	0.5	0.196	ug/kg	70-130	30	70-130	30	30			
Chlorobenzene	108-90-7	0.5	0.127	ug/kg	70-130	30	70-130	30	30			
Trichlorofluoromethane	75-69-4	4	0.695	ug/kg	70-139	30	70-139	30	30			
1,2-Dichloroethane	107-06-2	1	0.257	ug/kg	70-130	30	70-130	30	30			
1,1,1-Trichloroethane	71-55-6	0.5	0.167	ug/kg	70-130	30	70-130	30	30			
Bromodichloromethane	75-27-4	0.5	0.109	ug/kg	70-130	30	70-130	30	30			
trans-1,3-Dichloropropene	10061-02-6	1	0.273	ug/kg	70-130	30	70-130	30	30			
cis-1,3-Dichloropropene	10061-01-5	0.5	0.158	ug/kg	70-130	30	70-130	30	30			
1,3-Dichloropropene, Total	542-75-6	0.5	0.158	ug/kg				30	30			
1,3-Dichloropropene, Total	542-75-6	0.5	0.158	ug/kg				30	30			
1,1-Dichloropropene	563-58-6	0.5	0.159	ug/kg	70-130	30	70-130	30	30			
Bromoform	75-25-2	4	0.246	ug/kg	70-130	30	70-130	30	30			
1,1,2,2-Tetrachloroethane	79-34-5	0.5	0.166	ug/kg	70-130	30	70-130	30	30			
Benzene	71-43-2	0.5	0.166	ug/kg	70-130	30	70-130	30	30			
Toluene	108-88-3	1	0.543	ug/kg	70-130	30	70-130	30	30			
Ethylbenzene	100-41-4	1	0.141	ug/kg	70-130	30	70-130	30	30			
Chloromethane	74-87-3	4	0.932	ug/kg	52-130	30	52-130	30	30			
Bromomethane	74-83-9	2	0.581	ug/kg	57-147	30	57-147	30	30			
Vinyl chloride	75-01-4	1	0.335	ug/kg	67-130	30	67-130	30	30			
Chloroethane	75-00-3	2	0.452	ug/kg	50-151	30	50-151	30	30			
1,1-Dichloroethene	75-35-4	1	0.238	ug/kg	65-135	30	65-135	30	30			
trans-1,2-Dichloroethene	156-60-5	1.5	0.137	ug/kg	70-130	30	70-130	30	30			
Trichloroethene	79-01-6	0.5	0.137	ug/kg	70-130	30	70-130	30	30			
1,2-Dichlorobenzene	95-50-1	2	0.144	ug/kg	70-130	30	70-130	30	30			
1,3-Dichlorobenzene	541-73-1	2	0.148	ug/kg	70-130	30	70-130	30	30			
1,4-Dichlorobenzene	106-46-7	2	0.171	ug/kg	70-130	30	70-130	30	30			
Methyl tert butyl ether	1634-04-4	2	0.201	ug/kg	66-130	30	66-130	30	30			
p/m-Xylene	179601-23-1	2	0.56	ug/kg	70-130	30	70-130	30	30			
o-Xylene	95-47-6	1	0.291	ug/kg	70-130	30	70-130	30	30			
Xylene (Total)	1330-20-7	1	0.291	ug/kg				30	30			
Xylene (Total)	1330-20-7	1	0.291	ug/kg				30	30			
cis-1,2-Dichloroethene	156-59-2	1	0.175	ug/kg	70-130	30	70-130	30	30			
1,2-Dichloroethene (total)	540-59-0	1	0.137	ug/kg				30	30			
1,2-Dichloroethene (total)	540-59-0	1	0.137	ug/kg				30	30			
Dibromomethane	74-95-3	2	0.238	ug/kg	70-130	30	70-130	30	30			

Please Note that the RL information provided in this table is calculated using a 100% Solids factor (Soil/Solids only)
Please Note that the information provided in this table is subject to change at anytime at the discretion of Alpha Analytical, Inc.



8 Walkup Drive, Westborough, Massachusetts 01581 • 508-898-9220 • www.alphalab.com

Westborough, MA • Mansfield, MA • Bangor, ME • Portsmouth, NH • Mahwah, NJ • Albany, NY • Buffalo, NY • Holmes, PA





Date Created: 07/27/18
Created By: Ben Rao
File: PM5251-1
Page: 2

Langan Engineering & Environmental

TCL Volatiles - EPA 8260C/5035 High&Low (SOIL)

Holding Time: 14 days
Container/Sample Preservation: 1 - 1 Vial MeOH/2 Vial Water

Analyte	CAS #	RL	MDL	Units	LCS Criteria	LCS RPD	MS Criteria	MS RPD	Duplicate RPD	Surrogate Criteria		
Styrene	100-42-5	1	0.196	ug/kg	70-130	30	70-130	30	30			
Dichlorodifluoromethane	75-71-8	10	0.915	ug/kg	30-146	30	30-146	30	30			
Acetone	67-64-1	10	4.811	ug/kg	54-140	30	54-140	30	30			
Carbon disulfide	75-15-0	10	4.55	ug/kg	59-130	30	59-130	30	30			
2-Butanone	78-93-3	10	2.22	ug/kg	70-130	30	70-130	30	30			
Vinyl acetate	108-05-4	10	2.15	ug/kg	70-130	30	70-130	30	30			
4-Methyl-2-pentanone	108-10-1	10	1.28	ug/kg	70-130	30	70-130	30	30			
1,2,3-Trichloropropane	96-18-4	2	0.127	ug/kg	68-130	30	68-130	30	30			
2-Hexanone	591-78-6	10	1.18	ug/kg	70-130	30	70-130	30	30			
Bromochloromethane	74-97-5	2	0.205	ug/kg	70-130	30	70-130	30	30			
2,2-Dichloropropane	594-20-7	2	0.202	ug/kg	70-130	30	70-130	30	30			
1,2-Dibromoethane	106-93-4	1	0.279	ug/kg	70-130	30	70-130	30	30			
1,3-Dichloropropane	142-28-9	2	0.167	ug/kg	69-130	30	69-130	30	30			
1,1,1,2-Tetrachloroethane	630-20-6	0.5	0.132	ug/kg	70-130	30	70-130	30	30			
Bromobenzene	108-86-1	2	0.145	ug/kg	70-130	30	70-130	30	30			
n-Butylbenzene	104-51-8	1	0.167	ug/kg	70-130	30	70-130	30	30			
sec-Butylbenzene	135-98-8	1	0.146	ug/kg	70-130	30	70-130	30	30			
tert-Butylbenzene	98-06-6	2	0.118	ug/kg	70-130	30	70-130	30	30			
o-Chlorotoluene	95-49-8	2	0.191	ug/kg	70-130	30	70-130	30	30			
p-Chlorotoluene	106-43-4	2	0.108	ug/kg	70-130	30	70-130	30	30			
1,2-Dibromo-3-chloropropane	96-12-8	3	0.998	ug/kg	68-130	30	68-130	30	30			
Hexachlorobutadiene	87-68-3	4	0.169	ug/kg	67-130	30	67-130	30	30			
Isopropylbenzene	98-82-8	1	0.109	ug/kg	70-130	30	70-130	30	30			
p-Isopropyltoluene	99-87-6	1	0.109	ug/kg	70-130	30	70-130	30	30			
Naphthalene	91-20-3	4	0.65	ug/kg	70-130	30	70-130	30	30			
Acrylonitrile	107-13-1	4	1.15	ug/kg	70-130	30	70-130	30	30			
n-Propylbenzene	103-65-1	1	0.171	ug/kg	70-130	30	70-130	30	30			
1,2,3-Trichlorobenzene	87-61-6	2	0.322	ug/kg	70-130	30	70-130	30	30			
1,2,4-Trichlorobenzene	120-82-1	2	0.272	ug/kg	70-130	30	70-130	30	30			
1,3,5-Trimethylbenzene	108-67-8	2	0.193	ug/kg	70-130	30	70-130	30	30			
1,2,4-Trimethylbenzene	95-63-6	2	0.334	ug/kg	70-130	30	70-130	30	30			
1,4-Dioxane	123-91-1	100	35.1	ug/kg	65-136	30	65-136	30	30			
1,4-Diethylbenzene	105-05-5	2	0.177	ug/kg	70-130	30	70-130	30	30			
4-Ethyltoluene	622-96-8	2	0.384	ug/kg	70-130	30	70-130	30	30			
1,2,4,5-Tetramethylbenzene	95-93-2	2	0.191	ug/kg	70-130	30	70-130	30	30			
Ethyl ether	60-29-7	2	0.341	ug/kg	67-130	30	67-130	30	30			
trans-1,4-Dichloro-2-butene	110-57-6	5	1.42	ug/kg	70-130	30	70-130	30	30			
1,2-Dichloroethane-d4	17060-07-0									70-130		
2-Chloroethoxyethane												
Toluene-d8	2037-26-5									70-130		
4-Bromofluorobenzene	460-00-4									70-130		
Dibromofluoromethane	1868-53-7									70-130		

Please Note that the RL information provided in this table is calculated using a 100% Solids factor. (Soil/Solids only)
Please Note that the information provided in this table is subject to change at anytime at the discretion of Alpha Analytical, Inc.



8 Walkup Drive, Westborough, Massachusetts 01581 • 508-898-9220 • www.alphalab.com

Westborough, MA • Mansfield, MA • Bangor, ME • Portsmouth, NH • Mahwah, NJ • Albany, NY • Buffalo, NY • Holmes, PA





Date Created: 07/27/18
Created By: Ben Rao
File: PM5251-1
Page: 1

Langan Engineering & Environmental

NYTCL Semivolatiles - EPA 8270D (SOIL)

Holding Time: 14 days
Container/Sample Preservation: 1 - Glass 250ml/8oz unpreserved

Analyte	CAS #	RL	MDL	Units	LCS Criteria	LCS RPD	MS Criteria	MS RPD	Duplicate RPD	Surrogate Criteria		
Acenaphthene	83-32-9	133.6	17.3012	ug/kg	31-137	50	31-137	50	50			
1,2,4-Trichlorobenzene	120-82-1	167	19.1048	ug/kg	38-107	50	38-107	50	50			
Hexachlorobenzene	118-74-1	100.2	18.704	ug/kg	40-140	50	40-140	50	50			
Bis(2-chloroethyl)ether	111-44-4	150.3	22.6452	ug/kg	40-140	50	40-140	50	50			
2-Chloronaphthalene	91-58-7	167	16.5664	ug/kg	40-140	50	40-140	50	50			
1,2-Dichlorobenzene	95-50-1	167	29.9932	ug/kg	40-140	50	40-140	50	50			
1,3-Dichlorobenzene	541-73-1	167	28.724	ug/kg	40-140	50	40-140	50	50			
1,4-Dichlorobenzene	106-46-7	167	29.1582	ug/kg	28-104	50	28-104	50	50			
3,3'-Dichlorobenzidine	91-94-1	167	44.422	ug/kg	40-140	50	40-140	50	50			
2,4-Dinitrotoluene	121-14-2	167	33.4	ug/kg	40-132	50	40-132	50	50			
2,6-Dinitrotoluene	606-20-2	167	28.6572	ug/kg	40-140	50	40-140	50	50			
Fluoranthene	206-44-0	100.2	19.1716	ug/kg	40-140	50	40-140	50	50			
4-Chlorophenyl phenyl ether	7005-72-3	167	17.869	ug/kg	40-140	50	40-140	50	50			
4-Bromophenyl phenyl ether	101-55-3	167	25.4842	ug/kg	40-140	50	40-140	50	50			
Bis(2-chloroisopropyl)ether	108-60-1	200.4	28.5236	ug/kg	40-140	50	40-140	50	50			
Bis(2-chloroethoxy)methane	111-91-1	180.36	16.7334	ug/kg	40-117	50	40-117	50	50			
Hexachlorobutadiene	87-68-3	167	24.4488	ug/kg	40-140	50	40-140	50	50			
Hexachlorocyclopentadiene	77-47-4	477.62	151.302	ug/kg	40-140	50	40-140	50	50			
Hexachloroethane	67-72-1	133.6	27.0206	ug/kg	40-140	50	40-140	50	50			
Isophorone	78-59-1	150.3	21.6766	ug/kg	40-140	50	40-140	50	50			
Naphthalene	91-20-3	167	20.3406	ug/kg	40-140	50	40-140	50	50			
Nitrobenzene	98-95-3	150.3	24.716	ug/kg	40-140	50	40-140	50	50			
NitrosoDiPhenylAmine(NDPA)/DPA	86-30-6	133.6	19.0046	ug/kg	36-157	50	36-157	50	50			
n-Nitrosodi-n-propylamine	621-64-7	167	25.7848	ug/kg	32-121	50	32-121	50	50			
Bis(2-Ethylhexyl)phthalate	117-81-7	167	57.782	ug/kg	40-140	50	40-140	50	50			
Butyl benzyl phthalate	85-68-7	167	42.084	ug/kg	40-140	50	40-140	50	50			
Di-n-butylphthalate	84-74-2	167	31.6632	ug/kg	40-140	50	40-140	50	50			
Di-n-octylphthalate	117-84-0	167	56.78	ug/kg	40-140	50	40-140	50	50			
Diethyl phthalate	84-66-2	167	15.4642	ug/kg	40-140	50	40-140	50	50			
Dimethyl phthalate	131-11-3	167	35.07	ug/kg	40-140	50	40-140	50	50			
Benzo(a)anthracene	56-55-3	100.2	18.8042	ug/kg	40-140	50	40-140	50	50			
Benzo(a)pyrene	50-32-8	133.6	40.748	ug/kg	40-140	50	40-140	50	50			
Benzo(b)fluoranthene	205-99-2	100.2	28.1228	ug/kg	40-140	50	40-140	50	50			
Benzo(k)fluoranthene	207-08-9	100.2	26.72	ug/kg	40-140	50	40-140	50	50			
Chrysene	218-01-9	100.2	17.368	ug/kg	40-140	50	40-140	50	50			
Acenaphthylene	208-96-8	133.6	25.7848	ug/kg	40-140	50	40-140	50	50			
Anthracene	120-12-7	100.2	32.565	ug/kg	40-140	50	40-140	50	50			
Benzo(ghi)perylene	191-24-2	133.6	19.6392	ug/kg	40-140	50	40-140	50	50			
Fluorene	86-73-7	167	16.2324	ug/kg	40-140	50	40-140	50	50			
Phenanthrene	85-01-8	100.2	20.3072	ug/kg	40-140	50	40-140	50	50			
Dibenzo(a,h)anthracene	53-70-3	100.2	19.3052	ug/kg	40-140	50	40-140	50	50			
Indeno(1,2,3-cd)Pyrene	193-39-5	133.6	23.2798	ug/kg	40-140	50	40-140	50	50			


Please Note that the RL information provided in this table is calculated using a 100% Solids factor (Soil/Solids only)
Please Note that the information provided in this table is subject to change at anytime at the discretion of Alpha Analytical, Inc.



8 Walkup Drive, Westborough, Massachusetts 01581 • 508-898-9220 • www.alphalab.com

Westborough, MA • Mansfield, MA • Bangor, ME • Portsmouth, NH • Mahwah, NJ • Albany, NY • Buffalo, NY • Holmes, PA





NYTCL Semivolatiles - EPA 8270D (SOIL)

Holding Time: 14 days

Please Note that the information provided in this table is subject to change at anytime at the discretion of Alpha Analytical, Inc.



Westborough, MA • Mansfield, MA • Bangor, ME • Portsmouth, NH • Mahwah, NJ • Albany, NY • Buffalo, NY • Holmes, PA





Date Created: 05/14/20
Created By: Cynthia Romero
File: PM8518-1
Page: 1

Langan Engineering & Environmental

NY PFAAs via LCMSMS-Isotope Dilution (SOIL)

Holding Time: 28 days
Container/Sample Preservation: 1 - Plastic 8oz unpreserved

Analyte	CAS #	RL	MDL	Units	LCS Criteria	LCS RPD	MS Criteria	MS RPD	Duplicate RPD	Surrogate Criteria		
Perfluorobutanoic Acid (PFBA)	375-22-4	1	0.0227	ug/kg	71-135	30	71-135	30	30			
Perfluoropentanoic Acid (PFPeA)	2706-90-3	1	0.046	ug/kg	69-132	30	69-132	30	30			
Perfluorobutanesulfonic Acid (PFBS)	375-73-5	1	0.039	ug/kg	72-128	30	72-128	30	30			
Perfluorohexanoic Acid (PFHxA)	307-24-4	1	0.0525	ug/kg	70-132	30	70-132	30	30			
Perfluoroheptanoic Acid (PFHpA)	375-85-9	1	0.0451	ug/kg	71-131	30	71-131	30	30			
Perfluorohexanesulfonic Acid (PFHxS)	355-46-4	1	0.0605	ug/kg	67-130	30	67-130	30	30			
Perfluorooctanoic Acid (PFOA)	335-67-1	1	0.0419	ug/kg	69-133	30	69-133	30	30			
1H,1H,2H,2H-Perfluorooctanesulfonic Acid (6:2FTS)	27619-97-2	1	0.1795	ug/kg	64-140	30	64-140	30	30			
Perfluoroheptanesulfonic Acid (PFHpS)	375-92-8	1	0.1365	ug/kg	70-132	30	70-132	30	30			
Perfluorononanoic Acid (PFNA)	375-95-1	1	0.075	ug/kg	72-129	30	72-129	30	30			
Perfluorooctanesulfonic Acid (PFOS)	1763-23-1	1	0.13	ug/kg	68-136	30	68-136	30	30			
Perfluorodecanoic Acid (PFDA)	335-76-2	1	0.067	ug/kg	69-133	30	69-133	30	30			
1H,1H,2H,2H-Perfluorodecanesulfonic Acid (8:2FTS)	39108-34-4	1	0.287	ug/kg	65-137	30	65-137	30	30			
N-Methyl Perfluorooctanesulfonamidoacetic Acid (NMeFOSA)	2355-31-9	1	0.2015	ug/kg	63-144	30	63-144	30	30			
Perfluoroundecanoic Acid (PFUnA)	2058-94-8	1	0.0468	ug/kg	64-136	30	64-136	30	30			
Perfluorodecanesulfonic Acid (PFDS)	335-77-3	1	0.153	ug/kg	59-134	30	59-134	30	30			
Perfluorooctanesulfonamide (FOSA)	754-91-6	1	0.098	ug/kg	67-137	30	67-137	30	30			
N-Ethyl Perfluorooctanesulfonamidoacetic Acid (NEtFOSAA)	2991-50-6	1	0.0845	ug/kg	61-139	30	61-139	30	30			
Perfluorododecanoic Acid (PFDoA)	307-55-1	1	0.07	ug/kg	69-135	30	69-135	30	30			
Perfluorotridecanoic Acid (PFTrDA)	72629-94-8	1	0.2045	ug/kg	66-139	30	66-139	30	30			
Perfluorotetradecanoic Acid (PFTA)	376-06-7	1	0.054	ug/kg	69-133	30	69-133	30	30			
PFOA/PFOS, Total		1	0.0419	ug/kg				30	30			
Perfluoro[13C4]Butanoic Acid (MPFBA)	NONE										60-153	
Perfluoro[13C5]Pentanoic Acid (M5PFPEA)	NONE										65-182	
Perfluoro[2,3,4-13C3]Butanesulfonic Acid (M3PFBS)	NONE										70-151	
Perfluoro[1,2,3,4,6-13C5]Hexanoic Acid (M5PFHxA)	NONE										61-147	
Perfluoro[1,2,3,4-13C4]Heptanoic Acid (M4PFHpA)	NONE										62-149	
Perfluoro[1,2,3-13C3]Hexanesulfonic Acid (M3PFHxS)	NONE										63-166	
Perfluoro[13C8]Octanoic Acid (M8PFOA)	NONE										62-152	
1H,1H,2H,2H-Perfluoro[1,2-13C2]Octanesulfonic Acid (M2-)	NONE										32-182	
Perfluoro[13C9]Nonanoic Acid (M9PFNA)	NONE										61-154	
Perfluoro[13C8]Octanesulfonic Acid (M8PFOS)	NONE										65-151	
Perfluoro[1,2,3,4,5,6-13C6]Decanoic Acid (M6PFDA)	NONE										65-150	
1H,1H,2H,2H-Perfluoro[1,2-13C2]Decanesulfonic Acid (M2-)	NONE										25-186	
N-Deuteriomethylperfluoro-1-octanesulfonamidoacetic Acid	NONE										45-137	
Perfluoro[1,2,3,4,5,6,7-13C7]Undecanoic Acid (M7-PFUDA)	NONE										64-158	
Perfluoro[13C8]Octanesulfonamide (M8FOSA)	NONE										1-125	
N-Deuterioethylperfluoro-1-octanesulfonamidoacetic Acid (NONE										42-136	
Perfluoro[1,2-13C2]Dodecanoic Acid (MPFD OA)	NONE										56-148	
Perfluoro[1,2-13C2]Tetradecanoic Acid (M2PFTEDA)	NONE										26-160	

Please Note that the RL information provided in this table is calculated using a 100% Solids factor (Soil/Solids only)
Please Note that the information provided in this table is subject to change at anytime at the discretion of Alpha Analytical, Inc.



8 Walkup Drive, Westborough, Massachusetts 01581 • 508-898-9220 • www.alphalab.com

Westborough, MA • Mansfield, MA • Bangor, ME • Portsmouth, NH • Mahwah, NJ • Albany, NY • Buffalo, NY • Holmes, PA



ATTACHMENT C

ANALYTICAL METHODS AND QUALITY ASSURANCE TABLES

ATTACHMENT C

ANALYTICAL METHODS/QUALITY ASSURANCE SUMMARY TABLE

Matrix Type	Field Parameters	Laboratory Parameters	Analytical Methods	Sample Preservation	Sample Container Volume and Type	Sample Hold Time	Field Duplicate Samples	Equipment Blank Samples	Trip Blank Samples	MS/MSD Samples
Soil	Total VOCs via PID	Part 375 + TCL VOCs	EPA 8260C	Cool to 4°C	Two 40-ml VOC vials with 5ml H ₂ O, one with MeOH or 3 Encore Samplers (separate container for % solids)	14 days	1 per 20 samples (minimum 1)	1 per 20 samples (minimum 1)	1 per shipment of VOC samples	1 per 20 samples
		Part 375 + TCL SVOCs	EPA 8270D	Cool to 4°C	4 oz. amber glass jar	14 days extract, 40 days after extraction to analysis				
		PFAS	LCM/MS - Isotope Dilution	Cool to 4°C	8 oz. plastic jar	28 days		1 per day, 1 per 20 samples (minimum 1)	N/A	

Notes:
 1. PID - Photoionization Detector
 2. VOC - Volatile organic compound
 3. EPA - Environmental Protection Agency
 4. TCL - Target compound list
 5. SVOC = Semivolatile organic compound
 6. PFAS = Per- and Polyfluoroalkyl Substances
 7. LCM/MS = Liquid Chromatography/Tandem Mass Spectrometry Isotope Dilution

ATTACHMENT D

SAMPLE NOMENCLATURE

SAMPLE NOMENCLATURE

The sample nomenclature outlined below provides consistency between sample events and projects but, most importantly, establish unique sample IDs that will avoid confusion months or years after the sample has been collected. Furthermore, unique sample IDs are required for any data submitted to the NYSDEC in EDD format or being uploaded to an EQulS database.


1.0 INVESTIGATION LOCATION CODES

SB	Soil Boring	SV	Soil Vapor Point
WC	Waste Characterization Boring	IA	Indoor Air
TP	Test Pit	AA	Ambient Air
EPSW	Endpoint Location (Sidewall)	SVE	Vapor Extraction Well
EPB	Endpoint Location (Bottom)	DS	Drum
MW	Monitoring Well	IDW	Investigation Derived Waste
TMW	Temporary Monitoring Well	SL	Sludge
SW	Surface Water	FP	Free Product

2.0 SAMPLE NOMENCLATURE

Each sample at a site must have a unique value.

- Soil/Sediment Samples:

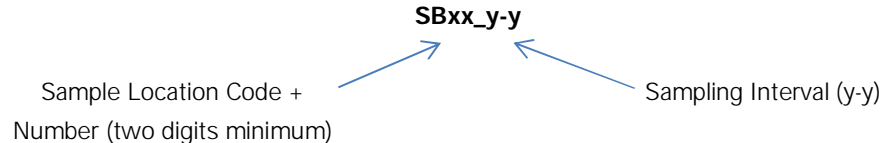


Sample Type	Sample Location Code	Sampling Depth or Interval (feet bgs or approx. elevation)	Sample Name
Phase II/Remedial Investigation			
Grab Soil Sample	SB01	2 to 4	SB01_2-4
	SB02	4	SB02_4
Waste Characterization			
Grab Soil Sample	WC01	2 to 4	WC01_2-4
	WC02	4	WC02_4
Composite Soil Sample from one or more locations	COMP01 or COMP02 + COMP03	0 to 10 (Fill)	COMP01_0-10

LANGAN


Sample Type	Sample Location Code	Sampling Depth or Interval (feet bgs or approx. elevation)	Sample Name
Endpoint Sampling			
Grab Soil Sample	EPSW01_N	5	EPSW01_N_5
	EPSW01_S	5	EPSW01_S_5
	EPSW01_E	5	EPSW01_E_5
	EPSW01_W	5	EPSW01_W_5
	EPB01	6	EPB01_6

- Groundwater/Surface Water Samples:**

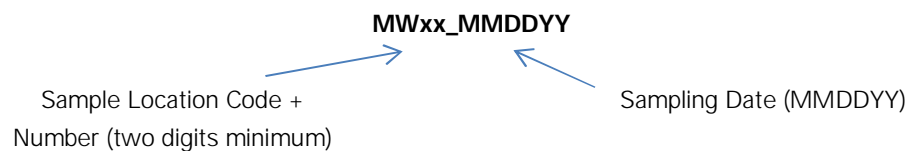

Sample Type	Sample Location Code	Sampling Date	Sample Name
Groundwater Sample	MW01	02/21/2013	MW01_022113

- Air/Soil Vapor Samples:**

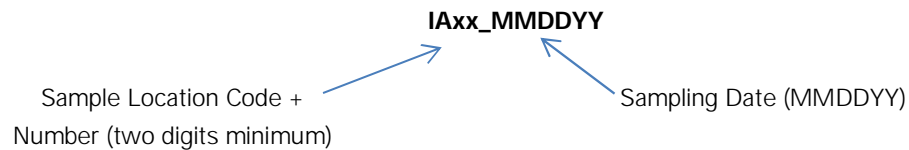


Sample Type	Sample Location Code	Date	Sample Name
Air Sample	IA01	02/21/2013	IA01_022113
Soil Vapor Sample	SV01	02/21/2013	SV01_022113
Vapor Extraction Well Sample	SVE01 (INLET/MIDPOINT/OUTLET)	02/21/2013	SVE01_IN_022113 SVE01_MID_022113 SVE01_OUT_022113

- QA/QC Samples:**

Sample Matrix Codes


SO	Soil	AS	Air
SE	Sediment	SV	Soil Vapor
GW	Groundwater	SL	Sludge
SW	Surface Water	FP	Free Product

○ Duplicates Samples

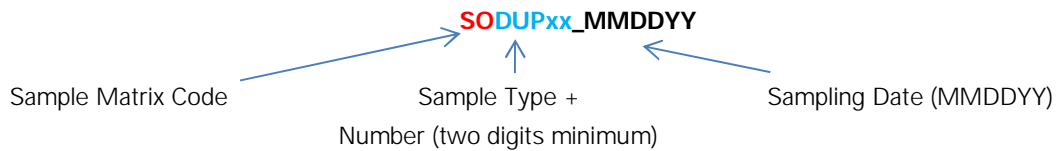

Sample Type	Parent Sample Code	Date	Sample Name
Groundwater Duplicate Sample (DUP)	MW01_022113	02/21/2013	GWDUP01_022113
Soil boring Duplicate Sample (DUP)	SBP01_022113	02/21/2013	SODUP01_022113
Grab Waste Characterization	WC01	02/21/2013	WCDUP01_022113
Composite Waste Characterization	COMP01	02/21/2013	COMPDUP01_022113

○ Field Blanks and Trip Blanks

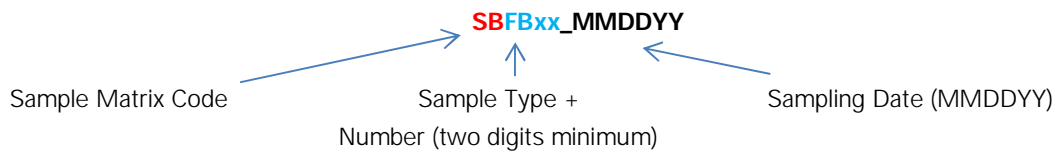

Sample Type	Date	Sample Name
Groundwater Field Blank (FB)	02/21/2013	GWFB01_022113
Groundwater Trip Blank (TB)	02/21/2013	GWTB01_022113
Soil Field Blank	02/21/2013	SOFB01_022113
Soil Trip Blank	02/21/2013	SOTB01_022113

○ Matrix Spike/Matrix Spike Duplicate (MS/MSD)

Parent Sample Name_MS or MSD

Sample Type	Sample Location	Parent Sample Name	Sample Name
Matrix Spike Soil (MS)	SB01	SB01_2-4	SB01_2-4_MS
Matrix Spike Soil Duplicate (MSD)	SB01	SB01_2-4	SB01_2-4_MSD
Matrix Spike GW (MS)	MW01	MW01	MW01_MS
Matrix Spike GW Duplicate (MSD)	MW01	MW01	MW01_MSD

3.0 NOTES

1. The sample location code should not exceed 20 characters and the sample name should not exceed 40 characters.
2. Sample location code (**SB01, MW01, etc.**) is a sequential number (starting with 01) and should be a minimum of two digits.
3. Sample Interval (SB01_0-5) is separated from the sample location code with an underscore, and the top and bottom interval with a dash. Soil and sediment sample intervals should always be in

- feet. Soil and sediment sample intervals should contain no "/" or "()" or unit.
4. Sample date (MW01_022113) is separated from the sample location code with an underscore and should be provided in MMDDYY format [the date should contain no "/" or "-"].
 5. If groundwater samples are collected from multiple intervals within one well, you may assign a letter designation (in lower case) to the well ID to differentiate between intervals (i.e., MW01a_022113, MW01b_022113, and MW01c_022113). The letter "a" would indicate the shallowest interval and "c" the deepest. The actual depth intervals should be documented in the project field book or field sheets and the letter designations should be used consistently between sampling events.
 6. According to USEPA's Contract Laboratory Program (CLP) Guidance for Field Samplers (January 2011), field duplicate samples should remain "blind" to the laboratory (i.e., they should have separate CLP Sample numbers). Assign two separate (unique) CLP sample numbers (i.e., one number to the field sample and one to the duplicate). Submit blind to the laboratory. (<http://www.epa.gov/superfund/programs/clp/download/sampler/CLPSamp-01-2011.pdf>)

ATTACHMENT E

PFAS SAMPLING PROTOCOL

SOP 18 – BEST PRACTICES FOR PFAS SAMPLING IN SOIL – APRIL 2019

This discussion is about best practices to assist you in soil sampling for Per- and Poly-Fluoro Alkyl Substances (PFAS). Similar to groundwater sampling for PFAS, the current discussion surrounding PFAS sampling is long on assumption and short on research. As such, the best guidance is a discussion of best practices. Please review PFAS Sampling Best Practices (PFAS-SBP) in planning and implementing PFAS sampling activities. As more information becomes available, this best practices document will be updated. Be sure you are reviewing the most recent version when planning PFAS sampling activities. Copies of best practices will be stored on the server at <\\Wangan.com\data\NYC\other\environmental group\SOPs\19 Best Practices for PFAS Sampling Soil>.

This version of PFAS-SBP will briefly discuss field safety and personal protection equipment (PPE), clothing and personal hygiene, sampling equipment, sampling documentation and labeling, and sampling procedure:

Safety:

Staff safety is still paramount. The following equipment must be donned at PFAS sampling events – no exceptions.

- All sites
 - Safety Glasses
 - Powderless Nitrile (no latex)
 - Safety Shoes – Note that safety shoes are commonly treated to be water-resistant or water proof with a PFAS type material, therefore, staff must don natural rubber overboots.



Figure 1 ONGUARD Disposable Natural Rubber Overshoe (Part No. 97591LG00 [large])

- Construction Sites

¹ Available in the environmental closet

- Langan Hardhat
- Langan reflective vest, avoid yellow reflective jacket)
- Hearing protection as required.

Daily field notes should list the PPE donned when soil sampling.

Clothing and Personal Hygiene

As a first approximation, any clothing advertised as waterproof, water-repellant, or dirt and/or stain resistant should not be donned for PFAS sampling activities. In addition, clothing designed to block ultraviolet protection should also be avoided. Fabric Softeners and ant-static ingredients in clothing detergents should also be avoided.

Clothing from synthetic and natural fibers (cotton) are acceptable, as a precaution, do not wear new clothing into the field. Plain uncoated Tyvek™ is acceptable for use when sampling as it does not contain PFAS. Coated Tyvek™ is not acceptable as the suits are usually treated with PFAS type material unless deemed necessary with no alternative PPE from a health and safety perspective.

When sampling in cold weather, consider layers for warmth since most jackets are treated with waterproofing material. However, in the event of wet weather, please use the PVC rain gear (e.g. River City Garment 3-piece Rain Gear 35mm PVC/polyester suits [Part no. 5500009600 {large}]).²

The literature abounds with differing recommendations regarding personal hygiene products. In general, avoid hair and body wash products that include conditioning agents. Most important, if you have long hair, pin it back to avoid having to touch your hair with your hands during sampling activities.

There is a limited number of insect repellent and sunscreen products available in the marketplace that are suitable to don when sampling for PFAS. As of now, insect repellent with Deet or derived from 100% organic ingredients material and water repellent sunscreen (as opposed to those advertised as withstanding a dip in a pool or will not succumb to sweat) are suitable for field work. A list of suitable products will be provided as they become available. When using approved insect repellent and sunscreen products, be sure to apply away from the sampling area and to wash your hands after applying.

As a side note, do not eat or consume beverages during sampling activities. When drinking

² Available in the environmental closet

beverages to avoid dehydration, do so away from the sampling area and remove your nitrile gloves. Don a new set of gloves after consuming the beverage. Consume all meals away from the sampling area, use wax paper where possible to wrap your meal. If purchasing your meal, consume off-site and wash your hand thoroughly after your meal to prevent transference of potential PFAS compounds from food packaging.

Drilling/Excavation Equipment

The principal of preventing cross contamination and the greatest challenge to sampling soil for PFAS compounds is the field practices of the drilling or excavation contractor. Currently, literature searches have not yielded insights into soil sampling for PFAS compounds. There is an equally lack of information on potential interference drilling and excavation practices can impact on PFAS analytical data. As such, the approach with regards to the drilling or excavation contractor is to insure they rigorously follow the approved decontamination practice. Attempting to implement additional controls on the drillers and excavation contractor at this time without significant independent assessment or refereed literature will undoubtable added significant additional cost with little substantiated benefit. Langan should modify the quality assurance/quality control (QA/QC) sampling to provide a context for assessing the resulting analytical PFAS soil data.

Sampling Equipment

When sampling soil for PFAS compounds, Langan's responsibility is to initiate a soil sampling protocol that prevents the cross contamination of soil from the moment the open direct push liner or split spoon is put under the field staff's preview. The bullets below specify several key components:

- Langan field staff should change out nitrile gloves with each liner;
- The putty knife or other tool being used in assessing volatile organic compounds (VOCs) in soil by creating a slice in the sample soil column must be thoroughly decontaminated with each liner;
- Prior to further disturbance of the recovered soil column for soil description, the grab sample for volatile organic compounds (VOCs) should be collected from that segment of the soil sample column exhibiting the highest PID in accordance with the requirements of the work plan;
- In addition and also prior to further disturbance of the recovered soil compound, the soil samples being submitted for analysis of PFAS compounds should be collected in such a manner that it doesn't include samples previously disturbed for assessing PID or collecting the grab samples for VOCs. Remember to follow the requirements of the work plan. Note that the sampler should change out nitrile gloves between collected

the grab sample for VOCs and the collecting the sample for PFAS.

- After collecting the grab sample for VOCs and the sample for PFAS compounds, Langan staff may proceed with the detail soil identification following Langan standards outlined in the Langan Field Investigation and Sampling Manual and instructions given in the Soil Identification Practical training; and
- After completing the soil identification description, Langan staff may proceed with collecting the remaining require soil samples in accordance with the work plan.

Sampling Documentation and Labeling

Documentation remains extremely important. There are general rules that apply to PFAS sampling:

- Use ballpoint pens and pencils to complete labels and record field notes. There is no consensus of Sharpie® markers, therefore, avoid completing labels with anything but ballpoint pens;
- Aluminum, Masonite and polypropylene (including Langan) clipboards are suitable for holding loose papers;
- There is no consensus around the suitability of "Rite-in-Rain"™ notebooks on PFAS sampling sites. Some states including Michigan do permit them but not the U.S. Navy. Until further information is available, avoid completing filling out any types of waterproof field books in the vicinity of the PFAS sampling. If you have a field map anointed with post-its, transfer the information to the map. Post-it, or any other adhesive paper pad is not suitable for PFAS sampling sites. Only use loose paper for written note taking; and
- Use lab supplied labels only.

Quality Assurance/Quality Control Sampling

A critical factor in understanding the soil analytical PFAS data is to gauge the possibility of interference. As such, the QA/QC requirements as they pertain to soil sampling might require modification. Best practices recommends the following:

- Duplicate soil samples for PFAS should be collected at the same rate as duplicate sampling for other parameters;
- Spike Matrix Sampling and Duplicate Spiked Matrix sampling should be collected at the same rate as similar sampling for other parameters;
- Separate PFAS Field Blanks should be incorporated into the Soil Field Blank Sampling program;
- The source of the driller rinse water (truck mounted tank or local water supply faucet)

should be sampled for PFAS analysis;

- A rinse sample collected from the cutting head of the sampling equipment should be collected for PFAS analysis following decontamination;
- The source of rinse water for the Langan decontamination process should also be collected for PFAS analysis;
- A rinse sample collected from the tool used to manipulate soil samples during PID assessment should also be submitted for PFAS analysis; and
- When preparing the PFAS field blank sample, remember to change gloves, then prepare the field blanks.
 - Transfer the reagent water from the filled plastic container to the field blank container;
 - Both the empty Reagent Water container and the filled Field Blank container must be returned to the lab along with the samples taken.

Post Sampling

Place all disposable sampling material in a heavy duty garbage bag (environmental closet). Move reusable sampling equipment to the decon staging area. Decontaminate per instructions above. Then proceed to the next soil sampling location.

ATTACHMENT F

PFAS STANDARD OPERATING PROCEDURE

Determination of Selected Perfluorinated Alkyl Substances by Solid Phase Extraction and Liquid Chromatography/Tandem Mass Spectrometry Isotope Dilution (LC/MS/MS)

Reference: EPA Method 537, Version 1.1, September 2009, EPA Document #: EPA/600/R-08/09

EPA Method 537.1, Version 1, November 2018, EPA Document #: EPA/600/R-18/352

Department of Defense, Quality Systems Manual for Environmental Laboratories, Version 5.2, .2019

1. Scope and Application

Matrices: Drinking water, Non-potable Water, and Soil Matrices

Definitions: Refer to Alpha Analytical Quality Manual.

- 1.1 This is a liquid chromatography/tandem mass spectrometry (LC/MS/MS) method for the determination of selected perfluorinated alkyl substances (PFAS) in Non-Drinking Water and soil Matrices. Accuracy and precision data have been generated in reagent water, and finished ground and surface waters for the compounds listed in Table 1.
- 1.2 The data report packages present the documentation of any method modification related to the samples tested. Depending upon the nature of the modification and the extent of intended use, the laboratory may be required to demonstrate that the modifications will produce equivalent results for the matrix. Approval of all method modifications is by one or more of the following laboratory personnel before performing the modification: Area Supervisor, Department Supervisor, Laboratory Director, or Quality Assurance Officer.
- 1.3 This method is restricted to use by or under the supervision of analysts experienced in the operation of the LC/MS/MS and in the interpretation of LC/MS/MS data. Each analyst must demonstrate the ability to generate acceptable results with this method by performing an initial demonstration of capability.

2. Summary of Method

- 2.1 A 250-mL water sample is fortified with extracted internal standards (EIS) and passed through a solid phase extraction (WAX) cartridge containing a mixed mode, Weak Anion Exchange, reversed phase, water-wettable polymer to extract the method analytes and isotopically-labeled compounds. The compounds are eluted from the solid phase in two fractions with methanol followed by a small amount of 2% ammonium hydroxide in methanol solution. The extract is concentrated with nitrogen in a heated water bath, and then adjusted to a 1-mL volume with 80:20% (vol/vol) methanol:water. A 3 µl injection is made into an LC equipped with a C18 column that is interfaced to an MS/MS. The analytes are separated and identified by comparing the acquired mass spectra and retention times to reference spectra and retention times for calibration standards acquired under identical LC/MS/MS conditions. The concentration of each analyte is determined by using the isotope dilution technique. Extracted Internal Standards (EIS) analytes are used to monitor the extraction efficiency of the method analytes.

2.2 Method Modifications from Reference

None.

Table 1

Parameter	Acronym	CAS
PERFLUOROALKYL ETHER CARBOXYLIC ACIDS (PFECAs)		
Tetrafluoro-2-(heptafluoropropoxy)propanoic acid	HFPO-DA	62037-80-3
4,8-dioxa-3H-perfluorononanoic acid	ADONA	919005-14-4
PERFLUOROALKYLCARBOXILIC ACIDS (PFCAs)		
Perfluorobutanoic acid	PFBA	375-22-4
Perfluoropentanoic acid	PFPeA	2706-90-3
Perfluorohexanoic acid	PFHxA *	307-24-4
Perfluoroheptanoic acid	PFHpA *	375-85-9
Perfluorooctanoic acid	PFOA *	335-67-1
Perfluorononanoic acid	PFNA *	375-95-1
Perfluorodecanoic acid	PFDA *	335-76-2
Perfluoroundecanoic acid	PFUnA *	2058-94-8
Perfluorododecanoic acid	PFDoA *	307-55-1
Perfluorotridecanoic acid	PFTTrDA *	72629-94-8
Perfluorotetradecanoic acid	PFTA *	376-06-7
Perfluorohexadecanoic acid	PFHxDA	67905-19-5
Perfluorooctadecanoic acid	PFODA	16517-11-6
PERFLUOROALKYLSULFONATES (PFASs)		
Perfluorobutanesulfonic acid	PFBS *	375-73-5
Perfluoropentanesulfonic acid	PFPeS	2706-91-4
Perfluorohexanesulfonic acid	PFHxS *	355-46-4
Perfluoroheptanesulfonic acid	PFHpS	375-92-8
Perfluorooctanesulfonic acid	PFOS *	1763-23-1
Perfluorononanesulfonic acid	PFNS	68259-12-1
Perfluorodecanesulfonic acid	PFDS	335-77-3
Perfluorododecanesulfonic acid	PFDoS	79780-39-5

* also reportable via the standard 537 method

Table 1 Cont.

Parameter	Acronym	CAS
CHLORO-PERFLUOROALKYLSULFONATE		
11-chloroeicosafluoro-3-oxaundecane-1-sulfonic acid	11Cl-PF3OUdS	763051-92-9
9-chlorohexadecafluoro-3-oxanone-1-sulfonic acid	9Cl-PF3ONS	756426-58-1
PERFLUOROOCETANESULFONAMIDES (FOSAs)		
Perfluorooctanesulfonamide	PFOSA	754-91-6
N-methylperfluoro-1-octanesulfonamide	NMeFOSA	31506-32-8
N-ethylperfluoro-1-octanesulfonamide	NEtFOSA	4151-50-2
TELOMER SULFONATES		
1H,1H,2H,2H-perfluorohexane sulfonate (4:2)	4:2FTS	27619-93-8
1H,1H,2H,2H-perfluorooctane sulfonate (6:2)	6:2FTS	27619-97-2
1H,1H,2H,2H-perfluorodecane sulfonate (8:2)	8:2FTS	39108-34-4
1H,1H,2H,2H-perfluorododecane sulfonate (10:2)	10:2FTS	120226-60-0
PERFLUOROOCETANESULFONAMIDOACETIC ACIDS		
N-methyl perfluorooctanesulfonamidoacetic acid	NMeFOSAA *	2355-31-9
N-ethyl perfluorooctanesulfonamidoacetic acid	NEtFOSAA *	2991-50-6
NATIVE PERFLUOROOCETANESULFONAMIDOETHANOLS (FOSEs)		
2-(N-methylperfluoro-1-octanesulfonamido)-ethanol	NMeFOSE	24448-09-7
2-(N-ethylperfluoro-1-octanesulfonamido)-ethanol	NEtFOSE	1691-99-2

* also reportable via the standard 537 method

3. Reporting Limits

The reporting limit for PFAS's is 2 ng/L for aqueous samples (20 ng/L for HFPO-DA) and 1 ng/g (10 ng/g for HFPO-DA) for soil samples.

4. Interferences

- 4.1 PFAS standards, extracts and samples should not come in contact with any glass containers or pipettes as these analytes can potentially adsorb to glass surfaces. PFAS analyte and EIS standards commercially purchased in glass ampoules are acceptable; however, all subsequent transfers or dilutions performed by the analyst must be prepared and stored in polypropylene containers.
- 4.2 Method interferences may be caused by contaminants in solvents, reagents (including reagent water), sample bottles and caps, and other sample processing hardware that lead to discrete artifacts and/or elevated baselines in the chromatograms. The method analytes in this method can also be found in many common laboratory supplies and equipment, such

as PTFE (polytetrafluoroethylene) products, LC solvent lines, methanol, aluminum foil, SPE sample transfer lines, etc. All items such as these must be routinely demonstrated to be free from interferences (less than 1/3 the RL for each method analyte) under the conditions of the analysis by analyzing laboratory reagent blanks as described in Section 9.2. **Subtracting blank values from sample results is not permitted.**

- 4.3** Matrix interferences may be caused by contaminants that are co-extracted from the sample. The extent of matrix interferences will vary considerably from source to source, depending upon the nature of the water. Humic and/or fulvic material can be co-extracted during SPE and high levels can cause enhancement and/or suppression in the electrospray ionization source or low recoveries on the SPE sorbent. Total organic carbon (TOC) is a good indicator of humic content of the sample.
- 4.4** SPE cartridges can be a source of interferences. The analysis of field and laboratory reagent blanks can provide important information regarding the presence or absence of such interferences. Brands and lots of SPE devices should be tested to ensure that contamination does not preclude analyte identification and quantitation.

5. Health and Safety

- 5.1** The toxicity or carcinogenicity of each reagent and standard used in this method is not fully established; however, each chemical compound should be treated as a potential health hazard. From this viewpoint, exposure to these chemicals must be reduced to the lowest possible level by whatever means available. A reference file of material safety data sheets is available to all personnel involved in the chemical analysis. Additional references to laboratory safety are available in the Chemical Hygiene Plan.
- 5.2** All personnel handling environmental samples known to contain or to have been in contact with municipal waste must follow safety practices for handling known disease causative agents.
- 5.3** PFOA has been described as "likely to be carcinogenic to humans." Pure standard materials and stock standard solutions of these method analytes should be handled with suitable protection to skin and eyes, and care should be taken not to breathe the vapors or ingest the materials.

6. Sample Collection, Preservation, Shipping and Handling

6.1 Sample Collection for Aqueous Samples

- 6.1.1** Samples must be collected in two (2) 250-mL high density polyethylene (HDPE) container with an unlined plastic screw cap.
- 6.1.2** The sample handler must wash their hands before sampling and wear nitrile gloves while filling and sealing the sample bottles. PFAS contamination during sampling can occur from a number of common sources, such as food packaging and certain foods and beverages. Proper hand washing and wearing nitrile gloves will aid in minimizing this type of accidental contamination of the samples.
- 6.1.3** Open the tap and allow the system to flush until the water temperature has stabilized (approximately 3 to 5 min). Collect samples from the flowing system.

- 6.1.4 Fill sample bottles. Samples do not need to be collected headspace free.
- 6.1.5 After collecting the sample and cap the bottle. Keep the sample sealed from time of collection until extraction.

- 6.1.6 Field Reagent Blank (FRB)

- 6.1.6.1 A FRB must be handled along with each sample set. The sample set is composed of samples collected from the same sample site and at the same time. At the laboratory, fill the field blank sample bottle with reagent water and preservatives, seal, and ship to the sampling site along with the sample bottles. For each FRB shipped, an empty sample bottle (no preservatives) must also be shipped. At the sampling site, the sampler must open the shipped FRB and pour the reagent water into the empty shipped sample bottle, seal and label this bottle as the FRB. The FRB is shipped back to the laboratory along with the samples and analyzed to ensure that PFAS's were not introduced into the sample during sample collection/handling.

- The reagent water used for the FRBs must be initially analyzed for method analytes as a MB and must meet the MB criteria in Section 9.2.1 prior to use. This requirement will ensure samples are not being discarded due to contaminated reagent water rather than contamination during sampling.

6.2 Sample Collection for Soil and Sediment samples.

Grab samples are collected in polypropylene containers. Sample containers and contact surfaces containing PTFE shall be avoided.

6.3 Sample Preservation

Not applicable.

6.4 Sample Shipping

Samples must be chilled during shipment and must not exceed 10 °C during the first 48 hours after collection. Sample temperature must be confirmed to be at or below 10 °C when the samples are received at the laboratory. Samples stored in the lab must be held at or below 6 °C until extraction, but should not be frozen.

NOTE: Samples that are significantly above 10° C, at the time of collection, may need to be iced or refrigerated for a period of time, in order to chill them prior to shipping. This will allow them to be shipped with sufficient ice to meet the above requirements.

6.5 Sample Handling

- 6.5.1 Holding Times

- 6.5.1.1 Water samples should be extracted as soon as possible but must be extracted within 14 days. Soil samples should be extracted within 28 days. Extracts are stored at < 10 ° C and analyzed within 28 days after extraction.

7. Equipment and Supplies

- 7.1** SAMPLE CONTAINERS – 250-mL high density polyethylene (HDPE) bottles fitted with unlined screw caps. Sample bottles must be discarded after use.
- 7.2** POLYPROPYLENE BOTTLES – 4-mL narrow-mouth polypropylene bottles.
- 7.3** CENTRIFUGE TUBES – 50-mL conical polypropylene tubes with polypropylene screw caps for storing standard solutions and for collection of the extracts.
- 7.4** AUTOSAMPLER VIALS – Polypropylene 0.7-mL autosampler vials with polypropylene caps.
- 7.4.1** NOTE: Polypropylene vials and caps are necessary to prevent contamination of the sample from PTFE coated septa. However, polypropylene caps do not reseal, so evaporation occurs after injection. Thus, multiple injections from the same vial are not possible.
- 7.5** POLYPROPYLENE GRADUATED CYLINDERS – Suggested sizes include 25, 50, 100 and 1000-mL cylinders.
- 7.6** Auto Pipets – Suggested sizes include 5, 10, 25, 50, 100, 250, 500, 1000, 5000 and 10,000-µls.
- 7.7** PLASTIC PIPETS – Polypropylene or polyethylene disposable pipets.
- 7.8** ANALYTICAL BALANCE – Capable of weighing to the nearest 0.0001 g.
- 7.9** SOLID PHASE EXTRACTION (SPE) APPARATUS FOR USING CARTRIDGES
- 7.9.1** SPE CARTRIDGES – 0.5 g SPE cartridges containing a reverse phase copolymer characterized by a weak anion exchanger (WAX) sorbent phase.
- 7.9.2** VACUUM EXTRACTION MANIFOLD – A manual vacuum manifold with large volume sampler for cartridge extractions, or an automatic/robotic sample preparation system designed for use with SPE cartridges, may be used if all QC requirements discussed in Section 9 are met. Extraction and/or elution steps may not be changed or omitted to accommodate the use of an automated system. Care must be taken with automated SPE systems to ensure the PTFE commonly used in these systems does not contribute to unacceptable analyte concentrations in the MB (Sect. 9.2.1).
- 7.9.3** SAMPLE DELIVERY SYSTEM – Use of a polypropylene transfer tube system, which transfers the sample directly from the sample container to the SPE cartridge, is recommended, but not mandatory. Standard extraction manifolds come equipped with PTFE transfer tube systems. These can be replaced with 1/8" O.D. x 1/16" I.D. polypropylene or polyethylene tubing cut to an appropriate length to ensure no sample contamination from the sample transfer lines. Other types of non-PTFE tubing may be used provided it meets the MB (Sect. 9.2.1) and LCS (Sect. 9.3) QC requirements. The PTFE transfer tubes may be used, but an MB must be run on each PTFE transfer tube and the QC requirements in Section 13.2.2 must be met. In the case of automated SPE, the removal of PTFE lines may not be feasible; therefore, MBs will need to be rotated among the ports and must meet the QC requirements of Sections 13.2.2 and 9.2.1.
- 7.10** Extract Clean-up Cartridge – 250 mg 6ml SPE Cartridge containing graphitized polymer carbon

7.11 EXTRACT CONCENTRATION SYSTEM – Extracts are concentrated by evaporation with nitrogen using a water bath set no higher than 65 °C.

7.12 LABORATORY OR ASPIRATOR VACUUM SYSTEM – Sufficient capacity to maintain a vacuum of approximately 10 to 15 inches of mercury for extraction cartridges.

7.13 LIQUID CHROMATOGRAPHY (LC)/TANDEM MASS SPECTROMETER (MS/MS) WITH DATA SYSTEM

7.13.1 LC SYSTEM – Instrument capable of reproducibly injecting up to 10- μ L aliquots, and performing binary linear gradients at a constant flow rate near the flow rate used for development of this method (0.4 mL/min). The LC must be capable of pumping the water/methanol mobile phase without the use of a degasser which pulls vacuum on the mobile phase bottle (other types of degassers are acceptable). Degassers which pull vacuum on the mobile phase bottle will volatilize the ammonium acetate mobile phase causing the analyte peaks to shift to earlier retention times over the course of the analysis batch. The usage of a column heater is optional.

NOTE: During the course of method development, it was discovered that while idle for more than one day, PFAS's built up in the PTFE solvent transfer lines. To prevent long delays in purging high levels of PFAS's from the LC solvent lines, they were replaced with PEEK tubing and the PTFE solvent frits were replaced with stainless steel frits. It is not possible to remove all PFAS background contamination, but these measures help to minimize their background levels.

7.13.2 LC/TANDEM MASS SPECTROMETER – The LC/MS/MS must be capable of negative ion electrospray ionization (ESI) near the suggested LC flow rate of 0.4 mL/min. The system must be capable of performing MS/MS to produce unique product ions for the method analytes within specified retention time segments. A minimum of 10 scans across the chromatographic peak is required to ensure adequate precision.

7.13.3 DATA SYSTEM – An interfaced data system is required to acquire, store, reduce, and output mass spectral data. The computer software should have the capability of processing stored LC/MS/MS data by recognizing an LC peak within any given retention time window. The software must allow integration of the ion abundance of any specific ion within specified time or scan number limits. The software must be able to calculate relative response factors, construct linear regressions or quadratic calibration curves, and calculate analyte concentrations.

7.13.4 ANALYTICAL COLUMN – An LC BEH C₁₈ column (2.1 x 50 mm) packed with 1.7 μ m d_p C₁₈ solid phase particles was used. Any column that provides adequate resolution, peak shape, capacity, accuracy, and precision (Sect. 9) may be used.

8. Reagents and Standards

8.1 GASES, REAGENTS, AND SOLVENTS – Reagent grade or better chemicals should be used.

8.1.1 REAGENT WATER – Purified water which does not contain any measurable quantities of any method analytes or interfering compounds greater than 1/3 the RL for each method analyte of interest. Prior to daily use, at least 3 L of reagent water should be flushed from the purification system to rinse out any build-up of analytes in the system's tubing.

- 8.1.2 METHANOL (CH_3OH , CAS#: 67-56-1) – High purity, demonstrated to be free of analytes and interferences.
 - 8.1.3 AMMONIUM ACETATE ($\text{NH}_4\text{C}_2\text{H}_3\text{O}_2$, CAS#: 631-61-8) – High purity, demonstrated to be free of analytes and interferences.
 - 8.1.4 ACETIC ACID (H_3CCOOH , CAS#: 64-19-7) - High purity, demonstrated to be free of analytes and interferences.
 - 8.1.5 1M AMMONIUM ACETATE/REAGENT WATER – High purity, demonstrated to be free of analytes and interferences.
 - 8.1.6 2mM AMMONIUM ACETATE/METHANOL:WATER (5:95) – To prepare, mix 2 ml of 1M AMMONIUM ACETATE, 1 ml ACETIC ACID and 50 ml METHANOL into 1 Liter of REAGENT WATER.
 - 8.1.7 Methanol/Water (80:20) – To prepare a 1 Liter bottle, mix 200 ml of REAGENT WATER with 800 ml of METHANOL.
 - 8.1.8 AMMONIUM HYDROXIDE (NH_3 , CAS#: 1336-21-6) – High purity, demonstrated to be free of analytes and interferences.
 - 8.1.9 Sodium Acetate (NaOOCCH_3 , CAS#: 127-09-3) – High purity, demonstrated to be free of analytes and interferences.
 - 8.1.10 25 mM Sodium Acetate Buffer – To prepare 250mls, dissolve .625 grams of sodium acetate into 100 mls of reagent water. Add 4 mls Acetic Acid and adjust the final volume to 250 mls with reagent water.
 - 8.1.11 NITROGEN – Used for the following purposes: Nitrogen aids in aerosol generation of the ESI liquid spray and is used as collision gas in some MS/MS instruments. The nitrogen used should meet or exceed instrument manufacturer's specifications. In addition, Nitrogen is used to concentrate sample extracts (Ultra High Purity or equivalent).
 - 8.1.12 ARGON – Used as collision gas in MS/MS instruments. Argon should meet or exceed instrument manufacturer's specifications. Nitrogen gas may be used as the collision gas provided sufficient sensitivity (product ion formation) is achieved.
- 8.2 STANDARD SOLUTIONS – When a compound purity is assayed to be 96% or greater, the weight can be used without correction to calculate the concentration of the stock standard. PFAS analyte and IS standards commercially purchased in glass ampoules are acceptable; however, all subsequent transfers or dilutions performed by the analyst must be prepared and stored in polypropylene containers. Standards for sample fortification generally should be prepared in the smallest volume that can be accurately measured to minimize the addition of excess organic solvent to aqueous samples.

NOTE: Stock standards and diluted stock standards are stored at $\leq 4^\circ\text{C}$.

8.2.1 ISOTOPE DILUTION Extracted Internal Standard (ID EIS) STOCK SOLUTIONS
- ID EIS stock standard solutions are stable for at least 6 months when stored at 4 °C. The stock solution is purchased at a concentration of 1000 ng/mL.

8.2.2 ISOTOPE DILUTION Extracted Internal Standard PRIMARY DILUTION STANDARD (ID EIS PDS) – Prepare the ID EIS PDS at a concentration of 500 ng/mL. The ID PDS is prepared in 80:20% (vol/vol) methanol:water. The ID PDS is stable for 6 months when stored at ≤4 °C.

Table 2

Isotope Labeled Standard	Conc. of EIS Stock (ng/mL)	Vol. of EIS Stock (mL)	Final Vol. of EIS PDS (mL)	Final Conc. of EIS PDS (ng/mL)
M4PFBA	1000	1.0	2.0	500
M5PFPeA	1000	1.0	2.0	500
M5PFHxA	1000	1.0	2.0	500
M4PFHpA	1000	1.0	2.0	500
M8PFOA	1000	1.0	2.0	500
M9PFNA	1000	1.0	2.0	500
M6PFDA	1000	1.0	2.0	500
M7PFUdA	1000	1.0	2.0	500
MPFDoA	1000	1.0	2.0	500
M2PFTeDA	1000	1.0	2.0	500
M2PFHxDA	50,000	.02	2.0	500
d3-N-MeFOSA	50,000	.02	2.0	500
d5-N-EtFOSA	50,000	.02	2.0	500
d7-N-MeFOSE	50,000	.02	2.0	500
d9-N-EtFOSE	50,000	.02	2.0	500
M8FOSA	1000	1.0	2.0	500
d3-N-MeFOSAA	1000	1.0	2.0	500
d5-N-EtFOSAA	1000	1.0	2.0	500
M3PFBS	929	1.0	2.0	464.5
M3PFHxS	946	1.0	2.0	473
M8PFOS	957	1.0	2.0	478.5
M2-4:2FTS	935	1.0	2.0	467.5
M2-6:2FTS	949	1.0	2.0	474.5
M2-8:2FTS	958	1.0	2.0	479
M3HFPO-DA	50,000	.4	2.0	10,000

8.2.3 ANALYTE STOCK STANDARD SOLUTION – Analyte stock standards are stable for at least 6 months when stored at 4 °C. When using these stock standards to prepare a PDS, care must be taken to ensure that these standards are at room temperature and adequately vortexed.

8.2.4 Analyte Secondary Spiking Standard Prepare the spiking solution of additional add on components for project specific requirements only. ANALYTE PRIMARY SPIKING STANDARD – Prepare the spiking standard at a concentration of 500 ng/mL in methanol. The spiking standard is stable for at least two months when stored in polypropylene centrifuge tubes at room temperature.

Table 3

Analyte	Conc. of IS Stock (ng/mL)	Vol. of IS Stock (mL)	Final Vol. of IS PDS (mL)	Final Conc. of IS PDS (ng/mL)
PFBA	2000	1	4	500
PFPeA	2000	1	4	500
PFHxA	2000	1	4	500
PFHpA	2000	1	4	500
PFOA	2000	1	4	500
PFNA	2000	1	4	500
PFDA	2000	1	4	500
PFUdA	2000	1	4	500
PFDoA	2000	1	4	500
PFTTrDA	2000	1	4	500
PFTeDA	2000	1	4	500
FOSA	2000	1	4	500
N-MeFOSAA	2000	1	4	500
N-EtFOSAA	2000	1	4	500
L-PFBS	1770	1	4	442.5
L-PFPeS	1880	1	4	470
L-PFHxSK	1480	1	4	370
Br-PFHxSK	344	1	4	86
L-PFHpS	1900	1	4	475
L-PFOSK	1460	1	4	365
Br-PFOSK	391	1	4	97.75
L-PFNS	1920	1	4	480
L-PFDS	1930	1	4	482.5
4:2FTS	1870	1	4	467.5
6:2FTS	1900	1	4	475
8:2FTS	1920	1	4	480

8.2.5 Analyte Secondary Spiking Standard Prepare the spiking solution of additional add on components for project specific requirements only.

Table 4

Analyte	Conc. of IS Stock (ng/mL)	Vol. of IS Stock (mL)	Final Vol. of IS PDS (mL)	Final Conc. of IS PDS (ng/mL)
ADONA	2000	1	4	500
PFHxDA	2000	1	4	500
PFODA	2000	1	4	500
HFPO-DA	100,000	.4	4	10,000
9CIPF3ONS	50,000	0.04	4	500
11CIPF3OUdS	50,000	0.04	4	500

- 8.2.6** LOW, MEDIUM AND HIGH LEVEL LCS – The LCS's will be prepared at the following concentrations and rotated per batch; 2 ng/L, 40 ng/L, 500 ng/L for drinking waters. The analyte PDS contains all the method analytes of interest at various concentrations in methanol. The analyte PDS has been shown to be stable for six months when stored at $\leq 4^{\circ}\text{C}$.
- 8.2.7** Isotope Dilution Labeled Recovery Stock Solutions (ID REC) – ID REC Stock solutions are stable for at least 6 months when stored at 4°C . The stock solution is purchased at a concentration of 1000 ng/mL.
- 8.2.8** Isotope Dilution Labeled Recovery Primary Dilution Standard (ID REC PDS) - Prepare the ID REC PDS at a concentration of 500 ng/mL. The ID REC PDS is prepared in 80:20% (vol/vol) methanol:water. The ID REC PDS is stable for at least six months when stored in polypropylene centrifuge tubes at $\leq 4^{\circ}\text{C}$.

Table 5

Analyte	Conc. of REC Stock (ng/mL)	Vol. of REC Stock (mL)	Final Vol. of REC PDS (mL)	Final Conc. of REC PDS (ng/mL)
M2PFOA	2000	1	4	500
M2PFDA	2000	1	4	500
M3PFBA	2000	1	4	500
M4PFOS	2000	1	4	500

8.2.9 CALIBRATION STANDARDS (CAL) –

Current Concentrations (ng/mL): 0.5, 1.0, 5.0, 10.0, 50.0, 125, 150, 250, 500

Prepare the CAL standards over the concentration range of interest from dilutions of the analyte PDS in methanol containing 20% reagent water. 20 μL of the EIS PDS and REC PDS are added to the CAL standards to give a constant concentration of 10 ng/mL. The lowest concentration CAL standard must be at or below the RL (2 ng/L), which may depend on system sensitivity. The CAL standards may also be used as CCVs (Sect. 9.8). To make calibration stock standards:

Table 6

Calibration Standard Concentration	Final Aqueous Cal STD Level Concentration	Final Soil Cal STD Level Concentration	24 compound stock added (ul)	PFHxDA Stock added (ul)	500 ng/ml PFHxDA dilution added (ul)	PFODA Stock added (ul)	500 ng/ml PFODA dilution added (ul)	ADONA, HFPO-DA, 11Cl-PF3OUdS, 9Cl-PF3ONS Stock added (ul)	500 ng/ml ADONA dilution added (ul)	Final Volume in MeOH/H ₂ O (82:20)
.5 ng/ml	2 ng/L	.25 ng/g	6.25		25		25		25	25 mls
1 ng/ml	4 ng/L	.5 ng/g	5		20		20		20	10 mls
5 ng/ml	20 ng/L	1 ng/g	25		100		100		100	10 mls
10 ng/ml	40 ng/L	5 ng/g	125	5		5		5		25 mls

50 ng/ml	200 ng/L	25 ng/g	250	10		10		10		10 mls
125 ng/ml	500 ng/L	62.5 ng/g	625	25		25		25		10 mls
150 ng/ml	600 ng/L	75 ng/g	750	30		30		30		10 mls
250 ng/ml	1000 ng/L	125 ng/g	625							5 mls
500 ng/ml	2000 ng/L	250 ng/g	1250							5 mls

9. Quality Control

The laboratory must maintain records to document the quality of data that is generated. Ongoing data quality checks are compared with established performance criteria to determine if the results of analyses meet the performance characteristics of the method.

9.1 MINIMUM REPORTING LIMIT (MRL) CONFIRMATION

- 9.1.1 Fortify, extract, and analyze seven replicate LCSs at 2 ng/l. Calculate the mean measured concentration (*Mean*) and standard deviation for these replicates. Determine the Half Range for the prediction interval of results (HR_{PIR}) using the equation below

$$HR_{PIR} = 3.963s$$

Where:

s = the standard deviation

3.963 = a constant value for seven replicates.

- 9.1.2 Confirm that the upper and lower limits for the Prediction Interval of Result ($PIR = Mean \pm HR_{PIR}$) meet the upper and lower recovery limits as shown below

The Upper PIR Limit must be $\leq 150\%$ recovery.

$$\frac{Mean + HR_{PIR}}{Fortified\ Concentration} \times 100\% \leq 150\%$$

The Lower PIR Limit must be $\geq 50\%$ recovery.

$$\frac{Mean - HR_{PIR}}{Fortified\ Concentration} \times 100\% \geq 50\%$$

- 9.1.3 The RL is validated if both the Upper and Lower PIR Limits meet the criteria described above. If these criteria are not met, the RL has been set too low and must be determined again at a higher concentration.

9.2 Blank(s)

- 9.2.1 **METHOD BLANK (MB)** - A Method Blank (MB) is required with each extraction batch to confirm that potential background contaminants are not interfering with the identification or quantitation of method analytes. Prep and analyze a MB for every 20 samples. If the MB produces a peak within the retention time window of any analyte that would prevent the determination of that analyte, determine the source of contamination and eliminate the interference before processing samples. Background contamination must be reduced to an acceptable level before proceeding. Background from method analytes or other contaminants that

interfere with the measurement of method analytes must be below the RL. If the method analytes are detected in the MB at concentrations equal to or greater than this level, then all data for the problem analyte(s) must be considered invalid for all samples in the extraction batch. Because background contamination is a significant problem for several method analytes, it is highly recommended that the analyst maintain a historical record of MB data.

- 9.2.2 FIELD REAGENT BLANK (FRB)** - The purpose of the FRB is to ensure that PFAS's measured in the Field Samples were not inadvertently introduced into the sample during sample collection/handling. Analysis of the FRB is required only if a Field Sample contains a method analyte or analytes at or above the RL. The FRB is processed, extracted and analyzed in exactly the same manner as a Field Sample.

9.3 Laboratory Control Sample (LCS) and Laboratory Control Sample Duplicates (LCSD)

- 9.3.1** An LCS is required with each extraction batch. The fortified concentration of the LCS may be rotated between low, medium, and high concentrations from batch to batch. Default limits of 50-150% of the true value may be used for analytes until sufficient replicates have been analyzed to generate proper control limits. Calculate the percent recovery (%R) for each analyte using the equation

$$\%R = \frac{A \times 100}{B}$$

Where:

A = measured concentration in the fortified sample

B = fortification concentration.

- 9.3.2** Where applicable, LCSD's are to be extracted and analyzed. The concentration and analyte recovery criteria for the LCSD must be the same as the batch LCS. The RSD's must fall within ≤30% of the true value for medium and high level replicates, and ≤50% for low level replicates. Calculate the relative percent difference (RPD) for duplicate MSs (MS and MSD) using the equation

$$RPD = \frac{|LCS - LCSD|}{(LCS + LCSD) / 2} \times 100$$

- 9.3.3** If the LCS and or LCSD results do not meet these criteria for method analytes, then all data for the problem analyte(s) must be considered invalid for all samples in the extraction batch.

9.4 Labeled Recovery Standards (REC)

The analyst must monitor the peak areas of the REC(s) in all injections during each analysis day.

9.5 Extracted Internal Standards (EIS)

- 9.5.1** The EIS standard is fortified into all samples, CCVs, MBs, LCSs, MSs, MSDs, FD, and FRB prior to extraction. It is also added to the CAL standards. The EIS is a means of assessing method performance from extraction to final

chromatographic measurement. Calculate the recovery (%R) for the EIS using the following equation

$$\%R = (A / B) \times 100$$

Where:

A = calculated EIS concentration for the QC or Field Sample
B = fortified concentration of the EIS.

- 9.5.2** Default limits of 50-150% may be used for analytes until sufficient replicates have been analyzed to generate proper control limits. A low or high percent recovery for a sample, blank, or CCV does not require discarding the analytical data but it may indicate a potential problem with future analytical data. When EIS recovery from a sample, blank, or CCV are outside control limits, check 1) calculations to locate possible errors, 2) standard solutions for degradation, 3) contamination, and 4) instrument performance. For CCVs and QC elements spiked with all target analytes, if the recovery of the corresponding target analytes meet the acceptance criteria for the EIS in question, the data can be used but all potential biases in the recovery of the EIS must be documented in the sample report. If the associated target analytes do not meet the acceptance criteria, the data must be reanalyzed.

9.6 Matrix Spike (MS)

- 9.6.1** Analysis of an MS is required in each extraction batch and is used to determine that the sample matrix does not adversely affect method accuracy. Assessment of method precision is accomplished by analysis of a Field Duplicate (FD) (Sect. 9.6); however, infrequent occurrence of method analytes would hinder this assessment. If the occurrence of method analytes in the samples is infrequent, or if historical trends are unavailable, a second MS, or MSD, must be prepared, extracted, and analyzed from a duplicate of the Field Sample. Extraction batches that contain MSDs will not require the extraction of a field sample duplicate. If a variety of different sample matrices are analyzed regularly, for example, drinking water from groundwater and surface water sources, method performance should be established for each. Over time, MS data should be documented by the laboratory for all routine sample sources.
- 9.6.2** Within each extraction batch, a minimum of one Field Sample is fortified as an MS for every 20 Field Samples analyzed. The MS is prepared by spiking a sample with an appropriate amount of the Analyte Stock Standard (Sect. 8.2.3). Use historical data and rotate through the low, mid and high concentrations when selecting a fortifying concentration. Calculate the percent recovery (%R) for each analyte using the equation

$$\%R = \frac{(A - B)}{C} \times 100$$

Where:

A = measured concentration in the fortified sample
B = measured concentration in the unfortified sample
C = fortification concentration.

- 9.6.3** Analyte recoveries may exhibit matrix bias. For samples fortified at or above their native concentration, recoveries should range between 50-150%. If the accuracy of any analyte falls outside the designated range, and the laboratory performance for that analyte is shown to be in control in the LCS, the recovery is judged to be

matrix biased. The result for that analyte in the unfortified sample is labeled suspect/matrix to inform the data user that the results are suspect due to matrix effects.

9.7 Laboratory Duplicate

9.7.1 FIELD DUPLICATE OR LABORATORY FORTIFIED SAMPLE MATRIX DUPLICATE (FD or MSD) – Within each extraction batch (not to exceed 20 Field Samples), a minimum of one FD or MSD must be analyzed. Duplicates check the precision associated with sample collection, preservation, storage, and laboratory procedures. If method analytes are not routinely observed in Field Samples, an MSD should be analyzed rather than an FD.

9.7.2 Calculate the relative percent difference (RPD) for duplicate measurements (FD1 and FD2) using the equation

$$RPD = \frac{|FD1 - FD2|}{(FD1 + FD2) / 2} \times 100$$

9.7.3 RPDs for FDs should be ≤30%. Greater variability may be observed when FDs have analyte concentrations that are within a factor of 2 of the RL. At these concentrations, FDs should have RPDs that are ≤50%. If the RPD of any analyte falls outside the designated range, and the laboratory performance for that analyte is shown to be in control in the CCV, the recovery is judged to be matrix biased. The result for that analyte in the unfortified sample is labeled suspect/matrix to inform the data user that the results are suspect due to matrix effects.

9.7.4 If an MSD is analyzed instead of a FD, calculate the relative percent difference (RPD) for duplicate MSs (MS and MSD) using the equation

$$RPD = \frac{|MS - MSD|}{(MS + MSD) / 2} \times 100$$

9.7.5 RPDs for duplicate MSs should be ≤30% for samples fortified at or above their native concentration. Greater variability may be observed when MSs are fortified at analyte concentrations that are within a factor of 2 of the RL. MSs fortified at these concentrations should have RPDs that are ≤50% for samples fortified at or above their native concentration. If the RPD of any analyte falls outside the designated range, and the laboratory performance for that analyte is shown to be in control in the LCSD where applicable, the result is judged to be matrix biased. If no LCSD is present, the associated MS and MSD are to be re-analyzed to determine if any analytical has occurred. If the resulting RPDs are still outside control limits, the result for that analyte in the unfortified sample is labeled suspect/matrix to inform the data user that the results are suspect due to matrix effects.

9.8 Initial Calibration Verification (ICV)

9.8.1 As part of the IDC (Sect. 13.2), and after each ICAL, analyze a QCS sample from a source different from the source of the CAL standards. If a second vendor is not available, then a different lot of the standard should be used. The QCS should be prepared and analyzed just like a CCV. Acceptance criteria for the QCS are identical to the CCVs; the calculated amount for each analyte must be ±


30% of the expected value. If measured analyte concentrations are not of acceptable accuracy, check the entire analytical procedure to locate and correct the problem.

9.9 Continuing Calibration Verification (CCV)

9.9.1 CCV Standards are analyzed at the beginning of each analysis batch, after every 10 Field Samples, and at the end of the analysis batch. See Section 10.7 for concentration requirements and acceptance criteria.

9.10 Method-specific Quality Control Samples

9.10.1 PEAK ASYMMETRY FACTOR – A peak asymmetry factor must be calculated using the equation below during the IDL and every time a calibration curve is generated. The peak asymmetry factor for the first two eluting peaks in a midlevel CAL standard (if only two analytes are being analyzed, both must be evaluated) must fall in the range of 0.8 to 1.5. Modifying the standard or extract composition to more aqueous content to prevent poor shape is not permitted. See guidance in Section 10.6.4.1 if the calculated peak asymmetry factors do not meet the criteria.

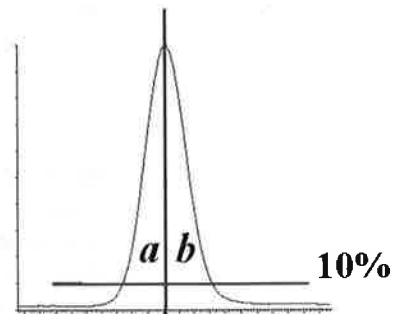

$$A_s = b / a$$

Where:

A_s = peak asymmetry factor

b = width of the back half of the peak measured (at 10% peak height) from the trailing edge of the peak to a line dropped perpendicularly from the peak apex

a = the width of the front half of the peak measured (at 10% peak height) from the leading edge of the peak to a line dropped perpendicularly from the apex.

9.11 Method Sequence

- CCV-LOW
- MB
- LCS
- LCSD
- MS
- Duplicate or MSD
- Field Samples (1-10)
- CCV-MID
- Field Samples (11-20)
- CCV-LOW

10. Procedure

10.1 Equipment Set-up

- 10.1.1** This procedure may be performed manually or in an automated mode using a robotic or automatic sample preparation device. If an automated system is used to prepare samples, follow the manufacturer's operating instructions, but all extraction and elution steps must be the same as in the manual procedure. Extraction and/or elution steps may not be changed or omitted to accommodate the use of an automated system. If an automated system is used, the MBs should be rotated among the ports to ensure that all the valves and tubing meet the MB requirements (Sect. 9.2).
- 10.1.2** Some of the PFAS's adsorb to surfaces, including polypropylene. Therefore, the aqueous sample bottles must be rinsed with the elution solvent (Sect 10.3.4) whether extractions are performed manually or by automation. The bottle rinse is passed through the cartridge to elute the method analytes and is then collected (Sect. 10.3.4).
- 10.1.3 NOTE:** The SPE cartridges and sample bottles described in this section are designed as single use items and should be discarded after use. They may not be refurbished for reuse in subsequent analyses.

10.2 Sample Preparation and Extraction of Aqueous Samples

- 10.2.1** Samples are preserved, collected and stored as presented in Section 6.

The entire sample that is received must be sent through the SPE cartridge. In addition, the bottle must be solvent rinsed and this rinse must be sent through the SPE cartridge as well. The method blank (MB) and laboratory control sample (LCS) must be extracted in exactly the same manner (i.e., must include the bottle solvent rinse). It should be noted that a water rinse alone is not sufficient. This does not apply to samples with high concentrations of PFAS that are prepared using serial dilution and not SPE.

- 10.2.2** Determine sample volume. Weigh all samples to the nearest 1g. If visible sediment is present, centrifuge and decant into a new 250mL HDPE bottle and record the weight of the new container.

NOTE: Some of the PFAS's adsorb to surfaces, thus the sample volume may **NOT** be transferred to a graduated cylinder for volume measurement.

- 10.2.3** The MB, LCS and FRB may be prepared by measuring 250 mL of reagent water with a polypropylene graduated cylinder or filling a 250-mL sample bottle to near the top.
- 10.2.4** Adjust the QC and sample pH to 3 by adding acetic acid in water dropwise
- 10.2.5** Add 20 µL of the EIS PDS (Sect. 8.2.2) to each sample and QC, cap and invert to mix.
- 10.2.6** If the sample is an LCS, LCSD, MS, or MSD, add the necessary amount of analyte PDS (Sect. 8.2.3). Cap and invert each sample to mix.

10.3 Cartridge SPE Procedure

Printouts of this document may be out of date and should be considered uncontrolled. To accomplish work, the published version of the document should be viewed online.

- 10.3.1 CARTRIDGE CLEAN-UP AND CONDITIONING – DO NOT** allow cartridge packing material to go dry during any of the conditioning steps. Rinse each cartridge with 3 X 5 mL of 2% ammonium hydroxide in methanol, followed by 5mls of methanol. Next, rinse each cartridge with 5 mls of the 25 mM acetate buffer, followed by 15 mL of reagent water, without allowing the water to drop below the top edge of the packing. If the cartridge goes dry during the conditioning phase, the conditioning must be started over. Add 4-5 mL of reagent water to each cartridge, attach the sample transfer tubes (Sect. 7.9.3), turn on the vacuum, and begin adding sample to the cartridge.
- 10.3.2 SAMPLE EXTRACTON –** Adjust the vacuum so that the approximate flow rate is approximately 4 mL/min. Do not allow the cartridge to go dry before all the sample has passed through.
- 10.3.3 SAMPLE BOTTLE AND CARTRIDGE RINSE –** After the entire sample has passed through the cartridge, rinse the sample bottles with 4 ml reagent water followed by 4 ml 25 mM acetate buffer at pH 4 and draw the aliquot through the sample transfer tubes and the cartridges. Draw air or nitrogen through the cartridge for 5-10 min at high vacuum (10-15 in. Hg). **NOTE: If empty plastic reservoirs are used in place of the sample transfer tubes to pass the samples through the cartridges, these reservoirs must be treated like the transfer tubes. After the entire sample has passed through the cartridge, the reservoirs must be rinsed to waste with reagent water.**
- 10.3.4 SAMPLE BOTTLE AND CARTRIDGE ELUTION, Fraction 1 –** Turn off and release the vacuum. Lift the extraction manifold top and insert a rack with collection tubes into the extraction tank to collect the extracts as they are eluted from the cartridges. Rinse the sample bottles with 12 mls of methanol and draw the aliquot through the sample transfer tubes and cartridges. Use a low vacuum such that the solvent exits the cartridge in a dropwise fashion.

SAMPLE BOTTLE AND CARTRIDGE ELUTION, Fraction 2 In a separate collection vial, rinse the sample bottles with 12 mL of 2% ammonium hydroxide in methanol and elute the analytes from the cartridges by pulling the 4 mL of methanol through the sample transfer tubes and the cartridges. Use a low vacuum such that the solvent exits the cartridge in a dropwise fashion. To the final extract, add 50 ul of acetic acid.

NOTE: If empty plastic reservoirs are used in place of the sample transfer tubes to pass the samples through the cartridges, these reservoirs must be treated like the transfer tubes. After the reservoirs have been rinsed in Section 10.3.3, the elution solvent used to rinse the sample bottles must be swirled down the sides of the reservoirs while eluting the cartridge to ensure that any method analytes on the surface of the reservoirs are transferred to the extract.

CLEAN-UP CARTRIDGE ELUTION, Elute the clean-up cartridge with 8 additional mls of methanol and draw the aliquot through the cartridge. Use a low vacuum such that the solvent exits the cartridge in a dropwise fashion.

- 10.3.5** Fractions 1 and 2 are to be combined during the concentration stage (section 10.6)

10.4 Sample Prep and Extraction Protocol for Soils

- 10.4.1 Homogenize and weigh 2 grams of sample (measured to the nearest hundredth of a gram) into a 50 ml polypropylene centrifuge tube. For laboratory control blanks and spikes, 2 grams of clean sand is used.
- 10.4.2 Add 20 μ L of the EIS PDS (Sect. 8.2.2) to each sample and QC.
- 10.4.3 If the sample is an LCS, LCSD, MS, or MSD, add the necessary amount of analyte PDS (Sect. 8.2.3). Cap and invert each sample to mix.
- 10.4.4 To all samples, add 10 mls of methanol, cap, vortex for 25 seconds at 3000RPM and mix for 30 minutes using a shaker table of tumbler at 120RPM.
- 10.4.5 Following mixing, sonicate each sample for 30 minutes and let samples sit overnight (at least 2 hours is required for RUSH samples).
- 10.4.6 Centrifuge each sample at 3500RPM for 10 minutes.
- 10.4.7 Remove supernatant, and reserve for clean-up.

10.5 Extract Clean-up

- 10.5.1 CARTRIDGE CLEAN-UP AND CONDITIONING – Rinse each cartridge with 15 mL of methanol and discard. If the cartridge goes dry during the conditioning phase, the conditioning must be started over. Attach the sample transfer tubes (Sect. 7.9.3), turn on the vacuum, and begin adding sample to the cartridge.
- 10.5.2 Adjust the vacuum so that the approximate flow rate is 1-2 mL/min. Do not allow the cartridge to go dry before all the sample has passed through.
- 10.5.3 SAMPLE BOTTLE AND CARTRIDGE RINSE – After the entire sample has passed through the cartridge, rinse the sample collection vial with two 1-mL aliquots of methanol and draw each aliquot through the cartridges. Draw air or nitrogen through the cartridge for 5 min at high vacuum (10-15 in. Hg).
- 10.5.4 If extracts are not to be immediately evaporated, cover collection tubes and store at ambient temperature till concentration.

10.6 Extract Concentration

- 10.6.1 Concentrate the extract to dryness under a gentle stream of nitrogen in a heated water bath (60-65 °C) to remove all the water/methanol mix. Add the appropriate amount of 80:20% (vol/vol) methanol:water solution and 20 μ L of the ID REC PDS (Sect. 8.2.7) to the collection vial to bring the volume to 1 mL and vortex. Transfer two aliquots with a plastic pipet (Sect. 7.6) into 2 polypropylene autosampler vials.

NOTE: It is recommended that the entire 1-mL aliquot not be transferred to the autosampler vial because the polypropylene autosampler caps do not reseal after injection. Therefore, do not store the extracts in the autosampler vials as evaporation losses can occur occasionally in these autosampler vials. Extracts can be split between 2 X 700 μ L vials (Sect. 7.4).

10.7 Sample Volume Determination

10.7.1 If the level of the sample was marked on the sample bottle, use a graduated cylinder to measure the volume of water required to fill the original sample bottle to the mark made prior to extraction. Determine to the nearest 10 mL.

10.7.2 If using weight to determine volume, weigh the empty bottle to the nearest 10 g and determine the sample weight by subtraction of the empty bottle weight from the original sample weight (Sect. 10.2.2). Assume a sample density of 1.0 g/mL. In either case, the sample volume will be used in the final calculations of the analyte concentration (Sect. 11.2).

10.8 Initial Calibration - Demonstration and documentation of acceptable initial calibration is required before any samples are analyzed. After the initial calibration is successful, a CCV is required at the beginning and end of each period in which analyses are performed, and after every tenth Field Sample.

10.8.1 ESI-MS/MS TUNE

10.8.1.1 Calibrate the mass scale of the MS with the calibration compounds and procedures prescribed by the manufacturer.

10.8.1.2 Optimize the [M-H]⁻ for each method analyte by infusing approximately 0.5-1.0 µg/mL of each analyte (prepared in the initial mobile phase conditions) directly into the MS at the chosen LC mobile phase flow rate (approximately 0.4 mL/min). This tune can be done on a mix of the method analytes. The MS parameters (voltages, temperatures, gas flows, etc.) are varied until optimal analyte responses are determined. The method analytes may have different optima requiring some compromise between the optima.

10.8.1.3 Optimize the product ion for each analyte by infusing approximately 0.5-1.0 µg/mL of each analyte (prepared in the initial mobile phase conditions) directly into the MS at the chosen LC mobile phase flow rate (approximately 0.4 mL/min). This tune can be done on a mix of the method analytes. The MS/MS parameters (collision gas pressure, collision energy, etc.) are varied until optimal analyte responses are determined. Typically, the carboxylic acids have very similar MS/MS conditions and the sulfonic acids have similar MS/MS conditions.

10.8.2 Establish LC operating parameters that optimize resolution and peak shape. Modifying the standard or extract composition to more aqueous content to prevent poor shape is not permitted.

Cautions: LC system components, as well as the mobile phase constituents, contain many of the method analytes in this method. Thus, these PFAS's will build up on the head of the LC column during mobile phase equilibration. To minimize the background PFAS peaks and to keep background levels constant, the time the LC column sits at initial conditions must be kept constant and as short as possible (while ensuring reproducible retention times). In addition, prior to daily use, flush the column with 100% methanol for at least 20 min before initiating a sequence. It may be necessary on some systems to flush other LC components such as wash syringes, sample needles or any other system components before daily use.

10.8.3 Inject a mid-level CAL standard under LC/MS conditions to obtain the retention times of each method analyte. If analyzing for PFTA, ensure that the LC

conditions are adequate to prevent co-elution of PFTA and the mobile phase interferants. These interferants have the same precursor and product ions as PFTA, and under faster LC conditions may co-elute with PFTA. Divide the chromatogram into retention time windows each of which contains one or more chromatographic peaks. During MS/MS analysis, fragment a small number of selected precursor ions ([M-H]⁻) for the analytes in each window and choose the most abundant product ion. For maximum sensitivity, small mass windows of ± 0.5 daltons around the product ion mass were used for quantitation.

- 10.8.4** Inject a mid-level CAL standard under optimized LC/MS/MS conditions to ensure that each method analyte is observed in its MS/MS window and that there are at least 10 scans across the peak for optimum precision.

10.8.4.1 If broad, split or fronting peaks are observed for the first two eluting chromatographic peaks (if only two analytes are being analyzed, both must be evaluated), change the initial mobile phase conditions to higher aqueous content until the peak asymmetry ratio for each peak is 0.8 – 1.5. The peak asymmetry factor is calculated as described in Section 9.9.1 on a mid-level CAL standard. The peak asymmetry factor must meet the above criteria for the first two eluting peaks during the IDL and every time a new calibration curve is generated. Modifying the standard or extract composition to more aqueous content to prevent poor shape is not permitted.

NOTE: PFHxS, PFOS, NMeFOSAA, and NEtFOSAA have multiple chromatographic peaks using the LC conditions in Table 5 due to chromatographic resolution of the linear and branched isomers of these compounds. Most PFAS's are produced by two different processes. One process gives rise to linear PFAS's only while the other process produces both linear and branched isomers. Thus, both branched and linear PFAS's can potentially be found in the environment. For the aforementioned compounds that give rise to more than one peak, all the chromatographic peaks observed in the standard must be integrated and the areas totaled. Chromatographic peaks in a sample must be integrated in the same way as the CAL standard.

- 10.8.5** Prepare a set of CAL standards as described in Section 8.2.5. The lowest concentration CAL standard must be at or below the RL (2 ng/L), which may depend on system sensitivity.
- 10.8.6** The LC/MS/MS system is calibrated using the IS technique. Use the LC/MS/MS data system software to generate a linear regression or quadratic calibration curve for each of the analytes. This curve **must always** be forced through zero and may be concentration weighted, if necessary. Forcing zero allows for a better estimate of the background levels of method analytes. A minimum of 5 levels are required for a linear calibration model and a minimum of 6 levels are required for a quadratic calibration model.
- 10.8.7 CALIBRATION ACCEPTANCE CRITERIA** – A linear fit is acceptable if the coefficient of determination (r^2) is greater than 0.99. When quantitated using the initial calibration curve, each calibration point, except the lowest point, for each analyte should calculate to be within 70-130% of its true value. The lowest CAL point should calculate to be within 50-150% of its true value. If these criteria cannot be met, the analyst will have difficulty meeting ongoing QC criteria. It is

recommended that corrective action is taken to reanalyze the CAL standards, restrict the range of calibration, or select an alternate method of calibration (forcing the curve through zero is still required).

10.8.7.1 CAUTION: When acquiring MS/MS data, LC operating conditions must be carefully reproduced for each analysis to provide reproducible retention times. If this is not done, the correct ions will not be monitored at the appropriate times. As a precautionary measure, the chromatographic peaks in each window must not elute too close to the edge of the segment time window.

10.9 CONTINUING CALIBRATION CHECK (CCV) – Minimum daily calibration verification is as follows. Verify the initial calibration at the beginning and end of each group of analyses, and after every tenth sample during analyses. In this context, a “sample” is considered to be a Field Sample. MBs, CCVs, LCSs, MSs, FDs FRBs and MSDs are not counted as samples. The beginning CCV of each analysis batch must be at or below the RL in order to verify instrument sensitivity prior to any analyses. If standards have been prepared such that all low CAL points are not in the same CAL solution, it may be necessary to analyze two CAL standards to meet this requirement. Alternatively, the analyte concentrations in the analyte PDS may be customized to meet these criteria. Subsequent CCVs should alternate between a medium and Low concentration CAL standard.

10.9.1 Inject an aliquot of the appropriate concentration CAL standard and analyze with the same conditions used during the initial calibration.

10.9.2 Calculate the concentration of each analyte and EIS in the CCV. The calculated amount for each analyte for medium level CCVs must be within $\pm 30\%$ of the true value with an allowance of 10% of the reported analytes to be greater than 30%, but less than 40%. The calculated amount for each EIS must be within $\pm 50\%$ of the true value. The calculated amount for the lowest calibration point for each analyte must be within $\pm 50\%$. If these conditions do not exist, then all data for the problem analyte must be considered invalid, and remedial action should be taken (Sect. 10.7.4) which may require recalibration. Any Field or QC Samples that have been analyzed since the last acceptable calibration verification should be reanalyzed after adequate calibration has been restored, with the following exception. **If the CCV fails because the calculated concentration is greater than 130% (150% for the low-level CCV) for a particular method analyte, and Field Sample extracts show no detection for that method analyte, non-detects may be reported without re-analysis.**

10.9.3 REMEDIAL ACTION – Failure to meet CCV QC performance criteria may require remedial action. Major maintenance, such as cleaning the electrospray probe, atmospheric pressure ionization source, cleaning the mass analyzer, replacing the LC column, etc., requires recalibration (Sect 10.6) and verification of sensitivity by analyzing a CCV at or below the RL (Sect 10.7).

10.10 EXTRACT ANALYSIS

- 10.10.1** Establish operating conditions equivalent to those summarized in Tables 6-8 of Section 16. Instrument conditions and columns should be optimized prior to the initiation of the IDC.
- 10.10.2** Establish an appropriate retention time window for each analyte. This should be based on measurements of actual retention time variation for each method analyte in CAL standard solutions analyzed on the LC over the course of time. A value of plus or minus three times the standard deviation of the retention time obtained for each method analyte while establishing the initial calibration and completing the IDC can be used to calculate a suggested window size. However, the experience of the analyst should weigh heavily on the determination of the appropriate retention window size.
- 10.10.3** Calibrate the system by either the analysis of a calibration curve (Sect. 10.6) or by confirming the initial calibration is still valid by analyzing a CCV as described in Section 10.7. If establishing an initial calibration, complete the IDC as described in Section 13.2.
- 10.10.4** Begin analyzing Field Samples, including QC samples, at their appropriate frequency by injecting the same size aliquots under the same conditions used to analyze the CAL standards.
- 10.10.5** At the conclusion of data acquisition, use the same software that was used in the calibration procedure to identify peaks of interest in predetermined retention time windows. Use the data system software to examine the ion abundances of the peaks in the chromatogram. Identify an analyte by comparison of its retention time with that of the corresponding method analyte peak in a reference standard.
- 10.10.6** The analyst must not extrapolate beyond the established calibration range. If an analyte peak area exceeds the range of the initial calibration curve, the sample should be re-extracted with a reduced sample volume in order to bring the out of range target analytes into the calibration range. If a smaller sample size would not be representative of the entire sample, the following options are recommended. Re-extract an additional aliquot of sufficient size to insure that it is representative of the entire sample. Spike it with a higher concentration of internal standard. Prior to LC/MS analysis, dilute the sample so that it has a concentration of internal standard equivalent to that present in the calibration standard. Then, analyze the diluted extract.

11. Data Evaluation, Calculations and Reporting

- 11.1** Complete chromatographic resolution is not necessary for accurate and precise measurements of analyte concentrations using MS/MS. In validating this method, concentrations were calculated by measuring the product ions listed in Table 7.
- 11.2** Calculate analyte concentrations using the multipoint calibration established in Section 10.6. Do not use daily calibration verification data to quantitate analytes in samples. Adjust final analyte concentrations to reflect the actual sample volume determined in Section 10.6 where:

$C_{ex} = (\text{Area of target analyte} * \text{Concentration of Labeled analog}) / (\text{area of labeled analog} * \text{CF})$

$C_s = (C_{ex} / \text{sample volume in ml}) * 1000$

C_{cx} = The concentration of the analyte in the extract

CF = calibration factor from calibration.

- 11.3** Prior to reporting the data, the chromatogram should be reviewed for any incorrect peak identification or poor integration.
- 11.4** PFHxS, PFOS, PFOA, NMeFOSAA, and NEtFOSAA have multiple chromatographic peaks using the LC conditions in Table 5 due to the linear and branch isomers of these compounds (Sect. 10.6.4.1). The areas of all the linear and branched isomer peaks observed in the CAL standards for each of these analytes must be summed and the concentrations reported as a total for each of these analytes.
- 11.5** Calculations must utilize all available digits of precision, but final reported concentrations should be rounded to an appropriate number of significant figures (one digit of uncertainty), typically two, and not more than three significant figures.

12. Contingencies for Handling Out-of-Control Data or Unacceptable Data

- 12.1** Section 9.0 outlines sample batch QC acceptance criteria. If non-compliant organic compound results are to be reported, the Organic Section Head and/or the Laboratory Director, and the Operations Manager must approve the reporting of these results. The laboratory Project Manager shall be notified, and may choose to relay the non-compliance to the client, for approval, or other corrective action, such as re-sampling and re-analysis. The analyst, Data Reviewer, or Department Supervisor performing the secondary review initiates the project narrative, and the narrative must clearly document the non-compliance and provide a reason for acceptance of these results.
- 12.2** All results for the organic compounds of interest are reportable without qualification if extraction and analytical holding times are met, preservation requirements (including cooler temperatures) are met, all QC criteria are met, and matrix interference is not suspected during extraction or analysis of the samples. If any of the below QC parameters are not met, all associated samples must be evaluated for re-extraction and/or re-analysis.

13. Method Performance

13.1 Detection Limit Study (DL) / Limit of Detection Study (LOD) / Limit of Quantitation (LOQ)

- 13.1.1** The laboratory follows the procedure to determine the DL, LOD, and/or LOQ as outlined in Alpha SOP ID 1732. These studies performed by the laboratory are maintained on file for review.

13.2 Demonstration of Capability Studies

- 13.2.1** The IDC must be successfully performed prior to analyzing any Field Samples. Prior to conducting the IDC, the analyst must first generate an acceptable Initial Calibration following the procedure outlined in Section 10.6.
- 13.2.2** INITIAL DEMONSTRATION OF LOW SYSTEM BACKGROUND – Any time a new lot of SPE cartridges, solvents, centrifuge tubes, disposable pipets, and autosampler vials are used, it must be demonstrated that an MB is reasonably free of contamination and that the criteria in Section 9.2.1 are met. If an automated extraction system is used, an MB should be extracted on each port to ensure that all the valves and tubing are free from potential PFAS contamination.
- 13.2.3** INITIAL DEMONSTRATION OF PRECISION (IDP) – Prepare, extract, and analyze four to seven replicate LCSs fortified near the midrange of the initial calibration curve according to the procedure described in Section 10. Sample preservatives as described in Section 6.2.1 must be added to these samples. The relative standard deviation (RSD) of the results of the replicate analyses must be less than 20%.
- 13.2.4** INITIAL DEMONSTRATION OF ACCURACY (IDA) – Using the same set of replicate data generated for Section 13.2.3, calculate average recovery. The average recovery of the replicate values must be within $\pm 30\%$ of the true value.
- 13.2.5** INITIAL DEMONSTRATION OF PEAK ASYMMETRY FACTOR – Peak asymmetry factors must be calculated using the equation in Section 9.10.1 for the first two eluting peaks (if only two analytes are being analyzed, both must be evaluated) in a mid-level CAL standard. The peak asymmetry factors must fall in the range of 0.8 to 1.5. See guidance in Section 10.6.4.1 if the calculated peak asymmetry factors do not meet the criteria.
- 13.2.6** Refer to Alpha SOP ID 1739 for further information regarding IDC/DOC Generation.
- 13.2.7** The analyst must make a continuing, annual, demonstration of the ability to generate acceptable accuracy and precision with this method.

14. Pollution Prevention and Waste Management

- 14.1** Refer to Alpha's Chemical Hygiene Plan and Hazardous Waste Management and Disposal SOP for further pollution prevention and waste management information.
- 14.2** This method utilizes SPE to extract analytes from water. It requires the use of very small volumes of organic solvent and very small quantities of pure analytes, thereby minimizing the potential hazards to both the analyst and the environment as compared to the use of large volumes of organic solvents in conventional liquid-liquid extractions.
- 14.3** The analytical procedures described in this method generate relatively small amounts of waste since only small amounts of reagents and solvents are used. The matrices of concern are finished drinking water or source water. However, laboratory waste management practices must be conducted consistent with all applicable rules and regulations, and that laboratories protect the air, water, and land by minimizing and controlling all releases from fume hoods and bench operations. Also, compliance is required with any sewage discharge permits and regulations, particularly the hazardous waste identification rules and land disposal restrictions.

15. Referenced Documents

Chemical Hygiene Plan – ID 2124

SOP ID 1732 Detection Limit (DL), Limit of Detection (LOD) & Limit of Quantitation (LOQ) SOP

SOP ID 1739 Demonstration of Capability (DOC) Generation SOP

SOP ID 1728 Hazardous Waste Management and Disposal SOP

16. Attachments

Table 7: LC Method Conditions

Time (min)	2 mM Ammonium Acetate (5:95 MeOH/H ₂ O)	100% Methanol
Initial	100.0	0.0
1.0	100.0	0.0
2.2	85.0	15.0
11	20.0	80.0
11.4	0.0	100.0
12.4	100.0	00.0
15.5	100.0	0.0
Waters Aquity UPLC @ BEHC ₁₈ 2.1 x 50 mm packed with 1.7 µm BEH C ₁₈ stationary phase Flow rate of 0.4 mL/min 2-5 µL injection		

Table 8: ESI-MS Method Conditions

ESI Conditions	
Polarity	Negative ion
Capillary needle voltage	.5 kV
Cone Gas Flow	25 L/hr
Nitrogen desolvation gas	1000 L/hr
Desolvation gas temp.	500 °C

Table 9: Method Analyte Source, Retention Times (RTs), and EIS References

#	Analyte	Transition	RT	IS	Type
1	M3PBA	216>171	2.65		REC
2	PFBA	213 > 169	2.65	2: M4PFBA	
3	M4PFBA	217 > 172	2.65	1: M3PBA	EIS
4	PFPeA	263 > 219	5.67	4: M5PFPEA	
5	M5PFPEA	268 > 223	5.66	1: M3PBA	EIS
6	PFBS	299 > 80	6.35	6: M3PFBS	
7	M3PFBS	302 > 80	6.35	29:M4PFOS	EIS
8	FtS 4:2	327 > 307	7.47	9: M2-4:2FTS	

#	Analyte	Transition	RT	IS	Type
9	M2-4:2FTS	329 > 81	7.47	29:M4PFOS	EIS
10	PFHxA	303 > 269	7.57	10: M5PFHxA	
11	M5PFHxA	318 > 273	7.57	19:M2PFOA	EIS
12	PFPeS	349 > 80	7.88	18: M3PFHxS	
13	PFHpA	363 > 319	8.80	14: M4PFHpA	
14	M4PFHpA	367 > 322	8.80	19:M2PFOA	EIS
15	L-PFHxS	399 > 80	8.94	18: M3PFHxS	
16	br-PFHxS	399 > 80	8.72	18: M3PFHxS	
17	PFHxS Total	399 > 80	8.94	18: M3PFHxS	
18	M3PFHxS	402 > 80	8.94	29:M4PFOS	EIS
19	MPFOA	415 > 370	9.7		REC
20	PFOA	413 > 369	9.7	23: M8PFOA	
21	br-PFOA	413 > 369	9.48	23: M8PFOA	
22	PFOA Total	413 > 369	9.7	23: M8PFOA	
23	M8PFOA	421 > 376	9.7	19: M2PFOA	EIS
24	FitS 6:2	427 > 407	9.66	25: M2-6:2FTS	
25	M2-6:2FTS	429 > 409	9.66	29:M4PFOS	EIS
26	PFHpS	449 > 80	9.78	33: M8PFOS	
27	PFNA	463 > 419	10.41	33: M8PFOS	
28	M9PFNA	472 > 427	10.41	19: M2PFOA	EIS
29	M4PFOS	501 > 80	10.45		REC
30	PFOS	499 > 80	10.45	33: M8PFOS	
31	br-PFOS	499 > 80	10.27	33: M8PFOS	
32	PFOS Total	499 > 80	10.45	33: M8PFOS	
33	M8PFOS	507 > 80	10.45	29: M4PFOS	EIS
34	FitS 8:2	527 > 507	10.99	38: M2-8:2FTS	
35	M2-8:2FTS	529 > 509	10.99	29:M4PFOS	EIS
36	M2PFDA	515 > 470	11.00		REC
37	PFDA	513 > 469	11.00	38: M6PFDA	
38	M6PFDA	519 > 474	11.00	36: M2PFDA	EIS
39	PFNS	549 > 80	11.02	33:M8PFOS	
40	NMeFOSAA	570 > 419	11.41	41: D3-NMeFOSAA	
41	d3-NMeFOSAA	573 > 419	11.41	36: M2PFDA	EIS
42	PFOSA	498 > 78	11.48	29: M8FOSA	
43	M8FOSA	506 > 78	11.48	19: M2PFOA	EIS
44	PFUnDA	563 > 519	11.51	41: M7-PFUDA	
45	M7-PFUDA	570 > 525	11.51	36: M2PFDA	EIS
46	PFDS	599 > 80	11.51	33:M8PFOS	
47	NEtFOSAA	584 > 419	11.68	48: d5-NEtFOSAA	

Printouts of this document may be out of date and should be considered uncontrolled. To accomplish work, the published version of the document should be viewed online.

#	Analyte	Transition	RT	IS	Type
48	d5-NEtFOSAA	589 > 419	11.68	36: M2PFDA	EIS
49	PFDaA	613 > 569	11.96	50: MPFDOA	
50	MPFDOA	615 > 570	11.96	36: M2PFDA	EIS
51	PFTriA	663 > 619	12.34	50: MPFDOA	
52	PFTeA	713 > 669	12.6	53: M2PFTEDA	
53	M2PFTEDA	715 > 670	12.6	36: M2PFDA	EIS
54	M3HFPO-DA	329>285	7.97	19: M2PFOA	EIS
55	HFPO-DA	332>287	7.97	54: M3HFPO-DA	
56	ADONA	377>251	8.00	23: M8PFOA	
57	PFHxDA	813>769	13.20	59: M2PFHxDA	
58	PFOA	913>869	13.50	59: M2PFHxDA	
59	M2PFHxDA	815>770	13.20	36:M2PFDA	EIS
60	NEtFOSA	526>169	11.00	61: NMeFOSA	
61	NMeFOSA	512>169	10.50	63: d3-NMeFOSA	
62	d3-NMeFOSA	515>169	10.50	29: M4PFOS	EIS
63	d5-NEtFOSA	531>169	11.00	29: M4PFOS	EIS
64	NMeFOSE	556>122	11.25	66: d7-NMeFOSE	
65	NEtFOSE	570>136	10.75	67: d9-NEtFOSE	
66	d7-NMeFOSE	563>126	11.25	29: M4PFOS	EIS
67	d9-NEtFOSE	579>142	10.75	29: M4PFOS	EIS
68	FlS 10:2	627>607	11.50	25: M2-6:2FTS	
69	PFDoS	699>99	12.50	33: M8PFOS	

APPENDIX D

COMMUNITY AIR MONITORING PLAN

COMMUNITY AIR MONITORING PLAN

The basis for the Community Air Monitoring Plan (CAMP) is the Generic Community Air Monitoring Plan prepared by the New York State Department of Health (NYSDOH) and included as Appendix 1A in NYSDEC DER-10. Real-time air monitoring for volatile organic compounds (VOCs) and particulate levels adjacent to the excavation and occupied area(s) if the building is occupied or at the perimeter of the exclusion zone or work area if the building is not occupied will be performed during intrusive soil disturbance activities in contaminated areas. Continuous monitoring will be performed for all ground intrusive activities and during the handling of contaminated media. Ground intrusive activities include, but are not limited to, the excavation, handling, backfilling, and loading of soil and fill material, trenching, sheeting, and lagging.

Exceedances of action levels observed during performance of the CAMP will be reported to the NYSDEC Project Manager and included in a daily report.

VOC Monitoring, Response Levels, and Actions

Occupied Building

If the building is occupied, VOCs will be monitored continuously adjacent to occupied area(s) and adjacent to the excavation during intrusive soil disturbance activities. Prior to the start of work, VOC concentrations will be collected continuously inside of the building for 15 minutes to establish background conditions. The monitoring work will be performed using equipment appropriate to measure the types of contaminants known or suspected to be present. The equipment will be calibrated at least daily for the contaminant(s) of concern or for an appropriate surrogate. The equipment will be capable of calculating 15-minute running average concentrations, which will be compared to the levels specified below.

- If the concentration of total organic vapors at any CAMP station exceeds 5 parts per million (ppm) above background for the 15-minute average (at any CAMP station), work activities will be temporarily halted and corrective actions to abate emissions will be taken until total organic vapor levels are below 5 ppm over background. Corrective actions to abate emissions include, but are not limited to, ventilating the work area with fans, use of suppressing agents (i.e. odor suppressant foams, water spray, etc), covering the excavation with polyethylene sheeting or tarps, and/or temporarily vacating the work area until organic vapor concentrations return to background levels.

Fifteen-minute readings will be recorded and be available for NYSDEC personnel to review. Instantaneous readings, if any, will also be recorded and used for decision-making purposes.

Unoccupied Building

If the building is not occupied, VOCs will be monitored at the upwind and downwind site perimeter and between the ground intrusive work area on a continuous basis during intrusive soil

disturbance activities. Upwind concentrations will be used to establish background conditions. The monitoring work will be performed using equipment appropriate to measure the types of contaminants known or suspected to be present. The equipment will be calibrated at least daily for the contaminant(s) of concern or for an appropriate surrogate. The equipment will be capable of calculating 15-minute running average concentrations, which will be compared to the levels specified below.

- If the ambient air concentration of total organic vapors at the downwind perimeter of the work area or exclusion zone exceeds 5 parts per million (ppm) above background for the 15-minute average, work activities will be temporarily halted and monitoring continued. If the total organic vapor level readily decreases (per instantaneous readings) below 5 ppm over background, work activities will resume with continued monitoring.
- If total organic vapor levels at the downwind perimeter persist at levels in excess of 5 ppm over background but less than 25 ppm, work activities will be halted, the source of vapors identified, corrective actions taken to abate emissions, and monitoring continued. After these steps, work activities will resume provided that the total organic vapor level 200 feet downwind of the exclusion zone or half the distance to the nearest potential receptor or residential/commercial structure, whichever is less - but in no case less than 20 feet, is below 5 ppm over background for the 15-minute average.
- If the organic vapor level is above 25 ppm at the site perimeter, activities will be shut down.

Fifteen-minute readings will be recorded and be available for NYSDEC personnel to review. Instantaneous readings, if any, will also be recorded and used for decision-making purposes.

Particulate Monitoring, Response Levels, and Actions

Occupied Building

If the building is occupied, particulate concentrations will be monitored continuously adjacent to occupied area(s) and adjacent to the excavation during intrusive soil disturbance activities. Prior to the start of work, particulate concentrations will be collected continuously inside of the building for 15 minutes to establish background conditions. The particulate monitoring will be performed using real-time monitoring equipment capable of measuring particulate matter less than 10 micrometers in size (PM₁₀) and capable of integrating over a period of 15 minutes (or less) for comparison to the airborne particulate action level. The equipment will be equipped with an audible alarm to indicate exceedance of the action level. In addition, fugitive dust migration will be visually assessed during all work activities.

- If the PM₁₀ particulate levels are 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) greater than background for the 15-minute period (at any CAMP station) or if airborne dust is observed

leaving the work area, then dust suppression techniques will be employed and work will be stopped and a re-evaluation of activities initiated. Work will resume provided that dust suppression measures and other controls are successful in reducing the downwind PM10 particulate concentration to within 100 $\mu\text{g}/\text{m}^3$ of background concentrations and in preventing visible dust migration.

All readings will be recorded, downloaded at the end of the day and be available for the NYSDEC and NYSDOH Project Managers to review.

Unoccupied Building

If the building is not occupied, particulate concentrations will be monitored continuously at the upwind and downwind site perimeters and between the ground intrusive works at temporary particulate monitoring stations. The particulate monitoring will be performed using real-time monitoring equipment capable of measuring particulate matter less than 10 micrometers in size (PM10) and capable of integrating over a period of 15 minutes (or less) for comparison to the airborne particulate action level. The equipment will be equipped with an audible alarm to indicate exceedance of the action level. In addition, fugitive dust migration will be visually assessed during all work activities.

- If the downwind PM10 particulate level is 100 micrograms per cubic meter ($\mu\text{g}/\text{m}^3$) greater than background (upwind perimeter) for the 15-minute period or if airborne dust is observed leaving the work area, then dust suppression techniques will be employed. Work will continue with dust suppression techniques provided that downwind PM10 particulate levels do not exceed 150 $\mu\text{g}/\text{m}^3$ above the upwind concentration and provided that no visible dust is migrating from the work area.
- If, after implementation of dust suppression techniques, downwind PM10 particulate levels are greater than 150 $\mu\text{g}/\text{m}^3$ above the upwind level, work will be stopped and a re-evaluation of activities initiated. Work will resume provided that dust suppression measures and other controls are successful in reducing the downwind PM10 particulate concentration to within 150 $\mu\text{g}/\text{m}^3$ of the upwind concentration and in preventing visible dust migration.

Exceedances observed in the CAMP will be reported to the NYSDEC and NYSDOH Project Managers and included in the daily report.